Leica Geosystems **Licence Activation Guide**

Licence Activation for Zeno Field/Zeno Connect on Zeno 5

Licencing Zeno Field/Zeno Connect

For using Zeno Field and Zeno Connect, a valid licence is required. In the Licence Manager, you can register licences for:

- Zeno Field: Zeno Field licence, Zeno GIS key, CCP keys
- Zeno Connect: Zeno Connect licence
- GG02 plus: GLONASS option

All Zeno devices are shipped with pre-installed licence keys. Additionally, you receive the keys in printed form. In some cases it is necessary to register new licence keys, for example if the key for a CCP licence has expired.

How to register a licence for Zeno Field

Step	Description				
1.	Start Licence Manager on your Zeno 5 by taping Windows button\Zeno Tools\Licence Manager.				
2.	 Enter you licence keys in the according fields in the Zeno Field tab. Or tap Browse and browse for you licence file. This will fill in all included keys automatically. These are: Zeno Field Key: Licence for Zeno Field CCP Key: Maintenance key for Zeno Field 				

How to register a licence for Zeno Connect

Step	Description
1.	Start Licence Manager on your Zeno 5 by taping Windows button\Zeno Tools\Licence Manager.
2.	 Enter you licence keys in the according fields in the Zeno Connect tab. Or tap Browse and browse for you licence file. This will fill in all included keys automatically. These are: Zeno Connect Key: Licence for Zeno Connect

GLONASS Option for

In the Licence Manager you also can add a GLONASS option for GG02 plus.

GG	02	olus	Sma	rtAr	itenna
	-	p			

Step	Description
1.	Start Licence Manager on your Zeno 5 by taping Windows button\Zeno Tools\Licence Manager.
2.	Enter you licence keys in the according fields in the GG02 plus tab and enter your GLONASS licence in the according field. Or tap Browse and browse for you licence file. This will fill in all included keys automatically.