


16feb07 dome moving downhill when no failure

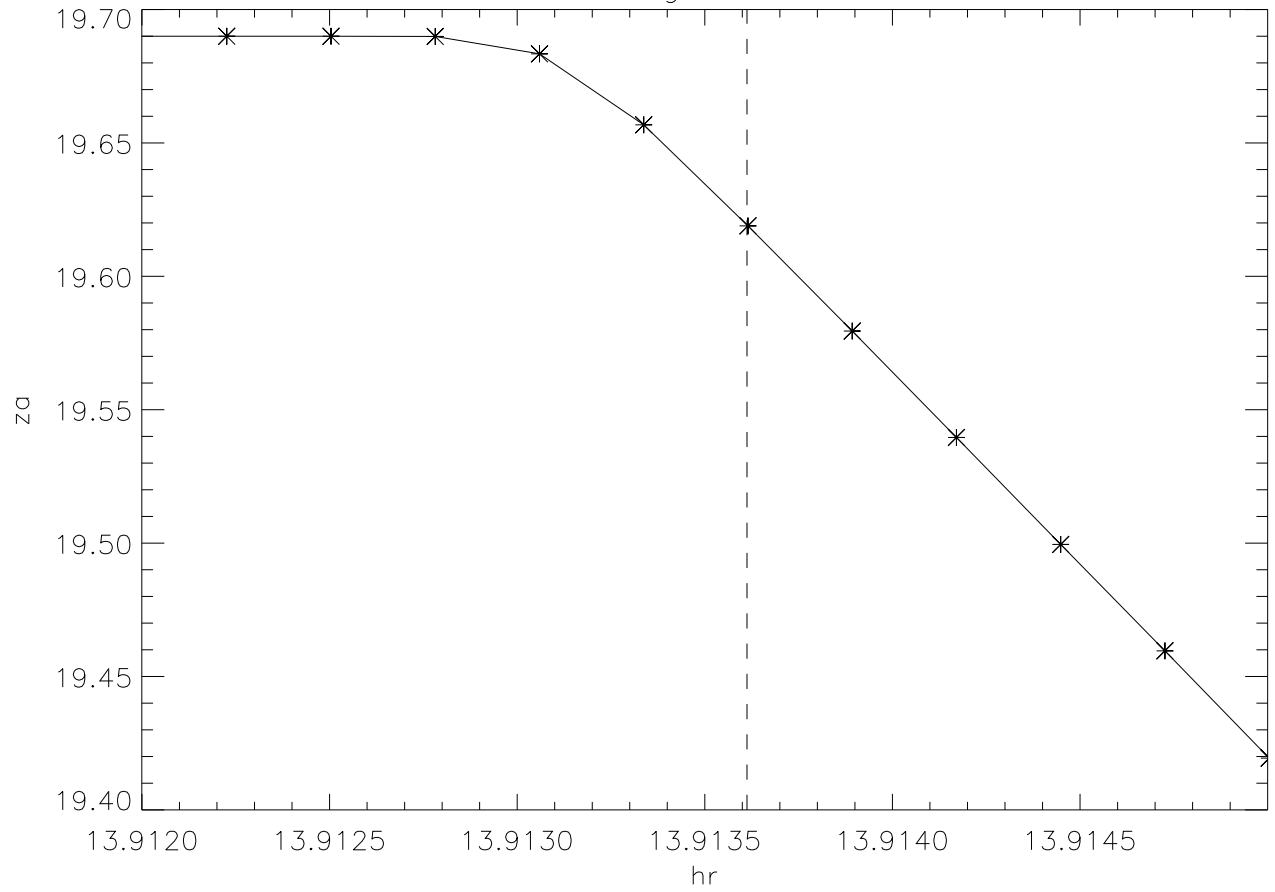

dome torques moving downhill when no failure

