

TABLE OF CONTENTS

CHAPTER 1. SYSTEM DESCRIPTION

1.1 Introduction	1-1
1.2 Product Description.....	1-1
1.3 Features.....	1-1
1.4 Theory of Operation	1-2
1.4.1 PSR4/5 Power Supply Module	1-2
1.4.2 BDS4 Servo Amplifier Module.....	1-4
1.4.3 Brushless DC Motor	1-5
1.4.4 Power Up/Down Sequencing	1-5
1.4.5 With Soft-Start Circuit (Standard).....	1-5
1.4.6 Without Soft-Start Circuit or Dynamic Bus Discharge (Optional)	1-6
1.5 Typical System Diagram	1-6

CHAPTER 2. INSTALLATION

2.1 Introduction	2-1
2.2 Safety information.....	2-1
2.3 Conventions	2-1
2.3.1 BDS4A vs. BDS4V & PSR4/5A vs. PSR4/5V	2-2
2.3.2 Model Numbering Scheme	2-2
2.3.3 Abbreviations	2-2
2.4 Unpacking And Inspection	2-2
2.5 Installation Requirements.....	2-2
2.5.1 Environmental Considerations.....	2-3
2.5.2 Enclosures.....	2-3
2.6 Assembly.....	2-3
2.6.1 Mounting	2-3
2.6.2 Mounting the External Regeneration Resistor(s)	2-4
2.7 Electrical Connections.....	2-4
2.7.1 Recommended Torque for Electrical Connections.....	2-5
2.7.2 Grounding Scheme.....	2-5
2.7.3 Connecting the AC Input Voltages	2-6
2.7.4 Connecting the PSR4/5 Fault Output Contact (Connector C1)	2-6
2.7.5 Connecting the Unregulated DC Voltage to the BDS4 (Connector C3).....	2-6
2.7.6 Connecting the Main DC Bus Voltage.....	2-6
2.7.7 Connecting the External Regeneration Resistor(s)	2-6
2.7.8 Connecting the BDS4 Input/Output (Connector C1).....	2-8
2.7.9 Connecting the Motor.....	2-10

2.8 Installation Checklist	2-10
2.8.1 Checking the Motor and Resolver Wiring	2-11
2.8.2 Checking the AC Line Voltages	2-11
2.8.3 Checking the DC Bus Voltages	2-12

CHAPTER 3. OPERATION

3.1 Introduction	3-1
3.2 Initial START-UP	3-1
3.3 Sequence of Operations.....	3-1

CHAPTER 4. MAINTENANCE

4.1 Introduction	4-1
4.2 Preventative Maintenance	4-1
4.2.1 Transient Voltages	4-1
4.2.2 Surge Current	4-1
4.2.3 Electrical Noise.....	4-2
4.2.4 Radio Frequency Energy	4-2
4.3 Periodic Maintenance	4-2
4.3.1 Ventilation.....	4-2
4.3.2 Grounding Integrity	4-2
4.4 Adjustments.....	4-3
4.4.1 Set-Up Adjustments	4-3
4.4.1.1 Balance Adjustment (Within Position Loop)	4-3
4.4.1.2 Balance Adjustment (Automatic or Manually Operated Machines)	4-3
4.4.1.3 Command Scale Adjustment (Within Position Loop)	4-3
4.4.1.4 Command Scale Adjustment (Automatic or Manually Operated Machines).....	4-3
4.4.2 Response and Application Dependent Adjustments	4-3
4.4.2.1 Stability Adjustment.....	4-4
4.4.2.2 Current Limit Adjustment.....	4-4
4.4.3 Design Tolerance Adjustments.....	4-4
4.4.3.1 Resolver Excitation Adjustment	4-4
4.4.3.2 Current Sensor Offset Adjustments	4-4
4.4.3.3 Motor System Resolver Alignment.....	4-4
4.4.3.4 Factory Only Adjustments	4-6

CHAPTER 5. TROUBLESHOOTING

5.1 Introduction.....	5-1
5.2 Field Serviceability	5-1