


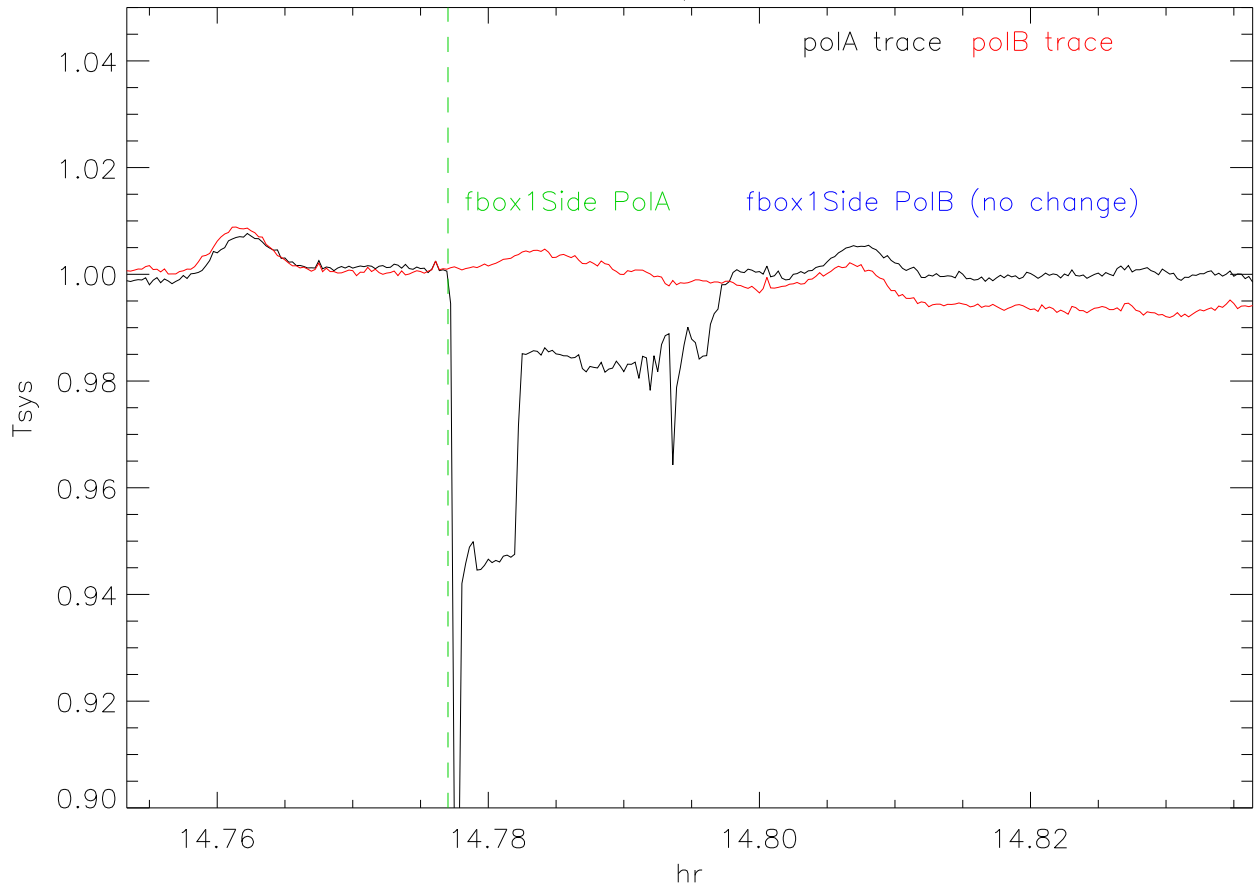
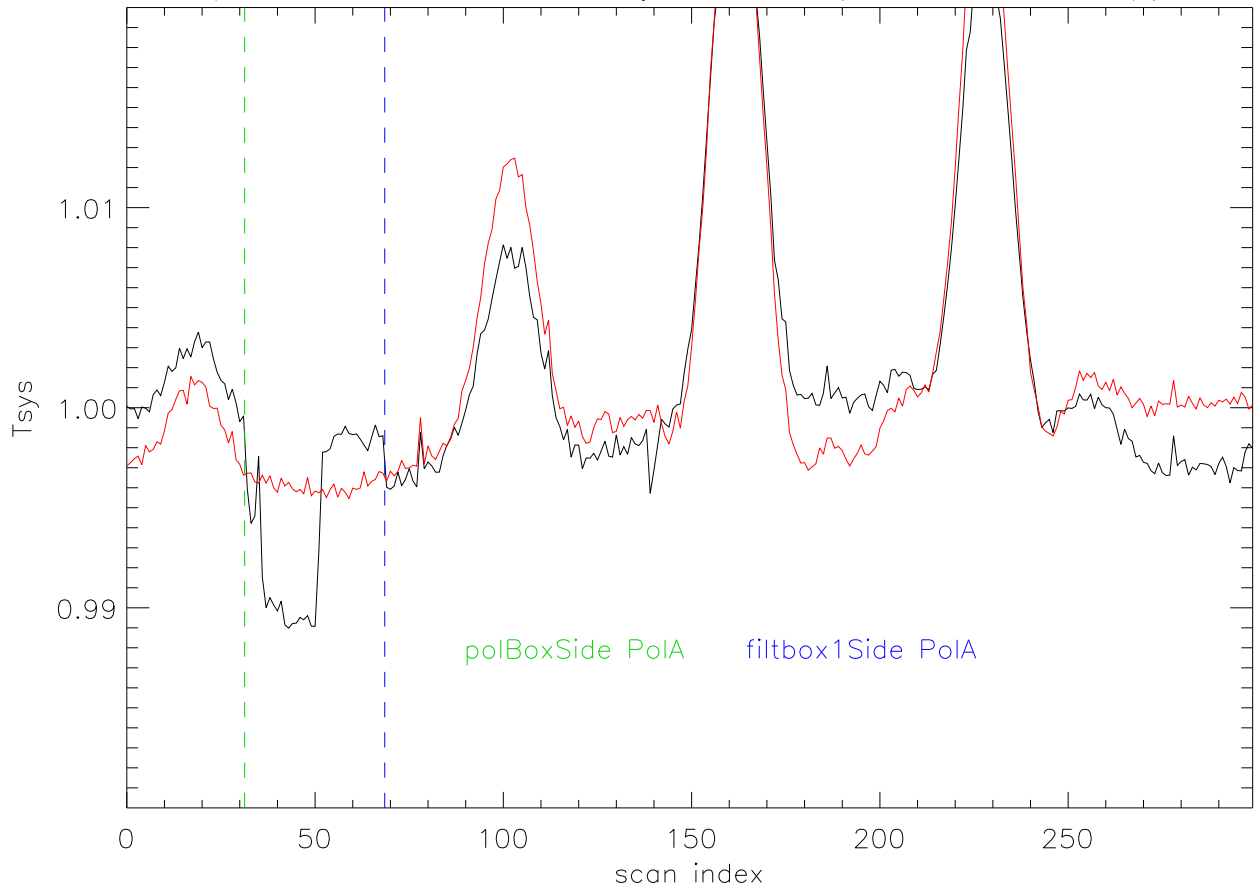


26oct06 lbw. loosen cables 1/2 turn. PolBox to Filter1 box

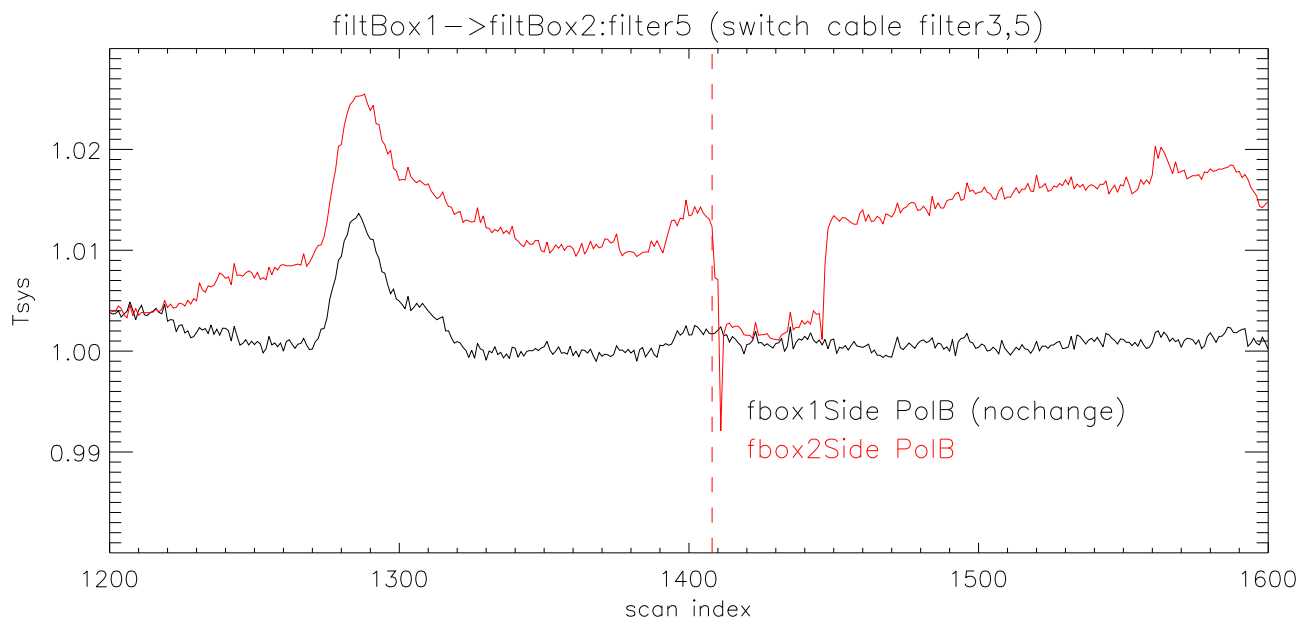

polBox to filterBox1. Only check A (after clean&swap)

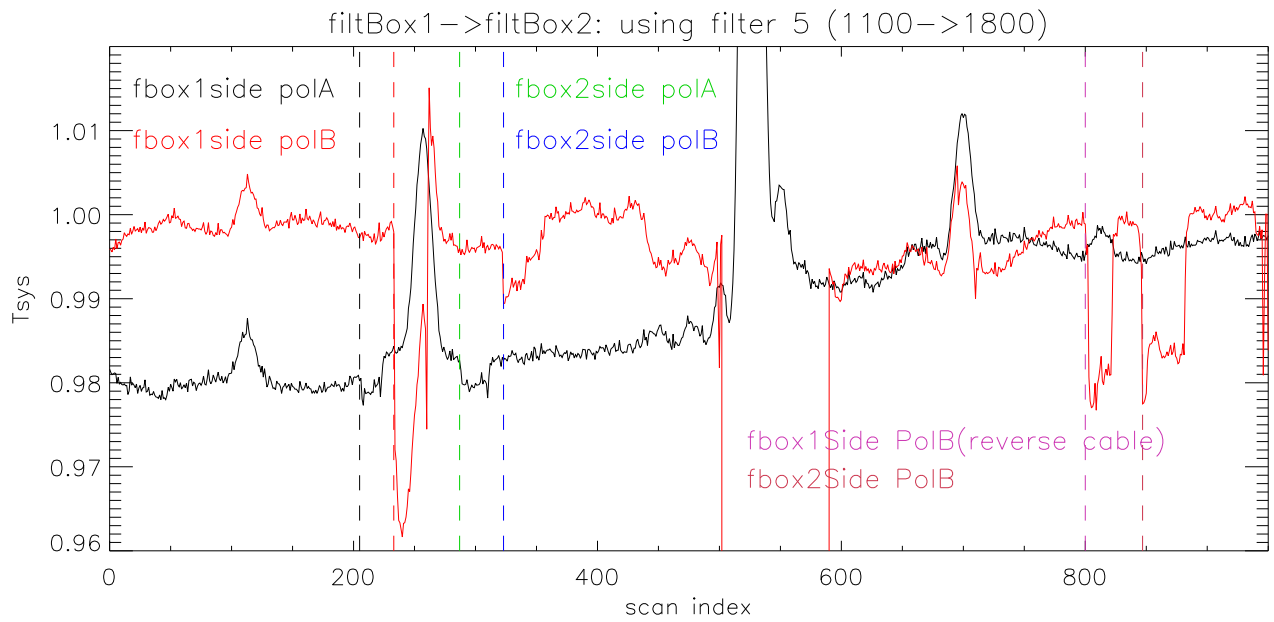

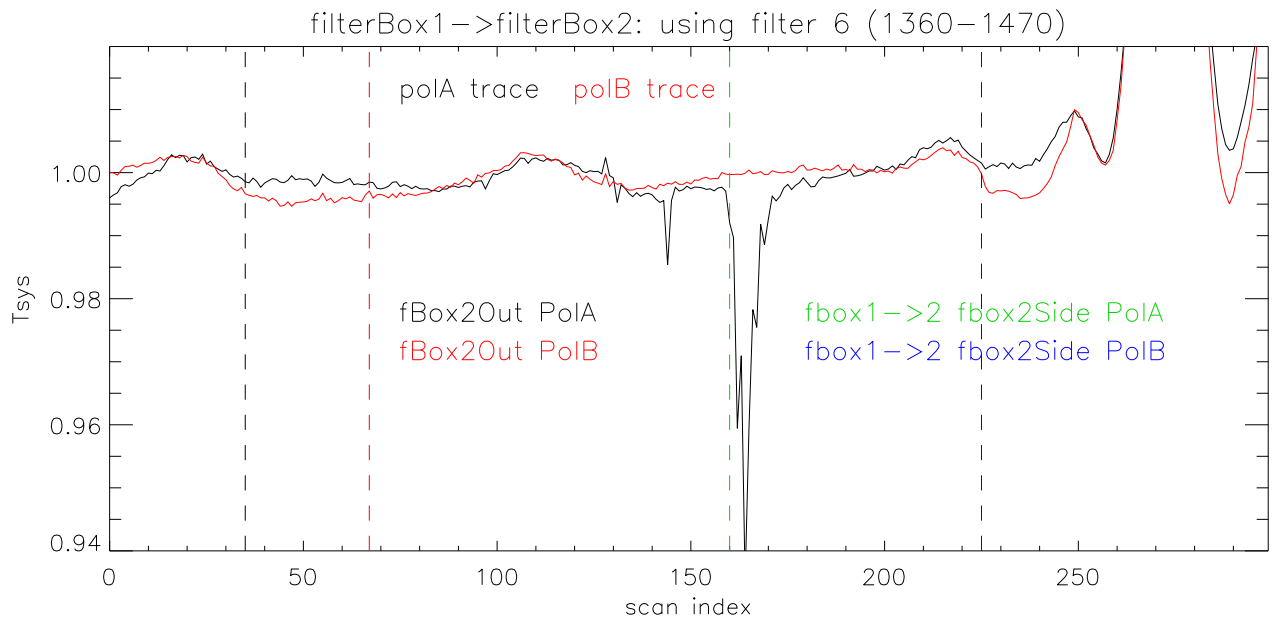

27oct06 tap on 750 Mixer chassis

