




18sep08 alfa recovery file: 0 Beam 3 v=5.0, l=19ma

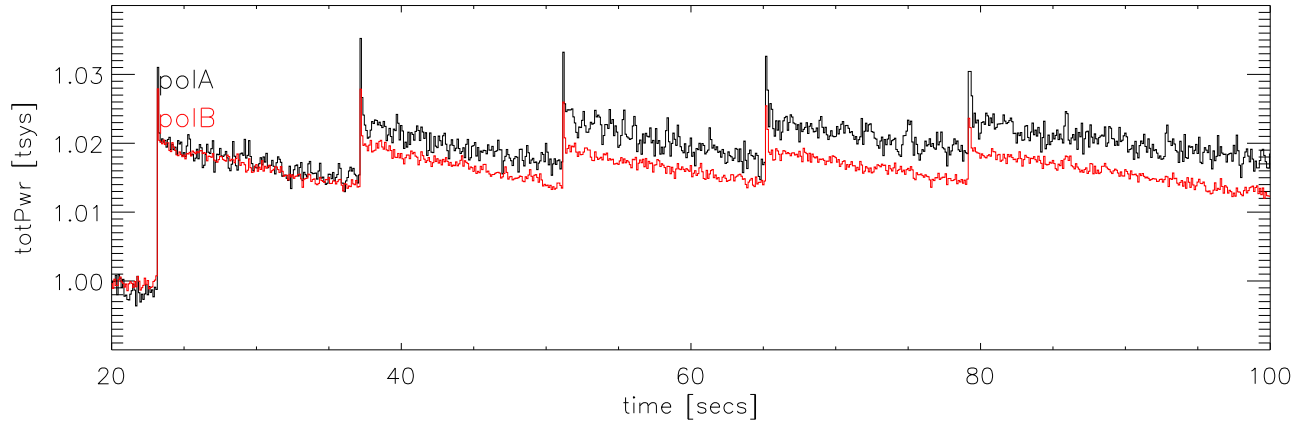


18sep08 alfa recovery file: 100 Beam 3 v=5.0, l=19ma

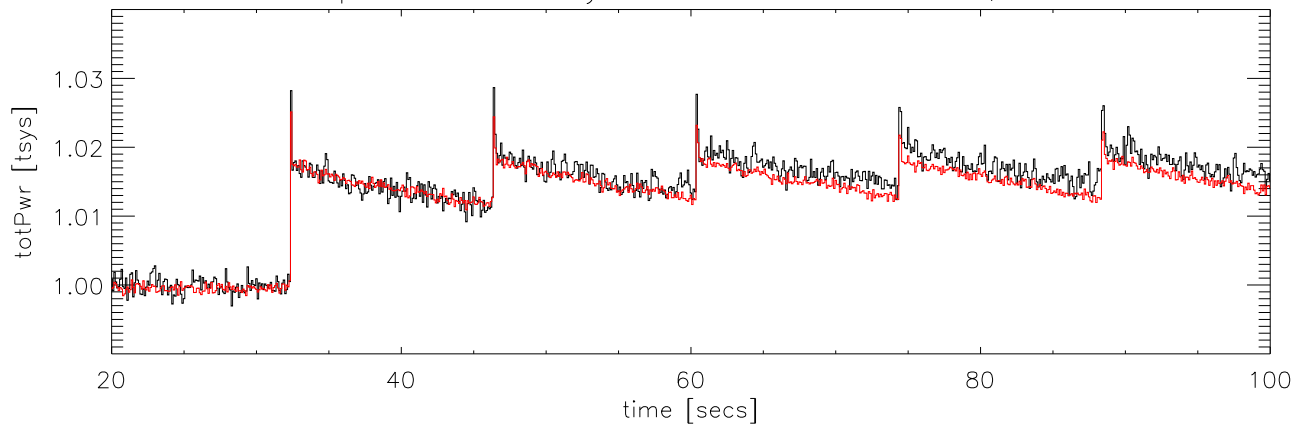


18sep08 alfa recovery file: 200 Beam 3 v=5.58, l=19ma

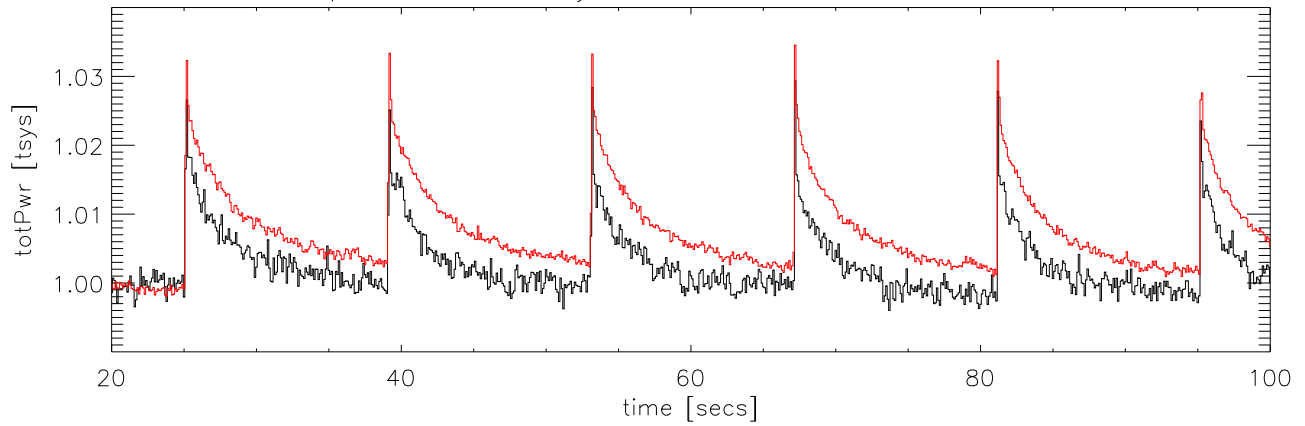


18sep08 alfa recovery file: 300 Beam 3 v=5.92, l=19ma

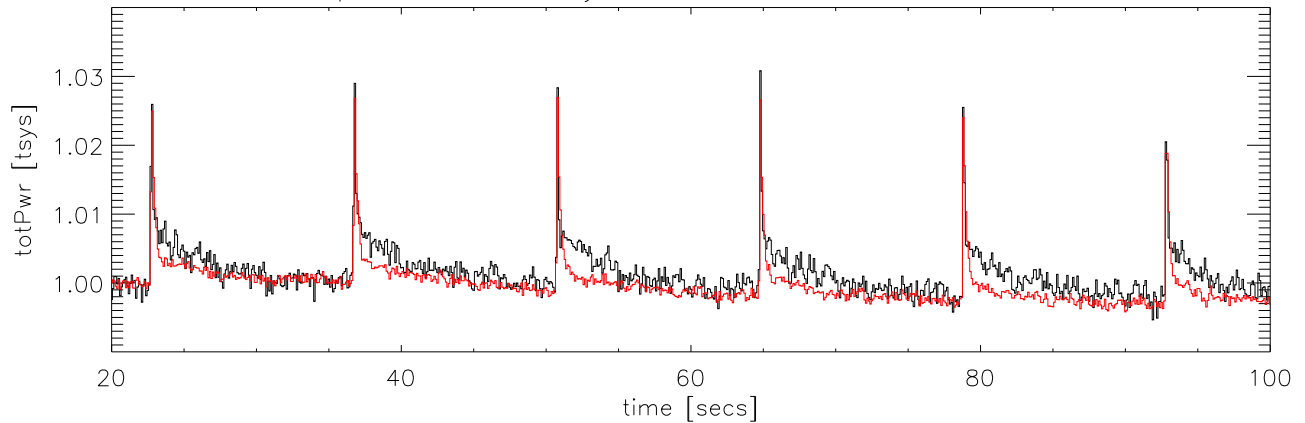


18sep08 alfa recovery file: 400 Beam 3 $v=5.92, l=18ma$

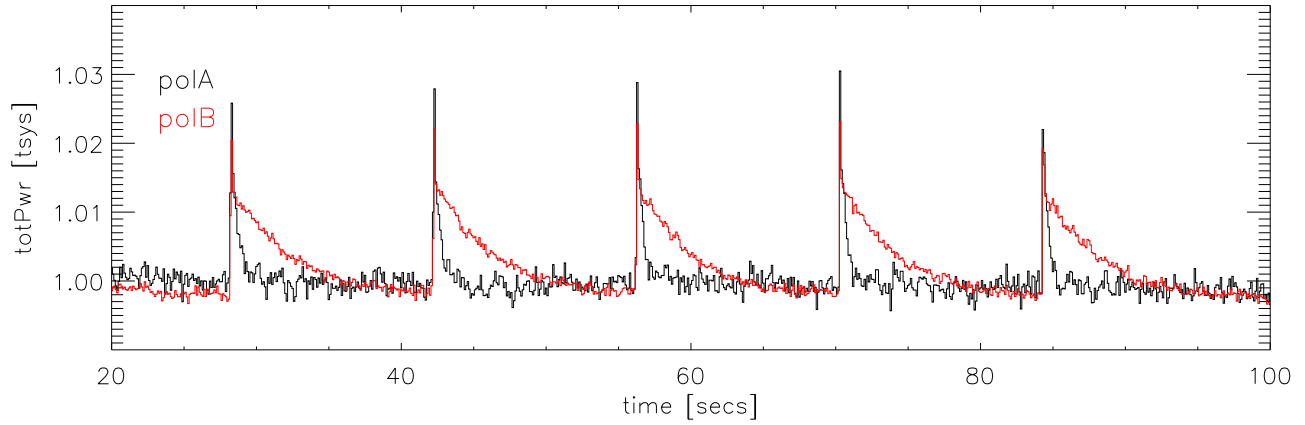


18sep08 alfa recovery file: 500 Beam 3 $v=5.92, l=17ma$

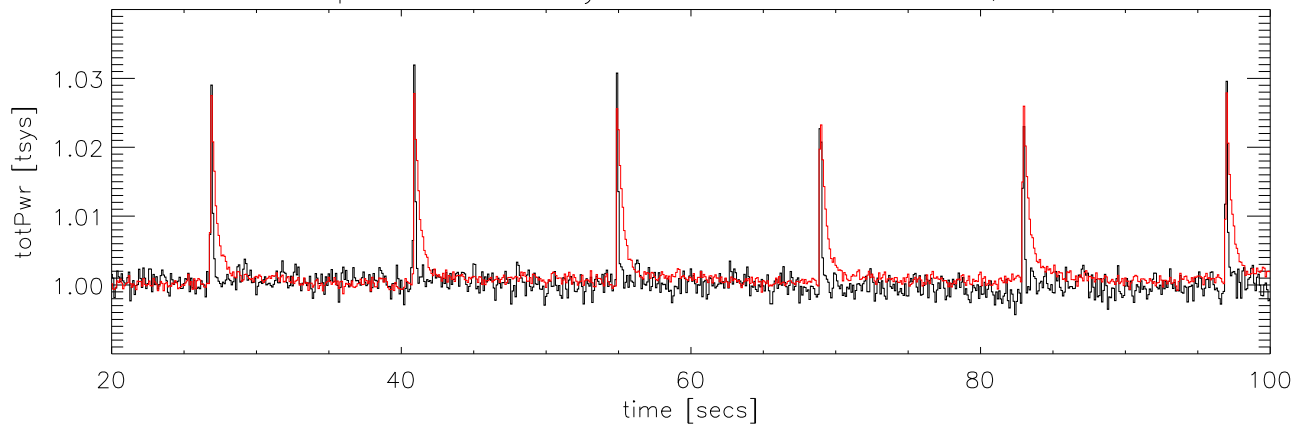


18sep08 alfa recovery file: 600 Beam 3 $v=5.92, l=16.5ma$

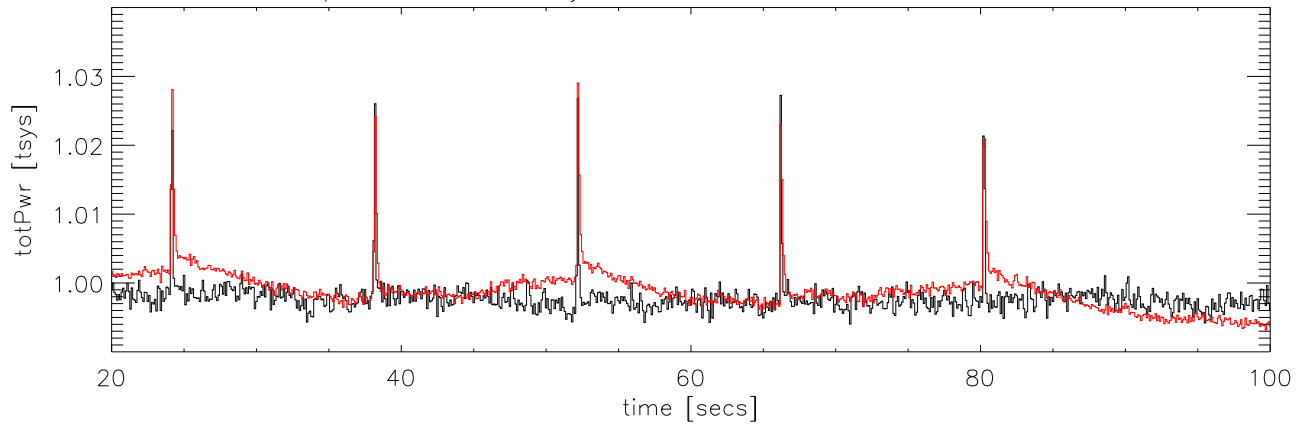


18sep08 alfa recovery file: 700 Beam 3 $v=5.58, l=17ma$

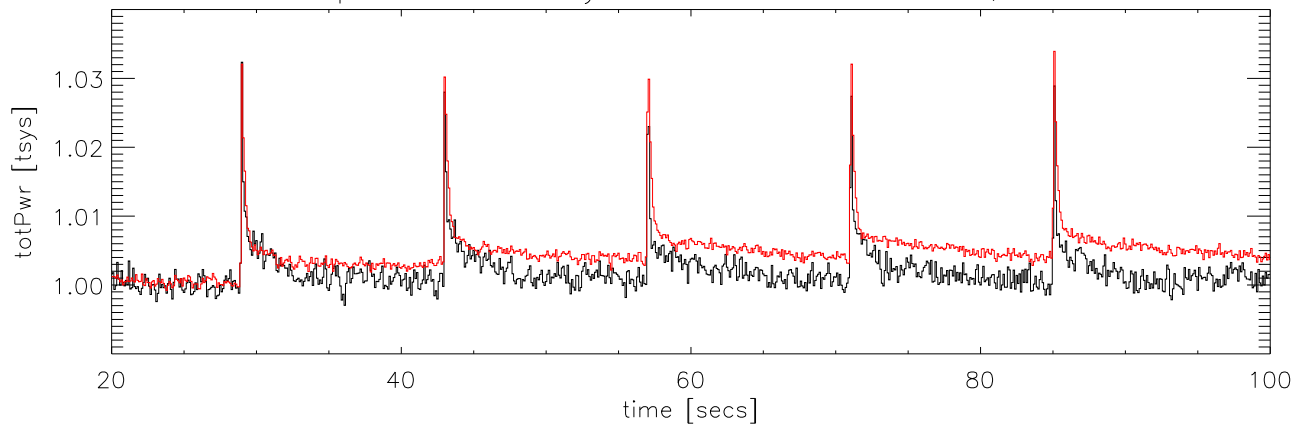


18sep08 alfa recovery file: 800 Beam 3 $v=5.75, l=17ma$

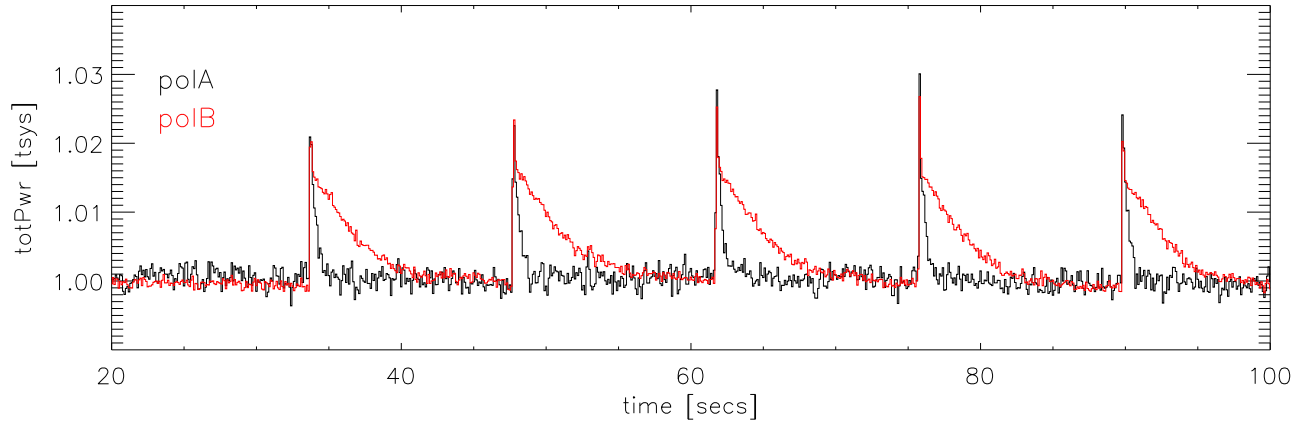

18sep08 alfa recovery file: 900 Beam 3 $v=5.92, l=17ma$

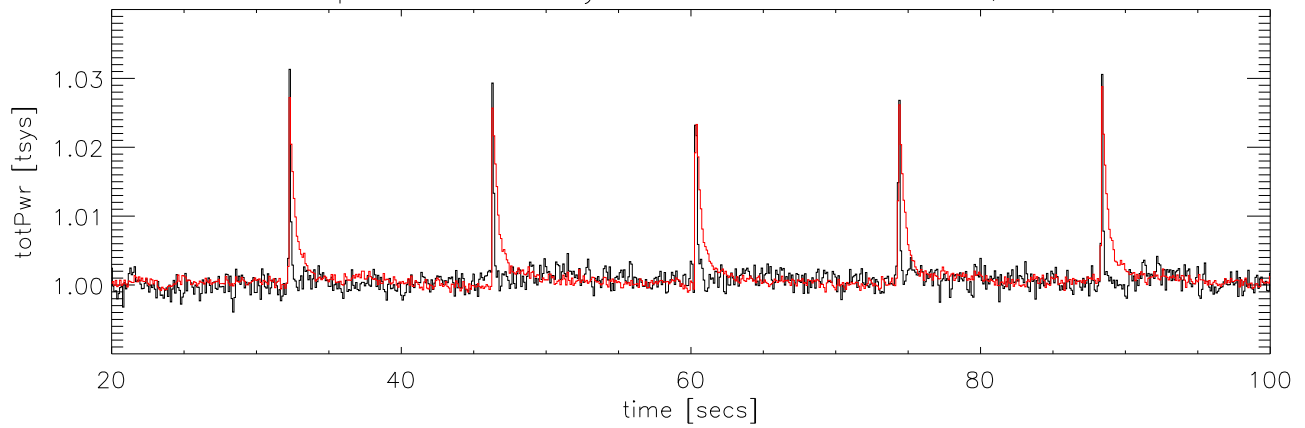

18sep08 alfa recovery file:1000 Beam 3 $v=5.92, l=17ma$

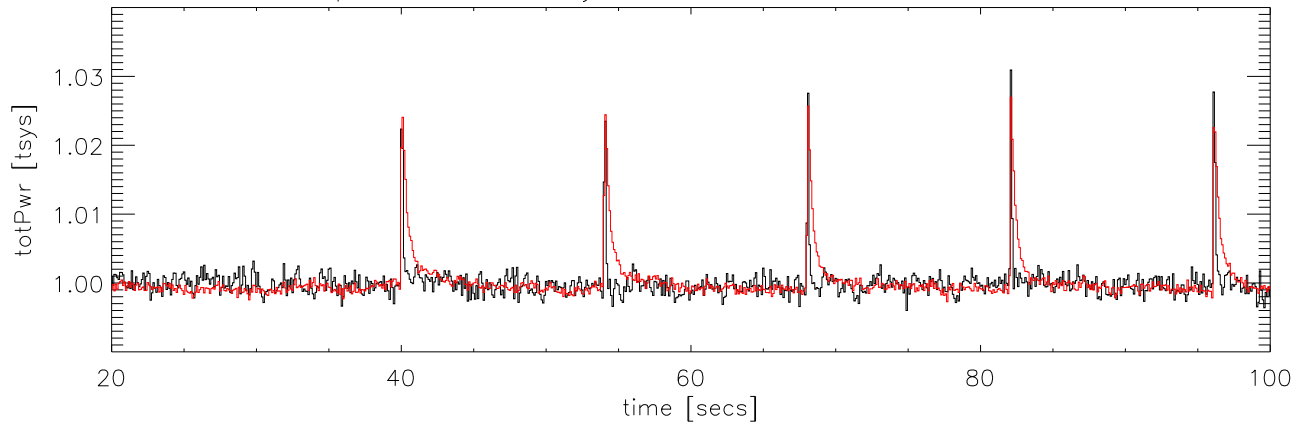

18sep08 alfa recovery file:1100 Beam 3 $v=5.92, l=17ma$ after ampsOff

