

1

Connecting to a Personal Computer




Microsoft ActiveSync (for PCs with Windows XP operating system) or Windows Mobile Device Center (for PCs with Windows Vista or Windows 7/Windows 8 operating system) is the synchronisation software for Windows mobile-based pocket PCs. Microsoft ActiveSync or Windows Mobile Device Center enables a PC and a Windows mobile-based pocket PC to communicate.

Install Leica Viva USB drivers

Step	Description
1.	Start the PC.
2.	Insert the Leica Viva Series USB card.
3.	Run the SetupViva&GR_USB_XX.exe to install the drivers necessary for Leica Viva devices. Depending on the version (32bit or 64bit) of the operating system on your PC, you have to select between the three setup files following: <ul style="list-style-type: none"> • SetupViva&GR_USB_32bit.exe • SetupViva&GR_USB_64bit.exe • SetupViva&GR_USB_64bit_itanium.exe The setup has to be run only once for all Leica Viva devices.
4.	The Welcome to InstallShield Wizard for Leica Viva & GR USB drivers window appears. Ensure that all Leica Viva devices are disconnected from your PC before you continue!
5.	Next> .
6.	The Ready to Install the Program window appears.
7.	Install. The drivers will be installed on your PC. For PCs with Windows Vista or Windows 7/Windows 8 operating system: If not already installed, Windows Mobile Device Center will be installed additionally.
8.	The InstallShield Wizard Completed window appears.
9.	Check I have read the instructions and click Finish to exit the wizard.

Connect USB cable to PC for the first time step-by-step

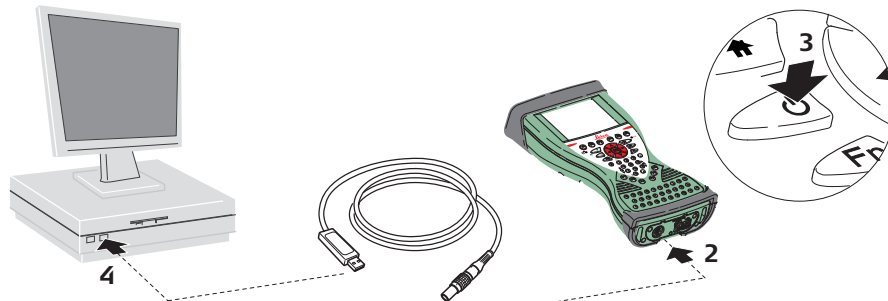






CS_026

Step	Description
1.	Start the PC.
2.	Plug the GEV234 cable into CS field controller. For CS field controllers with DSUB9 connector, the GEV223 cable has to be used.
3.	Turn on the CS field controller.
4.	Plug the GEV234 cable into the USB port of the PC. The Found New Hardware Wizard starts up automatically.
5.	Check Yes, this time only. Next> .

Step	Description
6.	Check Install the software automatically (Recommended). Next> . The software for Remote NDIS based LGS CS Device will be installed on your PC.
7.	Finish.
8.	The Found New Hardware Wizard starts up automatically a second time.
9.	Check Yes, this time only. Next> .
10.	Check Install the software automatically (Recommended). Next> . The software for LGS CS USB Device will be installed on your PC.
11.	Finish.
	For PCs with Windows XP operating system:
12.	Run the ActiveSync installation program if not already installed.
13.	Allow USB connections inside the Connection Settings window of ActiveSync.
	For PCs with Windows Vista or Windows 7/Windows 8 operating system:
14.	Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.

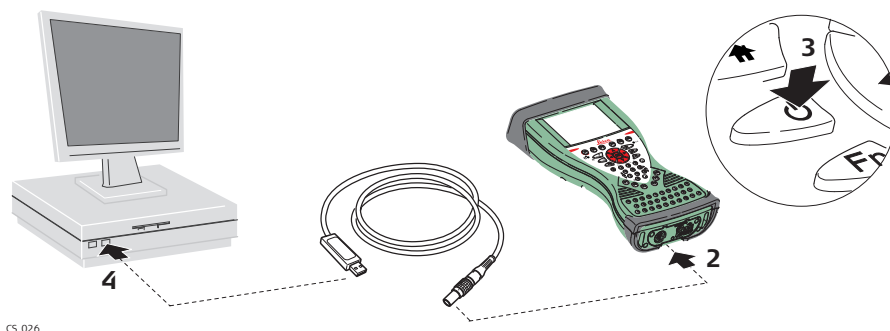Connect to PC via USB cable step-by-step



Step	Description
1.	Start the PC.
2.	Plug the GEV234 cable into CS field controller.  For CS field controllers with DSUB9 connector, the GEV223 cable has to be used.
3.	Turn the CS field controller on.
4.	Plug the GEV234 cable into the USB port of the PC. For PCs with Windows XP operating system:  ActiveSync starts up automatically. If does not start automatically, start ActiveSync. If not already installed, run the ActiveSync installation program.
5.	Allow USB connections inside the Connection Settings window of ActiveSync.
6.	Click Explore in ActiveSync.  The folders on the CS field controller are displayed under Mobile Devices . The folders of the data storage device can be found in StorageCard .
	For PCs with Windows Vista or Windows 7/Windows 8 operating system:  Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.