

Leica TS11 User Manual



Version 4.0
English

- when it has to be **right**

Leica
Geosystems

Introduction

Purchase

Congratulations on the purchase of a Leica TS11.



This manual contains important safety directions as well as instructions for setting up the product and operating it. Refer to "1 Safety Directions" for further information. Read carefully through the User Manual before you switch on the product.

Product Identification

The type and serial number of your product are indicated on the type plate. Always refer to this information when you need to contact your agency or Leica Geosystems authorised service workshop.

Trademarks

- Windows is a registered trademark of Microsoft Corporation in the United States and other countries
 - *Bluetooth*[®] is a registered trademark of Bluetooth SIG, Inc.
 - SD Logo is a trademark of SD-3C, LLC.
- All other trademarks are the property of their respective owners.

Validity of this manual

This manual applies to the TS11 instruments. Differences between the various models are marked and described.

Available documentation

Name	Description/Format		
TS11 Quick Guide	Provides an overview of the product together with technical data and safety directions. Intended as a quick reference guide.	✓	✓
TS11 User Manual	All instructions required in order to operate the product to a basic level are contained in the User Manual. Provides an overview of the product together with technical data and safety directions.	-	✓

Name	Description/Format		
Viva Series Technical Reference Manual	Overall comprehensive guide to the product and application functions. Included are detailed descriptions of special software/hardware settings and software/hardware functions intended for technical specialists.	-	✓

Refer to the following resources for all TS11 documentation/software:

- the Leica USB documentation card
- <https://myworld.leica-geosystems.com>

myWorld@Leica Geosystems (<https://myworld.leica-geosystems.com>) offers a wide range of services, information and training material.

With direct access to myWorld, you are able to access all relevant services whenever it is convenient for you, 24 hours a day, 7 days per week. This increases your efficiency and keeps you and your equipment instantly updated with the latest information from Leica Geosystems.

Service	Description
myProducts	Add all Leica Geosystems products that you and your company own. View detailed information on your products, buy additional options or Customer Care Packages (CCPs), update your products with the latest software and keep up-to-date with the latest documentation.
myService	View the service history of your products in Leica Geosystems Service Centres and detailed information on the services performed on your products. For your products that are currently in Leica Geosystems Service Centres view the current service status and the expected end date of service.
mySupport	Create new support requests for your products that will be answered by your local Leica Geosystems Support Team. View the complete history of your Support and view detailed information on each request in case you want to refer to previous support requests.
myTraining	Enhance your product knowledge with the Leica Geosystems Campus - Information, Knowledge, Training. Study the latest online training material or download training material on your products. Keep up-to-date with the latest News on your products and register for Seminars or Courses in your country.
myTrusted Services	Offers increased productivity while at the same time providing maximum security. <ul style="list-style-type: none"> • myExchange With myExchange you can exchange any files/objects from your computer to any of your Leica Exchange Contacts. • mySecurity If your instrument is ever stolen, a locking mechanism is available to ensure that the instrument is disabled and can no longer be used.

Table of Contents

In this manual	Chapter	Page
1	Safety Directions	6
1.1	General Introduction	6
1.2	Definition of Use	7
1.3	Limits of Use	7
1.4	Responsibilities	7
1.5	Hazards of Use	8
1.6	Laser Classification	10
1.6.1	General	10
1.6.2	Distancer, Measurements with Reflectors	10
1.6.3	Distancer, Measurements without Reflectors	11
1.6.4	Red Laser Pointer	13
1.6.5	Electronic Guide Light EGL	15
1.6.6	Laser Plummet	16
1.7	Electromagnetic Compatibility EMC	17
1.8	FCC Statement, Applicable in U.S.	18
2	Description of the System	20
2.1	System Components	20
2.2	System Concept	23
2.2.1	Software Concept	23
2.2.2	Power Concept	24
2.2.3	Data Storage Concept	24
2.3	Container Contents	25
2.4	Instrument Components	29
3	User Interface	31
3.1	Keyboard	31
3.2	Operating Principles	33
4	Operation	34
4.1	Setting Up the TPS Instrument	34
4.2	Setting Up SmartStation	35
4.3	Setting Up SmartPole	36
4.4	Setting up for Remote Control (with the RadioHandle)	37
4.5	Setting up for Remote Control (with the TCPS29/30)	38
4.6	Fixing the Field Controller to a Holder and Pole	39
4.7	Connecting to a Personal Computer	40
4.8	Power Functions	43
4.9	Batteries	44
4.9.1	Operating Principles	44
4.9.2	Battery for the TS Instrument	44
4.9.3	Battery for SmartAntenna	45
4.10	Working with the Memory Device	49
4.11	Working with the RTK Device (SmartStation)	52
4.12	LED Indicators	55
4.13	Guidelines for Correct Results	58

5	Check & Adjust	59
5.1	Overview	59
5.2	Preparation	60
5.3	Combined Adjustment (l, t, i and c)	61
5.4	Tilting Axis Adjustment (a)	63
5.5	Adjusting the Circular Level of the Instrument and Tribrach	65
5.6	Adjusting the Circular Level of the Prism Pole	66
5.7	Inspecting the Laser Plummet of the Instrument	66
5.8	Servicing the Tripod	67
6	Care and Transport	68
6.1	Transport	68
6.2	Storage	68
6.3	Cleaning and Drying	69
7	Technical Data	70
7.1	Angle Measurement	70
7.2	Distance Measurement with Reflectors	70
7.3	Distance Measurement without Reflectors	71
7.4	Distance Measurement - Long Range (LO mode)	72
7.5	Overview Camera	72
7.6	SmartStation	73
	7.6.1 SmartStation Accuracy	73
	7.6.2 SmartStation Dimensions	73
	7.6.3 SmartAntenna Technical Data	74
7.7	Conformity to National Regulations	76
	7.7.1 TS11	76
	7.7.2 GS08plus	77
	7.7.3 GS12	78
	7.7.4 GS14	79
	7.7.5 GS15	80
	7.7.6 SLR5, SATEL SATELLINE M3-TR1	81
	7.7.7 SLG1, Telit UC864-G	82
	7.7.8 Dangerous Goods Regulations	83
7.8	General Technical Data of the Instrument	84
7.9	Scale Correction	87
7.10	Reduction Formulas	90
8	Software Licence Agreement	92

1 Safety Directions

1.1 General Introduction

Description

The following directions enable the person responsible for the product, and the person who actually uses the equipment, to anticipate and avoid operational hazards.

The person responsible for the product must ensure that all users understand these directions and adhere to them.

About Warning Messages





Warning messages are an essential part of the safety concept of the instrument. They appear wherever hazards or hazardous situations can occur.

Warning messages...

- make the user alert about direct and indirect hazards concerning the use of the product.
- contain general rules of behaviour.

For the users' safety, all safety instructions and safety messages shall be strictly observed and followed! Therefore, the manual must always be available to all persons performing any tasks described herein.


DANGER, WARNING, CAUTION and **NOTICE** are standardized signal words for identifying levels of hazards and risks related to personal injury and property damage. For your safety it is important to read and fully understand the table below with the different signal words and their definitions! Supplementary safety information symbols may be placed within a warning message as well as supplementary text.

Type	Description
 DANGER	Indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury.
 WARNING	Indicates a potentially hazardous situation or an unintended use which, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in minor or moderate injury.
NOTICE	Indicates a potentially hazardous situation or an unintended use which, if not avoided, may result in appreciable material, financial and environmental damage.
	Important paragraphs which must be adhered to in practice as they enable the product to be used in a technically correct and efficient manner.

1.2 Definition of Use

Intended Use	<ul style="list-style-type: none">• Measuring horizontal and vertical angles.• Measuring distances.• Recording measurements.• Visualising the aiming direction and vertical axis.• Capturing and recording images.• Data communication with external appliances.• Measuring raw data and computing coordinates using carrier phase and code signal from GNSS satellites.• Carrying out measurement tasks using various GNSS measuring techniques.• Recording GNSS and point related data.• Computing with software.
Reasonably Foreseeable Misuse	<ul style="list-style-type: none">• Use of the product without instruction.• Use outside of the intended use and limits.• Disabling safety systems.• Removal of hazard notices.• Opening the product using tools, for example screwdriver, unless this is permitted for certain functions.• Modification or conversion of the product.• Use after misappropriation.• Use of products with obvious damages or defects.• Use with accessories from other manufacturers without the prior explicit approval of Leica Geosystems.• Inadequate safeguards at the working site.• Aiming directly into the sun.

1.3 Limits of Use

Environment	Suitable for use in an atmosphere appropriate for permanent human habitation: not suitable for use in aggressive or explosive environments.
 DANGER	Local safety authorities and safety experts must be contacted before working in hazardous areas, or close to electrical installations or similar situations by the person in charge of the product.

1.4 Responsibilities

Manufacturer of the product	Leica Geosystems AG, CH-9435 Heerbrugg, hereinafter referred to as Leica Geosystems, is responsible for supplying the product, including the user manual and original accessories, in a safe condition.
Person responsible for the product	The person responsible for the product has the following duties: <ul style="list-style-type: none">• To understand the safety instructions on the product and the instructions in the user manual.• To ensure that it is used in accordance with the instructions.• To be familiar with local regulations relating to safety and accident prevention.• To inform Leica Geosystems immediately if the product and the application becomes unsafe.• To ensure that the national laws, regulations and conditions for the operation of e.g. radio transmitters or lasers are respected.

1.5

Hazards of Use



CAUTION

Watch out for erroneous measurement results if the product has been dropped or has been misused, modified, stored for long periods or transported.

Precautions:

Periodically carry out test measurements and perform the field adjustments indicated in the user manual, particularly after the product has been subjected to abnormal use and before and after important measurements.



DANGER

Because of the risk of electrocution, it is dangerous to use poles and extensions in the vicinity of electrical installations such as power cables or electrical railways.

Precautions:

Keep at a safe distance from electrical installations. If it is essential to work in this environment, first contact the safety authorities responsible for the electrical installations and follow their instructions.



NOTICE

With the remote control of products, it is possible that extraneous targets will be picked out and measured.

Precautions:

When measuring in remote control mode, always check your results for plausibility.



WARNING

If the product is used with accessories, for example masts, staffs, poles, you may increase the risk of being struck by lightning.

Precautions:

Do not use the product in a thunderstorm.



WARNING

During dynamic applications, for example stakeout procedures there is a danger of accidents occurring if the user does not pay attention to the environmental conditions around, for example obstacles, excavations or traffic.

Precautions:

The person responsible for the product must make all users fully aware of the existing dangers.



WARNING

Inadequate securing of the working site can lead to dangerous situations, for example in traffic, on building sites, and at industrial installations.

Precautions:

Always ensure that the working site is adequately secured. Adhere to the regulations governing safety and accident prevention and road traffic.



CAUTION

Be careful when pointing the product towards the sun, because the telescope functions as a magnifying glass and can injure your eyes and/or cause damage inside the product.

Precautions:

Do not point the product directly at the sun.

**CAUTION**

If the accessories used with the product are not properly secured and the product is subjected to mechanical shock, for example blows or falling, the product may be damaged or people can sustain injury.

Precautions:

When setting-up the product, make sure that the accessories are correctly adapted, fitted, secured, and locked in position.

Avoid subjecting the product to mechanical stress.

**WARNING**

During the transport, shipping or disposal of batteries it is possible for inappropriate mechanical influences to constitute a fire hazard.

Precautions:

Before shipping the product or disposing of it, discharge the batteries by running the product until they are flat.

When transporting or shipping batteries, the person in charge of the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping contact your local passenger or freight transport company.

**WARNING**

High mechanical stress, high ambient temperatures or immersion into fluids can cause leakage, fire or explosions of the batteries.

Precautions:

Protect the batteries from mechanical influences and high ambient temperatures. Do not drop or immerse batteries into fluids.

**WARNING**

If battery terminals are short circuited e.g. by coming in contact with jewellery, keys, metalized paper or other metals, the battery can overheat and cause injury or fire, for example by storing or transporting in pockets.

Precautions:

Make sure that the battery terminals do not come into contact with metallic objects.

**WARNING**

If the product is improperly disposed of, the following can happen:

- If polymer parts are burnt, poisonous gases are produced which may impair health.
- If batteries are damaged or are heated strongly, they can explode and cause poisoning, burning, corrosion or environmental contamination.
- By disposing of the product irresponsibly you may enable unauthorised persons to use it in contravention of the regulations, exposing themselves and third parties to the risk of severe injury and rendering the environment liable to contamination.

Precautions:

The product must not be disposed with household waste.

Dispose of the product appropriately in accordance with the national regulations in force in your country.

Always prevent access to the product by unauthorised personnel.

Product-specific treatment and waste management information can be downloaded from the Leica Geosystems home page at <http://www.leica-geosystems.com/treatment> or received from your Leica Geosystems dealer.

**WARNING**

Only Leica Geosystems authorised service workshops are entitled to repair these products.

1.6



Laser Classification

1.6.1

General

General

The following chapters provide instructions and training information about laser safety according to international standard IEC 60825-1 (2014-05) and technical report IEC TR 60825-14 (2004-02). The information enables the person responsible for the product and the person who actually uses the equipment, to anticipate and avoid operational hazards.

-  According to IEC TR 60825-14 (2004-02), products classified as laser class 1, class 2 and class 3R do not require:
 - laser safety officer involvement,
 - protective clothes and eyewear,
 - special warning signs in the laser working areaif used and operated as defined in this User Manual due to the low eye hazard level.
-  National laws and local regulations could impose more stringent instructions for the safe use of lasers than IEC 60825-1 (2014-05) and IEC TR 60825-14 (2004-02).

1.6.2

Distancer, Measurements with Reflectors

General

The EDM module built into the product produces a visible laser beam which emerges from the telescope objective.


The laser product described in this section is classified as laser class 1 in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

These products are safe under reasonably foreseeable conditions of operation and are not harmful to the eyes provided that the products are used and maintained in accordance with this User Manual.

Description	Value
Wavelength	658 nm
Pulse duration	800 ps
Pulse repetition frequency (PRF)	100 MHz
Maximum average radiant power	0.33 mW
Beam divergence	1.5 mrad x 3 mrad

Labelling

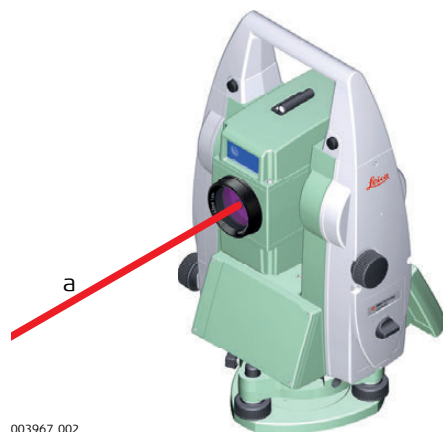

a) Laser beam

General

The EDM module built into the product produces a visible laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 3R in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

Direct intrabeam viewing may be hazardous (low eye hazard level), in particular for deliberate ocular exposure. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions. The risk of injury for laser class 3R products is limited because of:

- unintentional exposure would rarely reflect worst case conditions of (e.g.) beam alignment with the pupil, worst case accommodation,
- inherent safety margin in the maximum permissible exposure to laser radiation (MPE)
- natural aversion behaviour for exposure to bright light for the case of visible radiation.

Description	Value (R500/R1000)
Wavelength	658 nm
Maximum average radiant power	4.8 mW
Pulse duration	800 ps
Pulse repetition frequency	100 MHz
Beam divergence	0.2 mrad x 0.3 mrad
NOHD (Nominal Ocular Hazard Distance) @ 0.25s	44 m

**CAUTION**

From a safety perspective, class 3R laser products should be treated as potentially hazardous.

Precautions:

- 1) Prevent direct eye exposure to the beam.
- 2) Do not direct the beam at other people.

**CAUTION**


Potential hazards are not only related to direct beams but also to reflected beams aimed at reflecting surfaces such as prisms, windows, mirrors, metallic surfaces, etc.

Precautions:


- 1) Do not aim at areas that are essentially reflective, such as a mirror, or which could emit unwanted reflections.
- 2) Do not look through or beside the optical sight at prisms or reflecting objects when the laser is switched on, in laser pointer or distance measurement mode. Aiming at prisms is only permitted when looking through the telescope.

Labelling

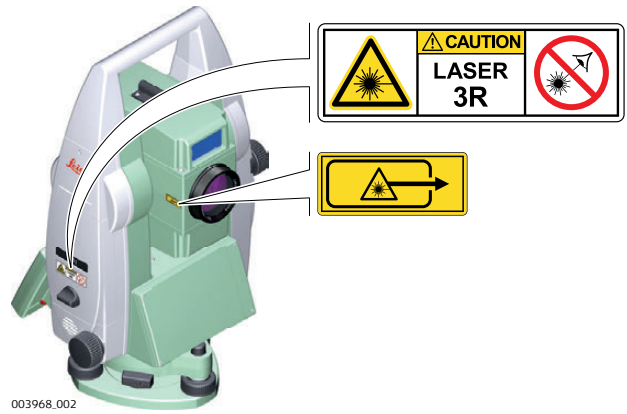


Laser Radiation
 Avoid direct eye exposure
 Class 3R Laser Product
 according to IEC 60825-1
 (2014 - 05)
 $P_{av} = 4.8 \text{ mW}$
 $\lambda = 658 \text{ nm}$
 $t_p = 800 \text{ ps}$

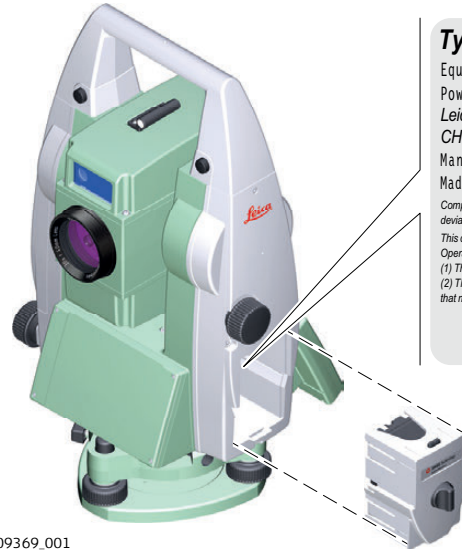

003968_002



009369_001

Type: TS12L *Art.No.:* 1 2 3 4 5 6
Equip.No.: 1234567 *S.No.:* 1 2 3 4 5 6
 Power: 12V / 7.4 --- , 1A max
 Leica Geosystems AG
 CH-9435 Heerbrugg
 Manufactured: 20XX   
 Made in Switzerland

Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.
 This device complies with part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

$P_{av} = 4.8\text{mW}$ $\lambda = 658\text{nm}$ $t_p = 800\text{ps}$
 IEC 60825-1:2014

General

The laser pointer built into the product produces a visible red laser beam which emerges from the telescope objective.

The laser product described in this section is classified as laser class 3R in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

Direct intrabeam viewing may be hazardous (low eye hazard level), in particular for deliberate ocular exposure. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions. The risk of injury for laser class 3R products is limited because of:

- a) unintentional exposure would rarely reflect worst case conditions of (e.g.) beam alignment with the pupil, worst case accommodation,
- b) inherent safety margin in the maximum permissible exposure to laser radiation (MPE)
- c) natural aversion behaviour for exposure to bright light for the case of visible radiation.

Description	Value (R400/R1000)
Wavelength	658 nm
Maximum average radiant power	4.8 mW
Pulse duration	800 ps
Pulse repetition frequency (PRF)	100 MHz
Beam divergence	0.2 mrad x 0.3 mrad
NOHD (Nominal Ocular Hazard Distance) @ 0.25s	44 m



CAUTION

From a safety perspective, class 3R laser products should be treated as potentially hazardous.

Precautions:

- 1) Prevent direct eye exposure to the beam.
- 2) Do not direct the beam at other people.



CAUTION


Potential hazards are not only related to direct beams but also to reflected beams aimed at reflecting surfaces such as prisms, windows, mirrors, metallic surfaces, etc.

Precautions:


- 1) Do not aim at areas that are essentially reflective, such as a mirror, or which could emit unwanted reflections.
- 2) Do not look through or beside the optical sight at prisms or reflecting objects when the laser is switched on, in laser pointer or distance measurement mode. Aiming at prisms is only permitted when looking through the telescope.

Labelling

Laser Radiation
 Avoid direct eye exposure
 Class 3R Laser Product
 according to IEC 60825-1
 (2014 - 05)
 $P_{av} = 4.8 \text{ mW}$
 $\lambda = 658 \text{ nm}$
 $t_p = 800 \text{ ps}$

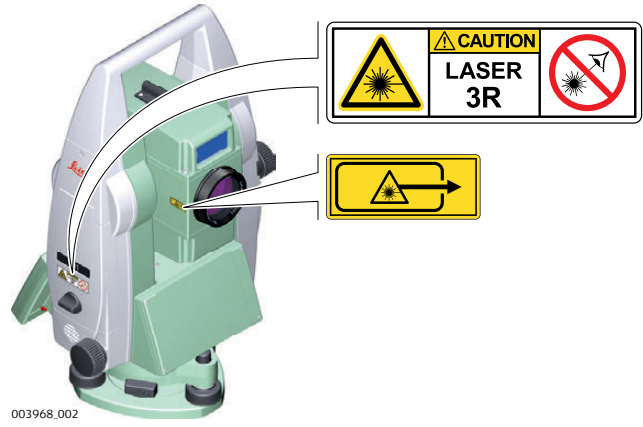

003968_002

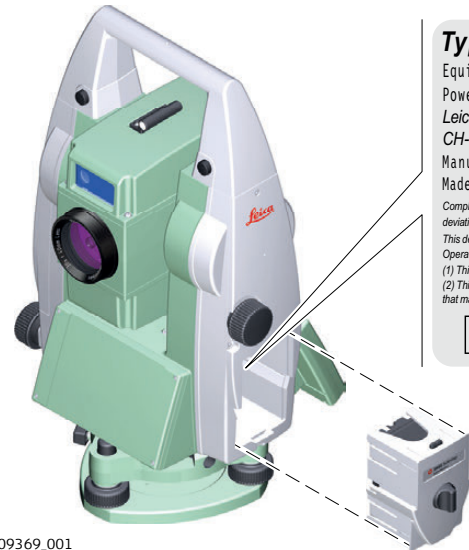

009369_001

Type: TS12L **Art.No.:**
Equip.No.: 1234567 1 2 3 4 5 6
Power: 12V / 7.4 ---, 1A max **S.No.:**
Leica Geosystems AG 1 2 3 4 5 6
CH-9435 Heerbrugg
Manufactured: 20XX   
Made in Switzerland


Complies with FDA performance standards for laser products except for deviations pursuant to Laser Notice No. 50, dated June 24, 2007.
 This device complies with part 15 of the FCC Rules.
 Operation is subject to the following two conditions:
 (1) This device may not cause harmful interference, and
 (2) This device must accept any interference received, including interference that may cause undesired operation.

$P_{av} = 4.8\text{mW}$ $\lambda = 658\text{nm}$ $t_p = 800\text{ps}$
 IEC 60825-1:2014

General

The Electronic Guide Light built into the product produces a visible LED beam which emerges from the front side of the telescope.

- ☞ The product described in this section, is excluded from the scope of IEC 60825-1 (2014-05): "Safety of laser products".
The product described in this section, is classified as exempt group in accordance with IEC 62471 (2006-07) and does not pose any hazard provided that the product is used and maintained in accordance with this user manual.

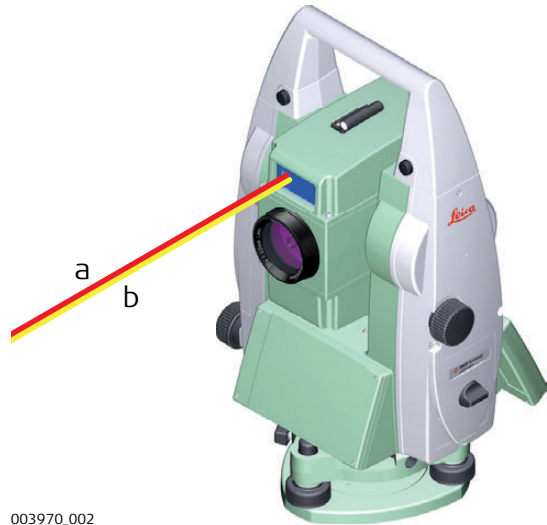

003970_002

- a) LED beam red
b) LED beam yellow

1.6.6

Laser Plummet

General

The laser plummet built into the product produces a visible red laser beam which emerges from the bottom of the product.

The laser product described in this section is classified as laser class 2 in accordance with:

- IEC 60825-1 (2014-05): "Safety of laser products"

These products are safe for momentary exposures but can be hazardous for deliberate staring into the beam. The beam may cause dazzle, flash-blindness and after-images, particularly under low ambient light conditions.

Description	Value
Wavelength	640 nm
Maximum average radiant power	0.95 mW
Pulse duration	10 ms - cw
Pulse repetition frequency (PRF)	1 kHz
Beam divergence	< 1.5 mrad




CAUTION

From a safety perspective, class 2 laser products are not inherently safe for the eyes.

Precautions:



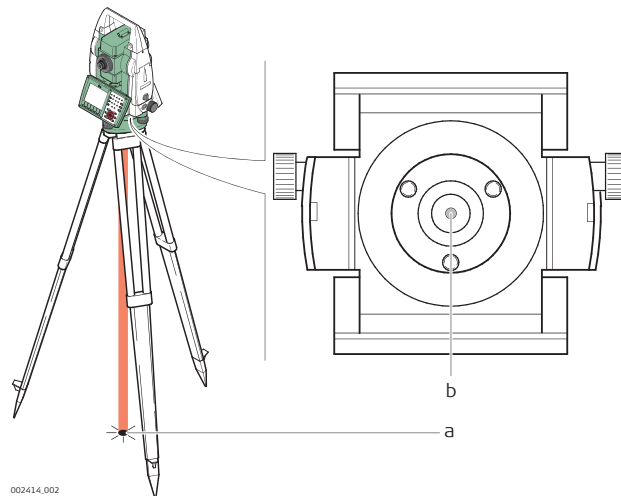


- 1) Avoid staring into the beam or viewing it through optical instruments.
- 2) Avoid pointing the beam at other people or at animals.

Labelling



Laser Radiation
Do not stare into the beam
Class 2 Laser Product
according to IEC 60825-1
(2014 - 05)
 $P_{av} = 0.95 \text{ mW}$
 $\lambda = 640 \text{ nm}$

- a) Laser beam
- b) Exit for laser beam

Description	The term Electromagnetic Compatibility is taken to mean the capability of the product to function smoothly in an environment where electromagnetic radiation and electrostatic discharges are present, and without causing electromagnetic disturbances to other equipment.
 WARNING	Electromagnetic radiation can cause disturbances in other equipment. Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment may be disturbed.
 CAUTION	There is a risk that disturbances may be caused in other equipment if the product is used with accessories from other manufacturers, for example field computers, personal computers or other electronic equipment, non-standard cables or external batteries. Precautions: Use only the equipment and accessories recommended by Leica Geosystems. When combined with the product, they meet the strict requirements stipulated by the guidelines and standards. When using computers or other electronic equipment, pay attention to the information about electromagnetic compatibility provided by the manufacturer.
 CAUTION	Disturbances caused by electromagnetic radiation can result in erroneous measurements. Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that the product may be disturbed by intense electromagnetic radiation, for example, near radio transmitters, two-way radios or diesel generators. Precautions: Check the plausibility of results obtained under these conditions.
 CAUTION	If the product is operated with connecting cables attached at only one of their two ends, for example external supply cables, interface cables, the permitted level of electromagnetic radiation may be exceeded and the correct functioning of other products may be impaired. Precautions: While the product is in use, connecting cables, for example product to external battery, product to computer, must be connected at both ends.
Radios or Digital Cellular Phones	Use of product with radio or digital cellular phone devices:
 WARNING	Electromagnetic fields can cause disturbances in other equipment, in installations, in medical devices, for example pacemakers or hearing aids and in aircraft. It can also affect humans and animals. Precautions: Although the product meets the strict regulations and standards which are in force in this respect, Leica Geosystems cannot completely exclude the possibility that other equipment can be disturbed or that humans or animals can be affected. <ul style="list-style-type: none"> • Do not operate the product with radio or digital cellular phone devices in the vicinity of filling stations or chemical installations, or in other areas where an explosion hazard exists. • Do not operate the product with radio or digital cellular phone devices near to medical equipment. • Do not operate the product with radio or digital cellular phone devices in aircraft.

1.8

FCC Statement, Applicable in U.S.



The greyed paragraph below is only applicable for products without radio.



WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:


- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.




WARNING

Changes or modifications not expressly approved by Leica Geosystems for compliance could void the user's authority to operate the equipment.

Labelling TS11

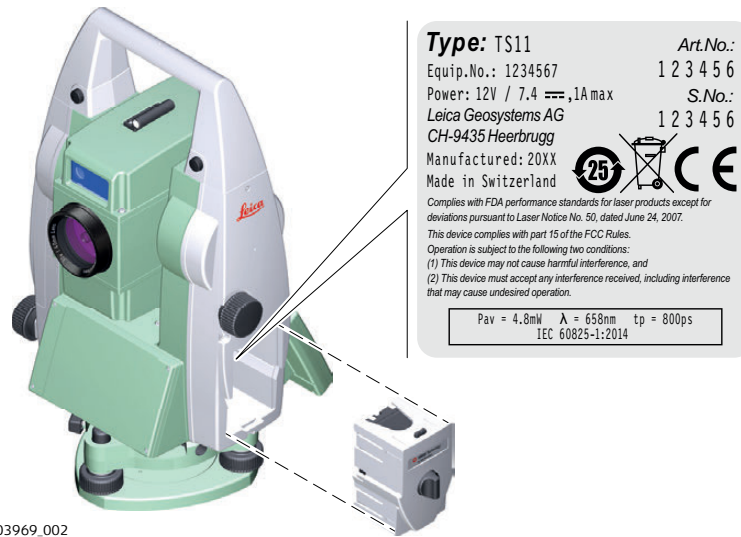


Labelling GS08plus, GS12

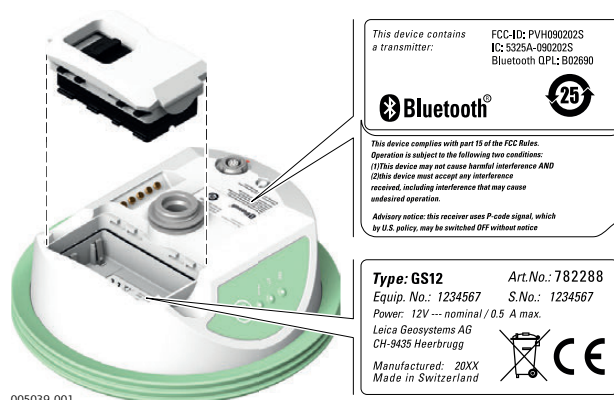

Labelling GS14



008606_001

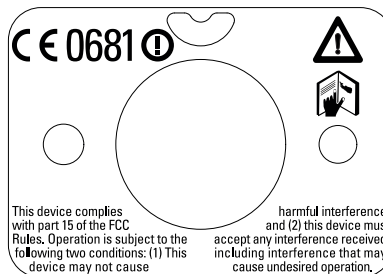

Type: GS14 Art.No.: 123456
 Equip. No.: 12345678 S.No.: 1234567
 Leica Geosystems AG, CH-9435 Heerbrugg
 Manufactured: 20XX, Made in Switzerland
 Power: 12V nominal / 200 mA max.
 Bluetooth QD ID: B015912
 Contains FCC ID / IC ID : QIPBGS2 / 7830A-BGS2



Labelling GS15



008607_001

Type: GS15 S.No.: 1234567
 Equi.No.: 1234567 Art.No.: 7XXXXX
 Power: 12V nominal/0.5 A max. CE 0681
 Leica Geosystems AG IC: 6850A-31308
 CH-9435 Heerbrugg Contains transmitter module:
 Manufactured: 20XX FCC-ID: Q231308
 Made in Switzerland Bluetooth QD ID: B015912

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Labelling internal battery GEB222



005043_001

Type: GEB222 Art.No.: 793973
 Li-Ion Battery: 7.4V nominal / 6.0Ah
 15A 5A/130°C 44.4Wh
 Leica Geosystems AG, CH-9435 Heerbrugg
 S.No.: 10142 Made in China

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



Labelling internal battery GEB212



005044_001

Type: GEB212 Art.No.: 772806
 Li-Ion Battery: 7.4V nominal / 2.6Ah
 10A 5A/130°C 19Wh
 Leica Geosystems AG, CH-9435 Heerbrugg
 Manufactured: 20XX S.No.: 0118 Made in China


This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.



2 Description of the System

2.1 System Components

System components

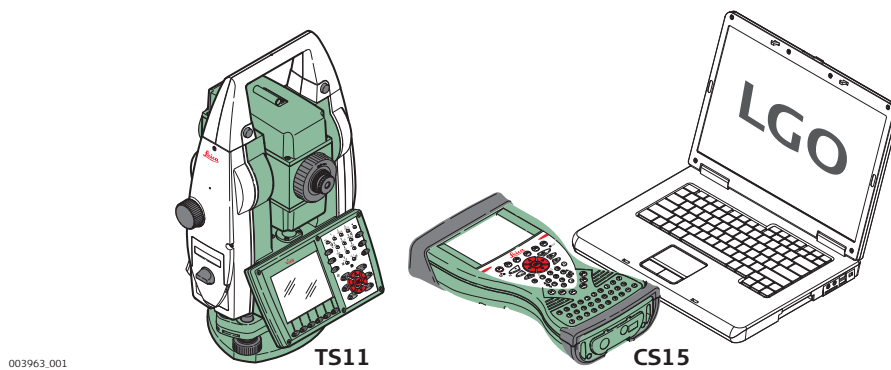

General description TS11 is a collective term describing total stations of the Leica Viva Series.

Main components

Component	Description
TS11 instrument	<ul style="list-style-type: none">• a total station for measuring, calculating and capturing data.• consisting of various models with a range of accuracy classes.• integrated with an add-on GNSS system to form Smart-Station.• can be combined with the multi-purpose CS10/CS15 field controller.
CS10/CS15 field controller	A multipurpose field controller for handheld operation of the instrument.
Leica Geo Office/Infinity	The office software including a series of help programs which support working with Leica Viva Series instruments.

Terms and abbreviations

The following terms and abbreviations can be found in this manual:

Term	Description
RCS	Remote Control Surveying
EDM	<p>Electronic Distance Measurement</p> <p>EDM refers to the laser distancer incorporated into the instrument which enables distance measurement.</p> <p>Two measuring modes are available:</p> <ul style="list-style-type: none"> • Prism mode. This mode refers to the ability to measure distances to prisms. It incorporates the LO mode to measure extended distances to prisms. • Any surface mode. This mode refers to the ability to measure distances without prisms.
PinPoint	PinPoint refers to the Reflectorless EDM technology which enables an increased measuring range with a smaller laser spot size. Two options are available: R500 and R1000.
EGL	<p>Electronic Guide Light</p> <p>An EGL fitted to an instrument assists with prism targeting. It consists of two differently coloured flashing lights located in the instrument telescope housing. The person holding the prism can align themselves into the line-of-sight of the instrument.</p>
Overview camera	Overview camera is located in the upper part of the telescope housing and has a fixed focus without optical magnification.
SmartStation	<p>A Leica Viva TPS instrument integrated with an add-on GNSS system, comprising hardware and software components, forms a SmartStation.</p> <p>Components of a SmartStation include a SmartAntenna and a SmartAntenna Adapter.</p> <p>A SmartStation provides an additional instrument setup method for determining instrument station coordinates.</p> <p>The GNSS principles and functionality of a SmartStation derive from the principles and functionality of Leica Viva GNSS instruments.</p>
SmartAntenna	SmartAntenna with integrated Bluetooth is a component of a SmartStation. It can also be used independently on a pole with a CS10/CS15 field controller. Models compatible with a TS11 instrument are GS12/GS14/GS15. Where there are differences between the various models they are clearly described.
Communication side cover	Communication side cover with integrated Bluetooth, SD card slot and USB port is standard for a TS11 instrument and a component of a SmartStation.

Available models

Model	TS11	TS11 I
Angle measurement	✓	✓
Distance measurement to prism	✓	✓
Distance measurement to any surface (reflectorless)	✓	✓
Overview Camera	-	✓
RS232, USB and SD card interface	✓	✓
Bluetooth	✓	✓
Internal Flash Memory (1 GB)	✓	✓
Guide Light (EGL)	✓	✓
Arctic Option	*	*

✓ Standard

* Optional

- Not available

2.2

System Concept

2.2.1

Software Concept

Description

All instruments use the same software concept.

Software for TS models

Software type	Description
TS firmware (TS_xx.fw)	<p>This important software covers all functions of the instrument.</p> <p>The applications Survey and Setup are integrated into the firmware and cannot be deleted.</p> <p>The English language is integrated into the firmware and cannot be deleted.</p>
Language software (SYS_LANG.sxx)	<p>Numerous languages are available for the TS instruments. This software is also referred to as system language.</p> <p>The English language is the default language. One language is chosen as the active language.</p>
Applications (xx.axx)	<p>Many optional survey-specific applications are available for the TS instruments.</p> <p>Some of the applications are activated freely and require no licence key, and others require purchasing and are only activated with a licence key.</p> <p>Applications requiring an activation run for a 180 days trial period without prior activation.</p>
Customised applications (xx.axx)	<p>Customised software, specific to user requirements, can be developed using the GeoC++ development kit in addition to run Windows CE-based applications if GeoCOM robotics licence is available. Information on the GeoC++ development environment is available on request from a Leica Geosystems representative.</p>

Software upload



Uploading software can take some time. Ensure that the battery is at least 75% full before beginning the upload, and do not remove the battery during the upload process.

Software for	Description
All TS models	<p>The SmartWorx Viva is stored in the flash RAM of the TS instrument.</p> <p>Software update instructions</p> <ul style="list-style-type: none">• Download the most recent TS firmware file from https://myworld.leica-geosystems.com. Refer to "Introduction".• Connect the TS instrument to your PC. Refer to "4.7 Connecting to a Personal Computer".• Copy the TS firmware file onto a folder system on the Leica SD card.• Start the TS instrument. In SmartWorx Viva select User\Tools & other utilities\Load firmware & Apps. Select Object to transfer: Firmware.• A message will appear when the upload is complete.

2.2.2

Power Concept

General

Use the batteries, chargers and accessories recommended by Leica Geosystems to ensure the correct functionality of the instrument.

Power Options

Model	Power supply
all TS models	Internally by GEB222 battery, OR Externally by GEV52 cable and GEB371 battery. If an external power supply is connected and the internal battery is inserted, then the external power is used.
SmartAntenna	Internally via GEB212 battery fitted into the antenna.

2.2.3


Data Storage Concept

Description

Data is stored on a memory device. The memory device can be an SD card or internal memory. For data transfer an USB stick can also be used.

Memory device

SD card: All instruments have an SD card slot fitted as standard. An SD card can be inserted and removed. Available capacity: 8 GB.
USB stick: All instruments have a USB port fitted as standard.
Internal memory: All instruments have an internal memory fitted as standard. Available capacity: 1 GB.

 While other SD cards can be used, Leica Geosystems recommends to only use Leica SD cards and is not responsible for data loss or any other error that can occur while using a non-Leica card.



Unplugging connecting cables or removing the SD card or USB stick during the measurement can cause loss of data. Only remove the SD card or USB stick or unplug connecting cables when the TS instrument is switched off.

Transfer Data

Data can be transferred in various ways. Refer to "4.7 Connecting to a Personal Computer".




SD cards can directly be used in an OMNI drive as supplied by Leica Geosystems. Other PC card drives can require an adaptor.

2.3


Container Contents

Container for instrument and accessories part 1 of 2

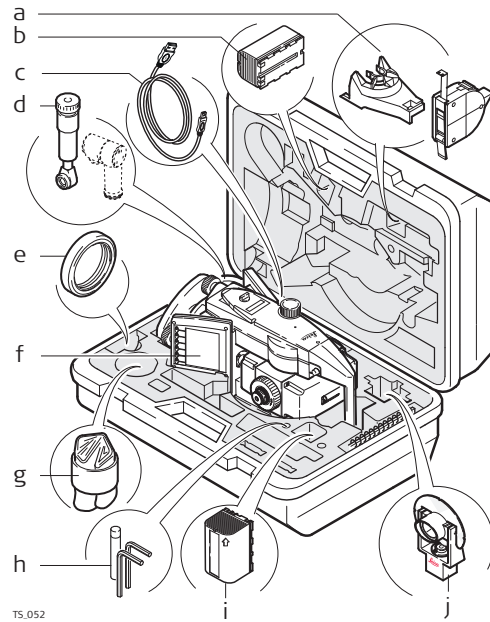

- a) GHM007 Instrument height meter and GHT196 tribrach bracket for height meter
- b) GEB222 battery
- c) Data transfer cable
- d) GFZ3 or GOK6 diagonal eyepiece
- e) Counterweight for diagonal eyepiece
- f) Instrument with tribrach and standard handle or RadioHandle
- g) Protective cover for instrument, sunshade for objective lens and cleaning cloth
- h) Allen key
- i) GEB222 battery
- j) GMP101 mini prism


**Container for
instrument and
accessories
part 2 of 2**

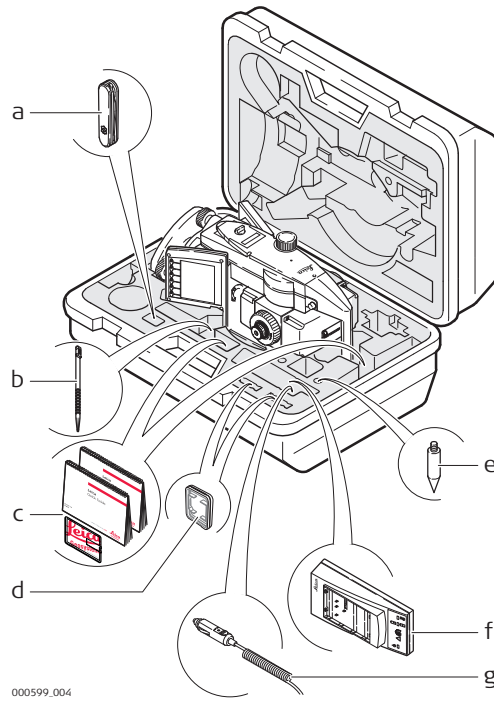

000599_004

- a) Pocket knife*
- b) Spare stylus
- c) Manuals & USB documentation card
- d) SD cards/CompactFlash cards and covers
- e) Tip for mini prism
- f) Battery charger
- g) Car adapter power plug for battery charger (stored under battery charger)
- * Optional


**Container for
GS14/GS15/
GS08plus
SmartPole/
SmartStation and
accessories
part 1 of 2**

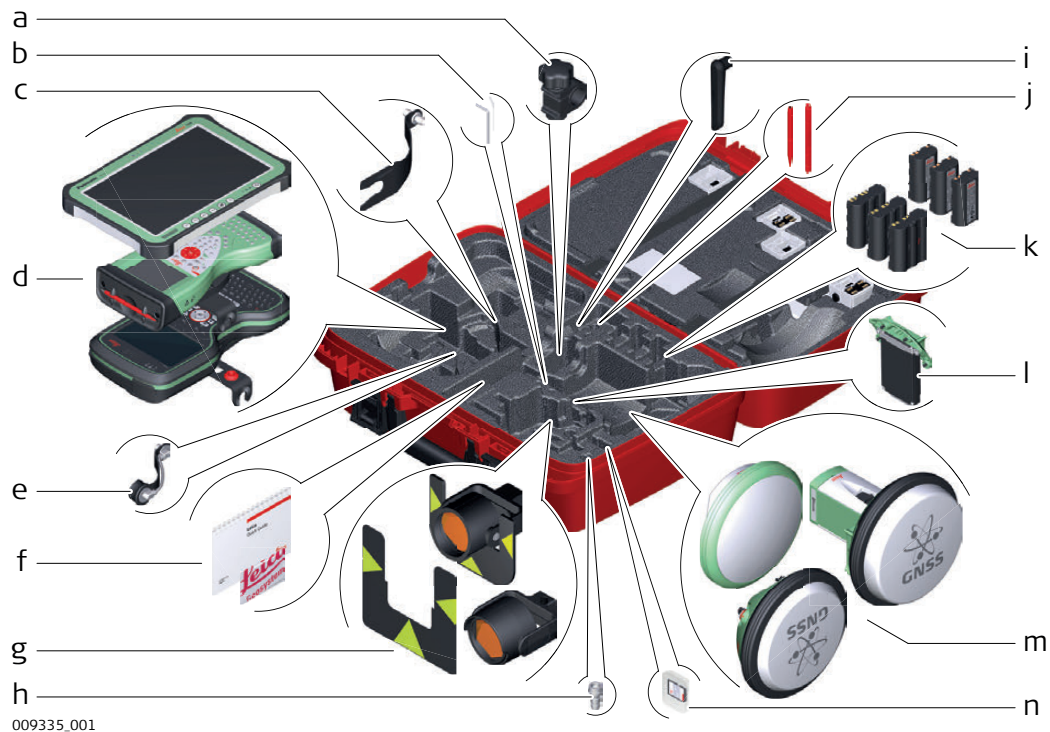

009335_001

- a) GHT63 pole holder clamp
- b) Allen key and adjustment tool
- c) GAD33 antenna arm
- d) Field controller with GHT62 holder
- e) GAD108 antenna arm
- f) Manuals and USB documentation card
- g) GPR121 circular prism PRO or GZT4 target plate for GPH1 and GPH1 prism holder with GPR1 circular prism
- h) GAD109 QN-TNC Adapter
- i) GAT25 radio antenna
- j) Stylus
- k) GEB212 or GEB331 batteries
- l) SLXX RTK modem
- m) GS14/GS15/GS08plus antenna
- n) SD card and cover

**Container for
GS14/GS15/
GS08plus
SmartPole/
SmartStation and
accessories
part 2 of 2**

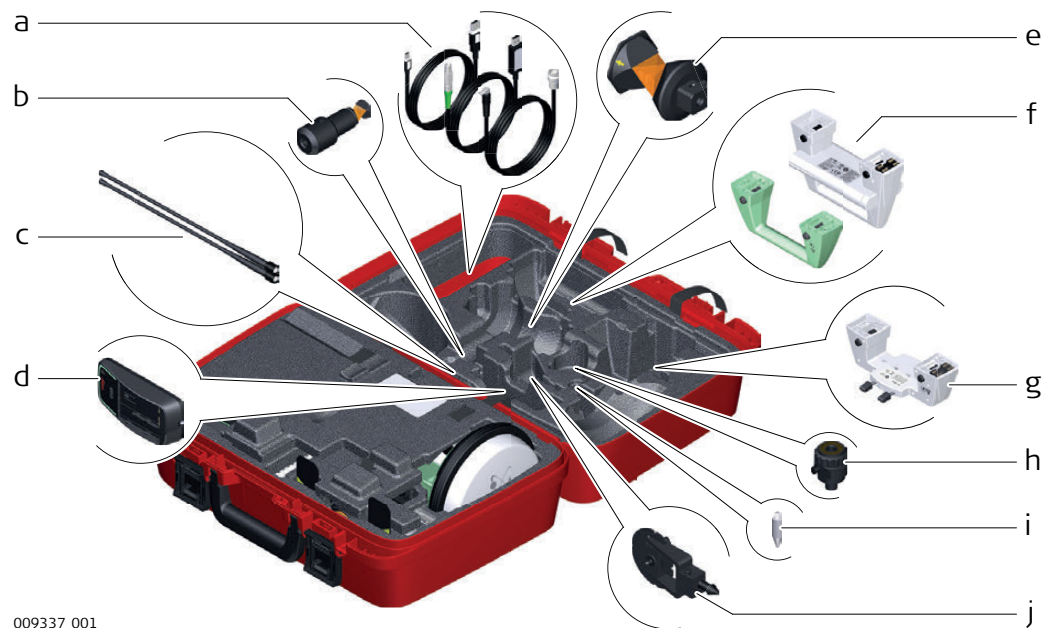


009337_001

- a) Cables
- b) GRZ101 mini prism and GAD103 adapter
- c) GAT1 or GAT2 radio antennas
- d) GKL311 charger
- e) GRZ4 or GRZ122 prism
- f) Standard handle or RadioHandle
- g) GAD110 adapter for GS14/GS15/GS08plus antenna
- h) GAD31 screw to stub adapter
- i) Mini prism spike
- j) GMP101 mini prism

2.4


Instrument Components

Instrument components part 1 of 2

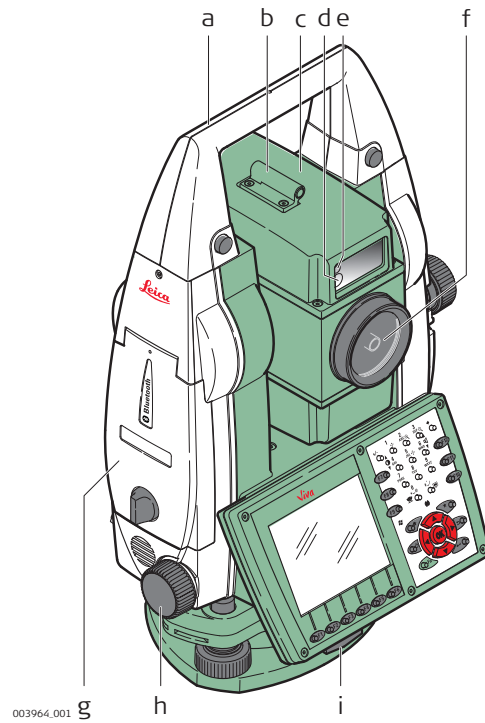


- a) Carry handle
- b) Optical sight
- c) Telescope, integrating EDM, EGL, overview camera
- d) EGL flashing diode - yellow and red
- e) Overview camera, lens
- f) Coaxial optics for angle and distance measurement, and exit port of visible laser beam for distance measurements
- g) Communication side cover
- h) Horizontal drive
- i) Tribrach securing screw

Instrument components part 2 of 2

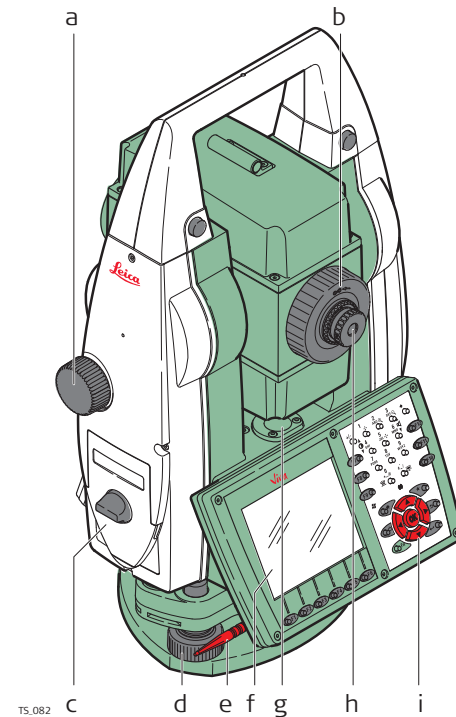

- a) Vertical drive
- b) Focusing ring
- c) Battery compartment
- d) Tribrach footscrew
- e) Stylus for touch screen
- f) Touch screen
- g) Circular level
- h) Interchangeable eyepiece
- i) Keyboard


Communication side cover

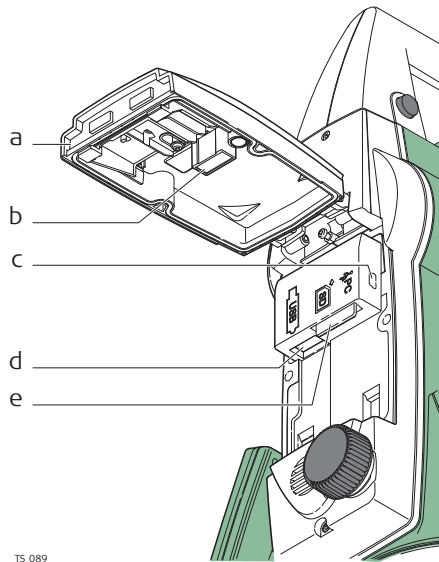

TS_089

- a) Compartment lid
- b) USB stick cap storage
- c) USB device port (mini AB OTG)
- d) USB host port for USB stick
- e) SD card port

Instrument components for SmartStation

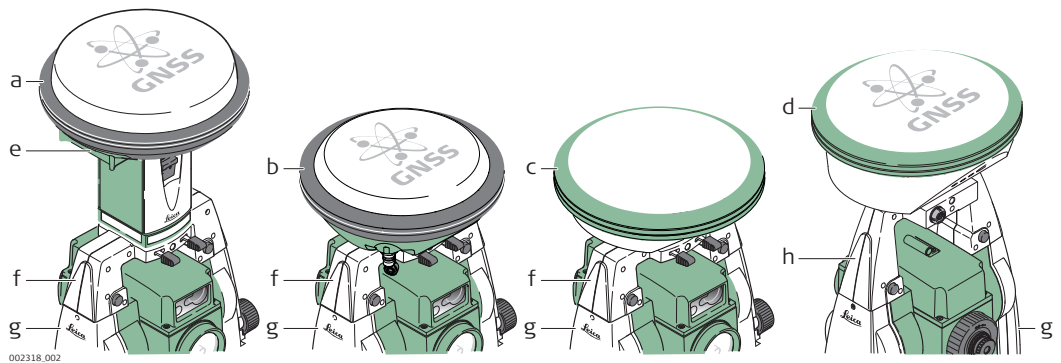


002318_002

- a) GS15
- b) GS14
- c) GS08plus
- d) GS12
- e) RTK slot-in device
- f) GAD110 SmartAntenna Adapter
- g) Communication side cover
- h) GAD104 SmartAntenna Adapter

3 User Interface

3.1 Keyboard

Keyboard

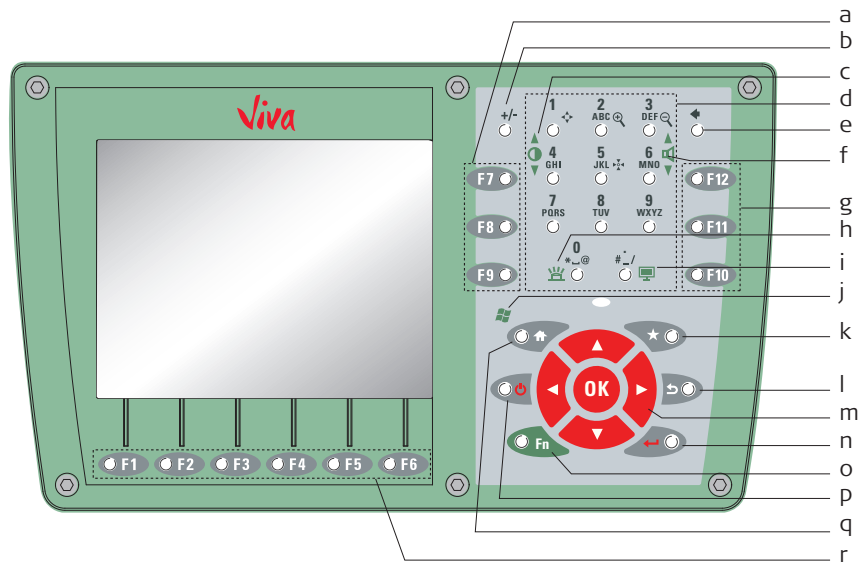












TS_087

- a) Function keys **F7 - F9**
- b) \pm key
- c) Brightness
- d) Alphanumeric keys
- e) Backspace
- f) Volume
- g) Function keys **F10 - F12**
- h) Keyboard illumination
- i) Screenshot

- j) Windows CE
- k) Favourites
- l) ESC
- m) Arrow keys, **OK**
- n) ENTER
- o) **Fn**
- p) ON/OFF
- q) Home
- r) Function keys **F1 - F6**

Keys

Key		Function
Function keys F1-F6		Correspond to six softkeys that appear on the bottom of the screen when the screen is activated.
Function keys F7-F12		User definable keys to execute chosen commands or access chosen screens.
Alphanumeric keys		To type letters and numbers.
Esc		Leaves the current screen without storing any changes.
Fn		Switches between the first and second level of function keys.
Enter		Selects the highlighted line and leads to the next logical menu / dialog. Starts the edit mode for editable fields. Opens a selectable list.
ON/OFF		If the instrument is already off: Turns on the instrument when held for 2 s. If the instrument is already on: Turns to Power Options menu when held for 2 s.
Favourites		Goes to a favourites menu.
Home		Switches to the SmartWorx Viva Main Menu. Switches to the Windows CE Start Menu when pressing Fn at the same time.
Arrow keys		Move the focus on the screen.
OK		Selects the highlighted line and leads to the next logical menu / dialog. Starts the edit mode for editable fields. Opens a selectable list.

Keyboard and Touch Screen

The user interface is operated either by the keyboard or by the touch screen with supplied stylus. The workflow is the same for keyboard and touch screen entry, the only difference lies in the way information is selected and entered.

Operation by keyboard

Information is selected and entered using the keys. Refer to "3.1 Keyboard" for a detailed description of the keys on the keyboard and their function.

Operation by touch screen

Information is selected and entered on the screen using the supplied stylus.

Operation	Description
To select an item	Tap on the item.
To start the edit mode in editable fields	Tap on the editable field.
To highlight an item or parts of it for editing	Drag the supplied stylus from the left to the right.
To accept data entered into an editable field and exit the edit mode	Tap on the screen outside of the editable field.
To open a context-sensitive menu	Tap on the item and hold for 2 s.



4

Operation

4.1

Setting Up the TPS Instrument


Instrument setup step-by-step

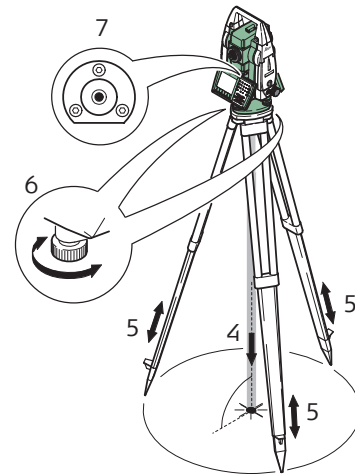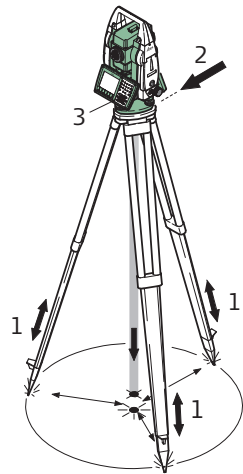


TS_064

Step	Description
	Shield the instrument from direct sunlight and avoid uneven temperatures around the instrument.
1.	Extend the tripod legs to allow for a comfortable working posture. Position the tripod over the marked ground point, centring it as well as possible.
2.	Fasten the tribrach and instrument onto the tripod.
3.	Turn on the instrument by pressing . Select Main Menu/Instrument/TPS settings/Level bubble & compensator to activate the laser plummet and electronic level.
4.	Move the tripod legs (1) and use the tribrach footscrews (6) to centre the plummet (4) over the ground point.
5.	Adjust the tripod legs to level the circular level (7).
6.	By using the electronic level, turn the tribrach footscrews (6) to level the instrument precisely.
7.	Centre the instrument precisely over the ground point (4) by shifting the tribrach on the tripod plate (2).
8.	Repeat steps 6. and 7. until the required accuracy is achieved.

SmartStation setup
step-by-step

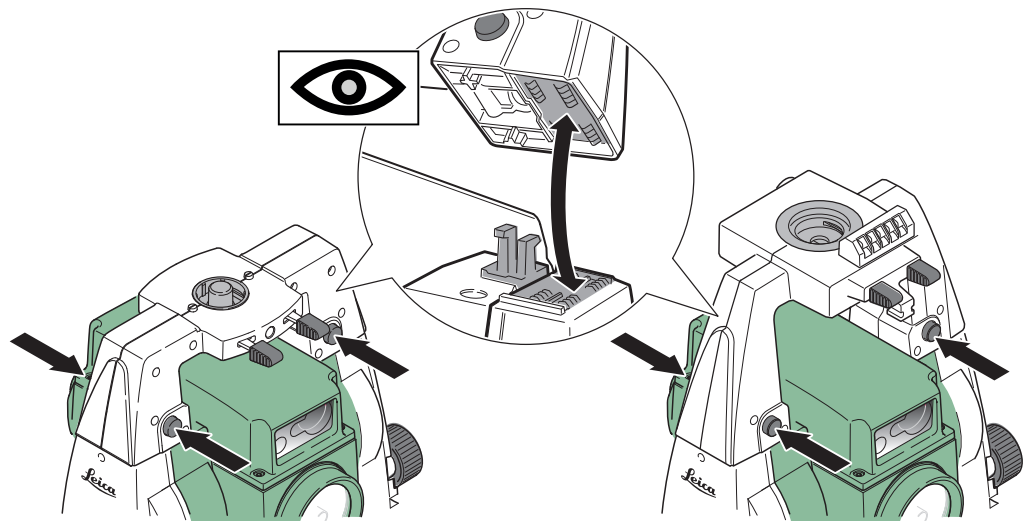

Step	Description
1.	Place the GAD110 adapter for the GS15/GS14/GS08plus antenna onto the instrument by simultaneously pressing and holding-in the four push buttons. For GS08plus: In addition to the GAD110 adapter, the GAD13 adapter is required. Place the GAD104 adapter for the GS12 antenna onto the instrument by simultaneously pressing and holding-in the four push buttons.
	Ensure that the interface connection on the underside of the adapter is on the same side as the Communication side cover.

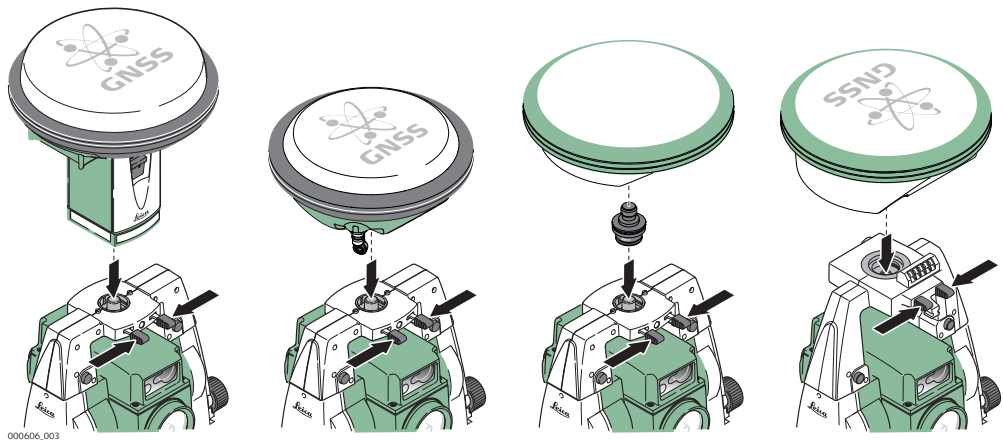


Step	Description
2.	Place the GS15/GS14/GS12/GS08plus antenna onto the adapter by simultaneously pressing and holding-in the two press clips.


4.3

Setting Up SmartPole

SmartPole setup using GS15/GS14

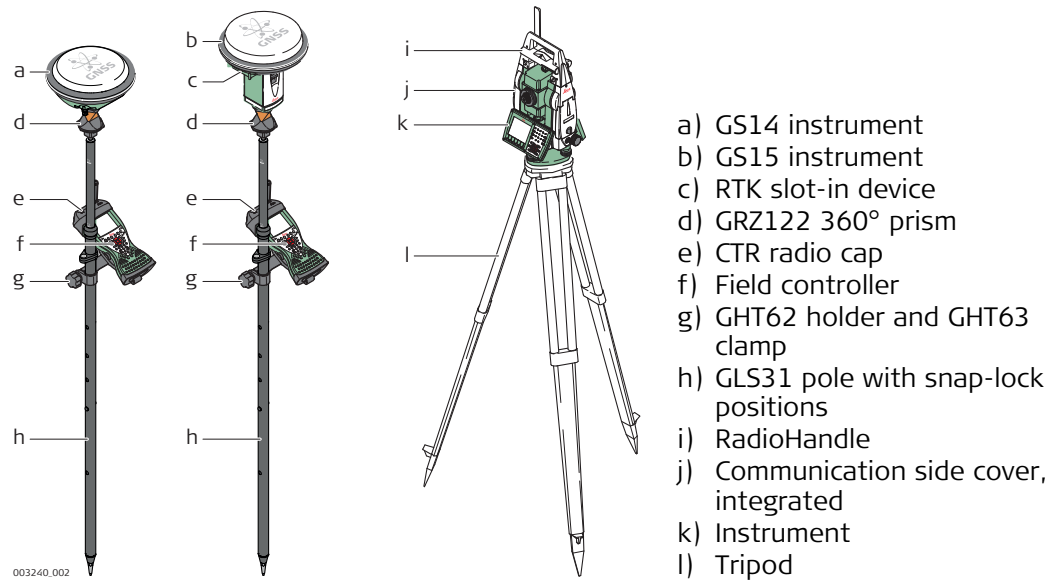


SmartPole setup using GS12

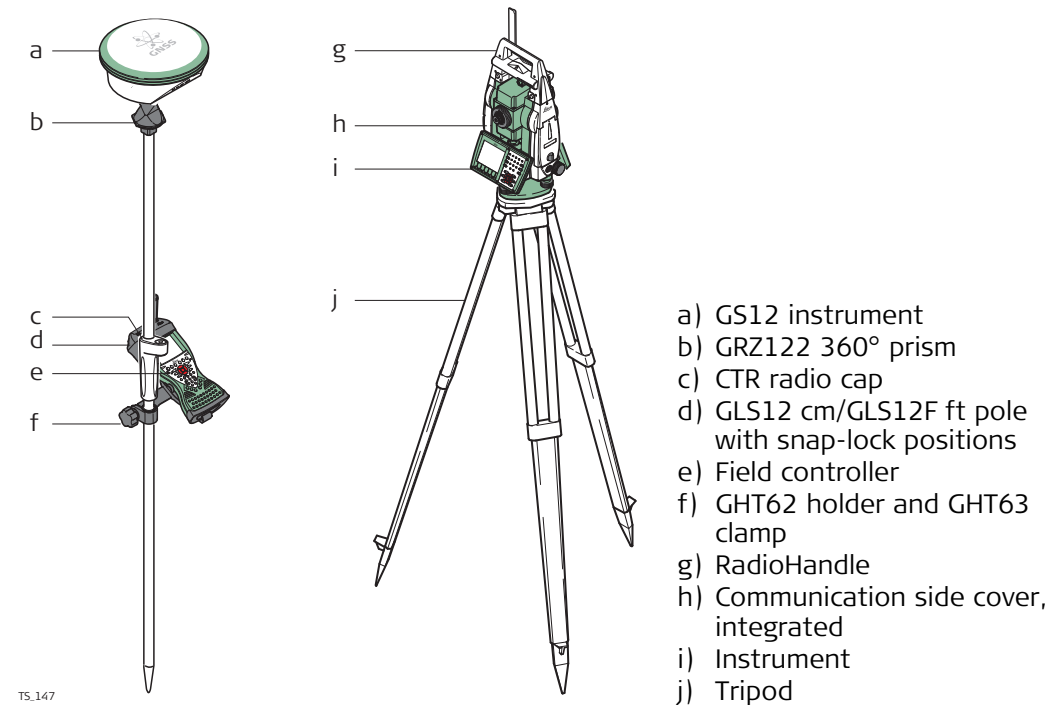


4.4

Setting up for Remote Control (with the RadioHandle)

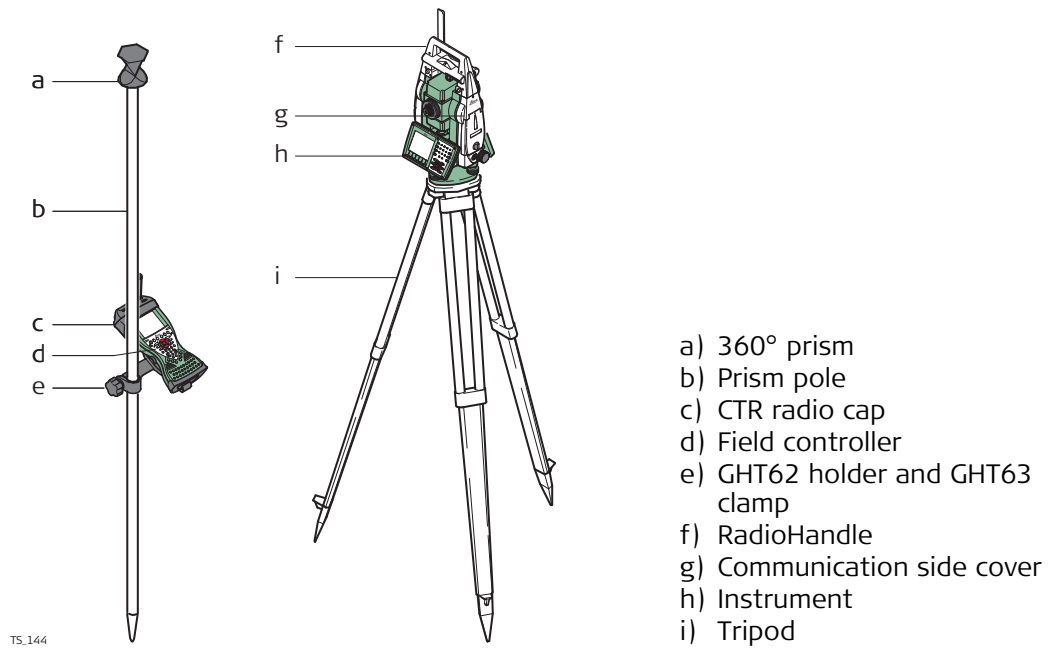


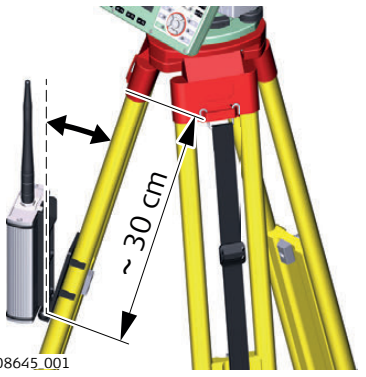
Setup for remote control with RadioHandle

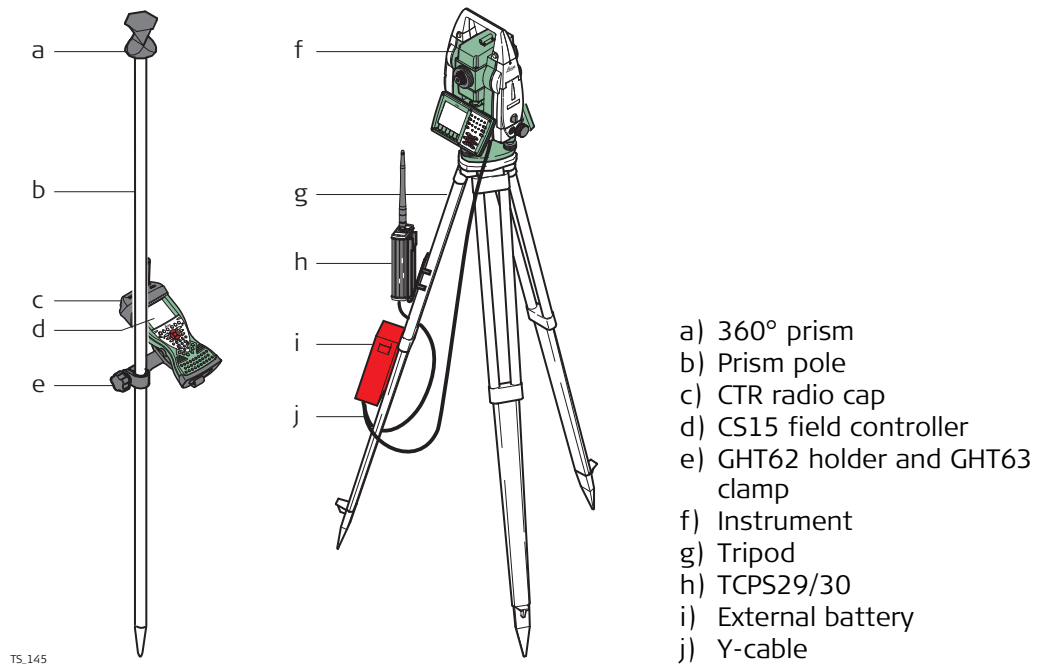

Setup for remote control with TCPS29/30



Mounting Base Radio to Tripod Step-by-Step


Step	Description
1.	The GHT43 tripod adapter is used to mount the TCPS29/30 to all Leica standard tripods, and to optimise the radio transmission performance. Attach the TCPS29/30 to the adapter and then attach the adapter to the tripod leg.
2.	Adjust the angle of TCPS29/30 until it is vertical.
3.	Adjust the location of the adapter on the tripod leg so that there are no metallic objects in the horizontal plane around the antenna.  Metallic objects near the antenna disturb radio transmissions.
4.	 To achieve the best performance from the TCPS29/30, mount it in a vertical position on the tripod leg, approximately 30 cm from the top.  If the adapter is no longer able to retain its angle position, the adjustment bolt at the hinge can be tightened slightly. 

4.6

Fixing the Field Controller to a Holder and Pole

Components of the GHT62 holder

The GHT62 holder consists of some components, as shown in the diagram.

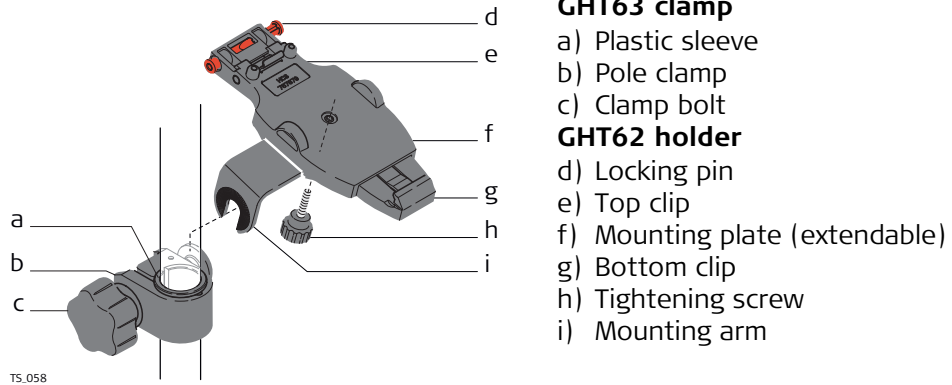


Fixing the field controller and GHT62 to a pole step-by-step

Step	Description	
	If you use the CS15 field controller, extend the mounting plate of the holder first.	
	For an aluminium pole, fit the plastic sleeve to the pole clamp.	
1.	Insert the pole into the clamp hole.	
2.	Attach the holder to the clamp using the clamp bolt.	
3.	Adjust the angle and the height of the holder on the pole to a comfortable position.	
4.	Tighten the clamp with the clamp bolt.	
5.	Before the field controller is placed onto the mounting plate, ensure that the locking pin is put into the unlocked position. To unlock the locking pin, push the locking pin to the left.	<p>TS_055</p>
6.	Hold the field controller above the holder and lower the end of the field controller into the mounting plate.	
7.	Apply slight pressure in a downward direction and then lower the top part of the field controller until the unit is clicked into the holder. The guides of the mounting plate aid in this action.	<p>TS_056</p>
8.	After the field controller is placed onto the mounting plate, ensure that the locking pin is put into the locked position. To lock the locking pin, push the locking pin to the right.	<p>TS_054</p>

Detaching the field controller from a pole step-by-step

Step	Description
1.	Unlock the locking pin by pushing the locking pin to the left of the mounting plate.
2.	Place palm over the top of the field controller until fingers grip the bar of the holder underneath.
3.	Push from the top of the field controller toward the bar of the holder.
4.	While in this position, lift the top of the field controller from the holder.

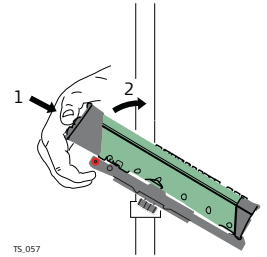

4.7

Connecting to a Personal Computer




Microsoft ActiveSync (for PCs with Windows XP operating system) or Windows Mobile Device Center (for PCs with Windows Vista or Windows 7/Windows 8 operating system) is the synchronisation software for Windows mobile-based pocket PCs. Microsoft ActiveSync or Windows Mobile Device Center enables a PC and a Windows mobile-based pocket PC to communicate.

Install Leica Viva USB drivers

Step	Description
1.	Start the PC.
2.	Insert the Leica Viva Series USB card.
3.	Run the SetupViva&GR_USB_XX.exe to install the drivers necessary for Leica Viva devices. Depending on the version (32bit or 64bit) of the operating system on your PC, you have to select between the three setup files following: <ul style="list-style-type: none"> • SetupViva&GR_USB_32bit.exe • SetupViva&GR_USB_64bit.exe • SetupViva&GR_USB_64bit_itanium.exe The setup has to be run only once for all Leica Viva devices.
4.	The Welcome to InstallShield Wizard for Leica Viva & GR USB drivers window appears. Ensure that all Leica Viva devices are disconnected from your PC before you continue!
5.	Next> .
6.	The Ready to Install the Program window appears.
7.	Install . The drivers will be installed on your PC. For PCs with Windows Vista or Windows 7/Windows 8 operating system: If not already installed, Windows Mobile Device Center will be installed additionally.
8.	The InstallShield Wizard Completed window appears.
9.	Check I have read the instructions and click Finish to exit the wizard.


Connect USB cable to computer for the first time step-by-step

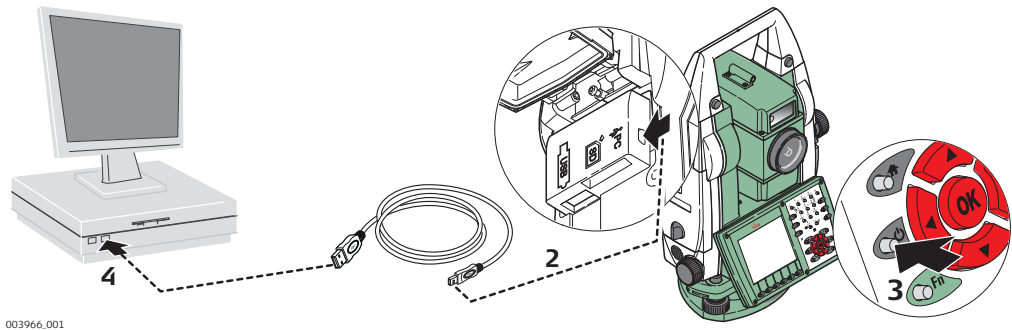




003966_001

Step	Description
1.	Start the computer.
2.	Plug the GEV223 cable into TPS instrument.
3.	Turn on the TPS instrument.
4.	Plug the GEV223 cable into the USB port of the computer. The Found New Hardware Wizard starts up automatically.
5.	Check Yes, this time only. Next> .
6.	Check Install the software automatically (Recommended). Next> . The software for Remote NDIS based LGS TS Device will be installed on your computer
7.	Finish.
8.	The Found New Hardware Wizard starts up automatically a second time.
9.	Check Yes, this time only. Next> .
10.	Check Install the software automatically (Recommended). Next> . The software for LGS TS USB Device will be installed on your computer.
11.	Finish.
	For PCs with Windows XP operating system:
12.	Run the ActiveSync installation program if not already installed.
13.	Allow USB connections inside the Connection Settings window of ActiveSync.
	For PCs with Windows Vista or Windows 7/Windows 8 operating system:
14.	Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.

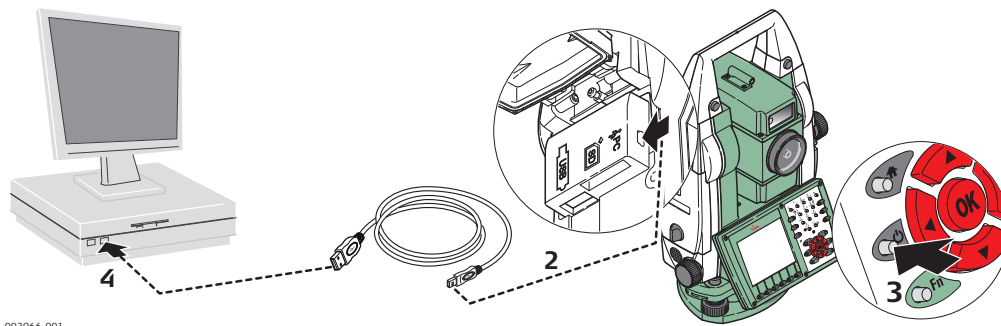

Connect to computer via USB cable step-by-step





003966_001

Step	Description
1.	Start the PC.
2.	Plug the GEV223 cable into TS instrument.
3.	Turn on the TS instrument.
4.	Plug the GEV223 cable into the USB port of the computer.
	For PCs with Windows XP operating system:
	 ActiveSync starts up automatically. If does not start automatically, start ActiveSync. If not already installed, run the ActiveSync installation program.
5.	Allow USB connections inside the Connection Settings window of ActiveSync.
6.	Click Explore in ActiveSync.
	 The folders on the TS instrument are displayed under Mobile Devices . The folders of the data storage device can be found in either of the following folders: <ul style="list-style-type: none"> • Leica Geosystems\SmartWorx Viva • SD Card • USB memory device
	For PCs with Windows Vista or Windows 7/Windows 8 operating system:
	 Windows Mobile Device Center starts up automatically. If does not start automatically, start Windows Mobile Device Center.



Turning TS instrument on


Press and hold power key () for 2 s.
 TS Instrument must have a power supply.

Turning TS instrument off

Press and hold power key () for 5 s.
 TS instrument must be on.

Power Options menu

Press and hold power key () for 2 s to open **Power Options** menu.
 Instrument must be on.

Option	Description
Turn off	Turn TS instrument off.
Stand-by	Put TS instrument into stand-by mode.  In stand-by mode, the TS instrument shuts down and reduces power consumption. Rebooting from stand-by mode is quicker than a cold start after turning off.
Lock keyboard	Locks the keyboard. Option turns to Unlock keyboard .
Turn off touch screen	Disables touch screen. Option turns to Turn on touch screen .
Reset...	Performs one of the following options: <ul style="list-style-type: none"> • Restart (restarts Windows CE) • Reset Windows CE (resets Windows CE and communication settings to factory defaults) • Reset installed software (resets settings of all installed software) • Reset Windows CE and installed software (resets Windows CE and settings of all installed software)

4.9

Batteries

4.9.1

Operating Principles

First-time Use / Charging Batteries

- The battery must be charged prior to using it for the first time.
- The permissible temperature range for charging is between 0°C to +40°C/ +32°F to +104°F. For optimal charging, we recommend charging the batteries at a low ambient temperature of +10°C to +20°C/+50°F to +68°F if possible.
- It is normal for the battery to become warm during charging. Using the chargers recommended by Leica Geosystems, it is not possible to charge the battery if the temperature is too high.
- For Li-Ion batteries, a single refreshing cycle is sufficient. We recommend carrying out a refreshing cycle when the battery capacity indicated on the charger or on a Leica Geosystems product deviates significantly from the actual battery capacity available.


Operation / Discharging

- The batteries can be operated from -20°C to +55°C/-4°F to +131°F.
- Low operating temperatures reduce the capacity that can be drawn; high operating temperatures reduce the service life of the battery.

4.9.2


Battery for the TS Instrument

Change battery step-by-step

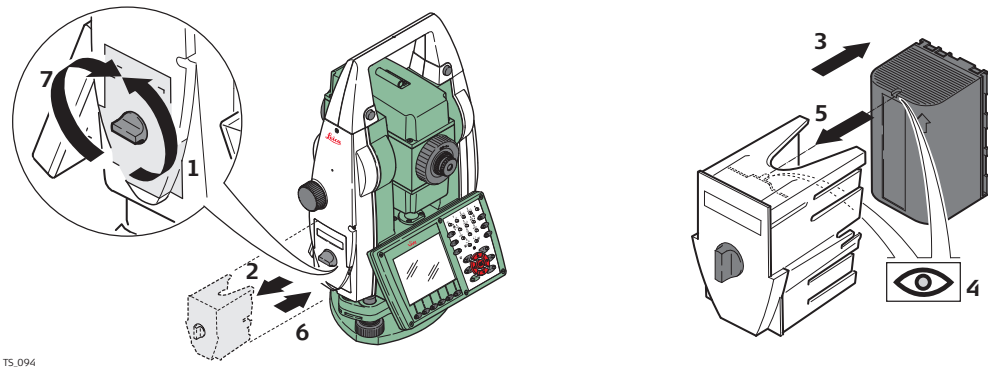

Step	Description
1.	Face the instrument so that the vertical drive screw is on the left. The battery compartment is below the vertical drive. Turn the knob to the vertical position, opening the lid of the battery compartment.
2.	Pull out the battery housing.
3.	Pull the battery from the battery housing.
4.	A pictogram of the battery is displayed inside the battery housing. This pictogram is a visual aid to assist in placing the battery correctly.
5.	Place the battery into the battery housing, ensuring that the contacts are facing outward. Click the battery into position.
6.	Place the battery housing into the battery compartment. Push the battery housing in until it fits completely into the battery compartment.
7.	Turn the knob to lock the battery compartment. Ensure that the knob is returned to its original horizontal position.


Change battery step-by-step (GS08plus)

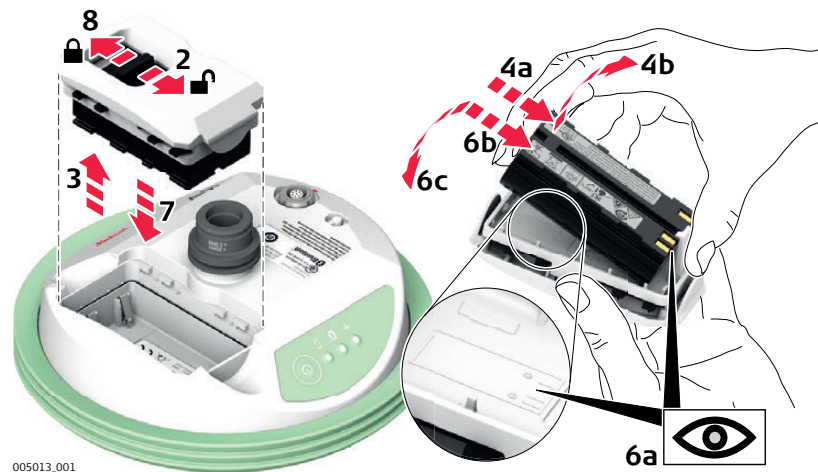

005013.001


Step	Description
1.	Turn GS08plus over to gain access to the battery compartment.
2.	Open the battery compartment by pushing the slide fastener in the direction of the arrow with the open-lock symbol.
3.	Pull out the battery housing. The battery is attached to the housing.
4.	Hold the battery housing and pull the battery from the battery housing.
5.	A polarity of the battery is displayed inside the battery housing. This is a visual aid to assist in placing the battery correctly.
6.	Place the battery onto the battery housing, ensuring that the contacts are facing outward. Click the battery into position.
7.	Place the battery housing into the battery compartment.
8.	Close the battery compartment by pushing the slide fastener in the direction of the arrow with the close-lock symbol.


**Change battery
step-by-step (GS12)**

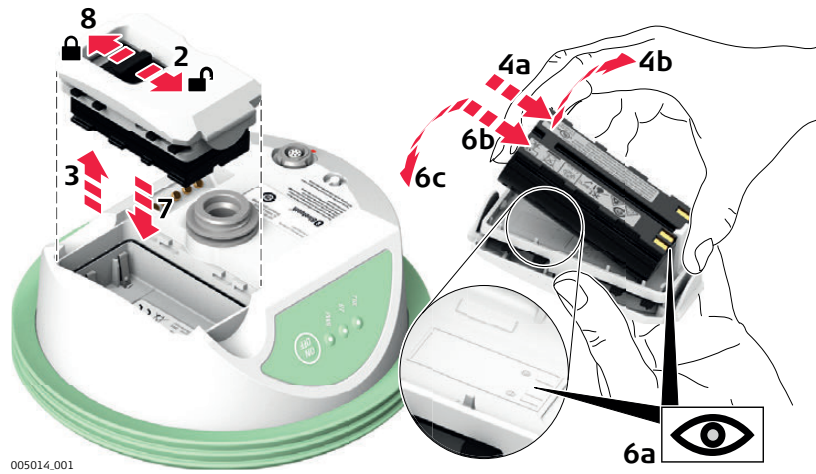


Step	Description
1.	Turn GS12 over to gain access to the battery compartment.
2.	Open the battery compartment by pushing the slide fastener in the direction of the arrow with the open-lock symbol.
3.	Pull out the battery housing. The battery is attached to the housing.
4.	Hold the battery housing and pull the battery from the battery housing.
5.	A polarity of the battery is displayed inside the battery housing. This is a visual aid to assist in placing the battery correctly.
6.	Place the battery onto the battery housing, ensuring that the contacts are facing outward. Click the battery into position.
7.	Place the battery housing into the battery compartment.
8.	Close the battery compartment by pushing the slide fastener in the direction of the arrow with the close-lock symbol.

**Change Battery
Step-by-step
(GS14)**

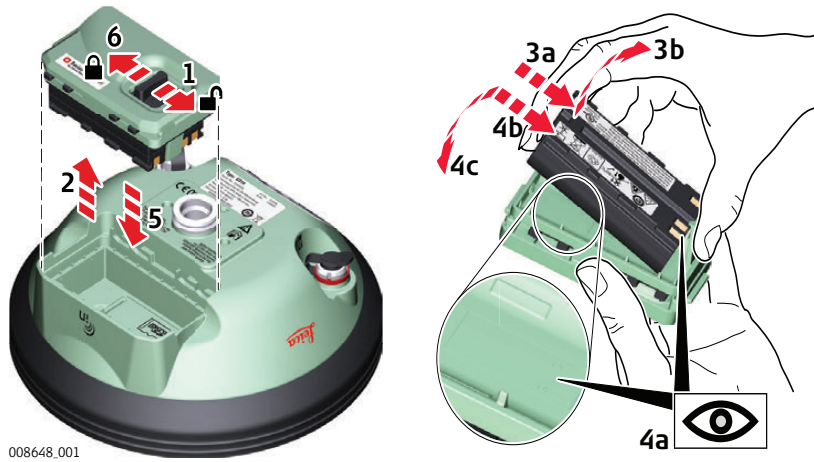


Step	Description
	The battery is inserted in the bottom part of the instrument.
1.	Push the slide fastener of the battery compartment in the direction of the arrow with the open-lock symbol.
2.	Remove the cover from the battery compartment.
3.	To remove the battery, push the battery slightly upwards and at the same time pull out the bottom part of the battery. This releases the battery from its fixed position.
4.	To insert the battery, slide the battery into the cover of the battery compartment with the battery contacts facing upwards. Push the battery downwards so that it locks into position.
5.	Insert the cover of the battery compartment into the compartment.
6.	Push the slide fastener in the direction of the arrow with the close-lock symbol.

**Change Battery
Step-by-Step
(GS15)**

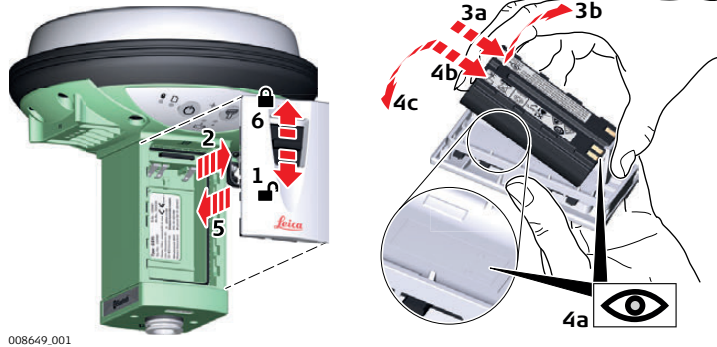

008649.001

Step	Description
	The batteries are inserted in the bottom part of the instrument.
1.	Push the slide fastener of one of the battery compartments in the direction of the arrow with the open-lock symbol.
2.	Remove the cover from the battery compartment.
3.	With the battery contacts facing upwards, slide the battery into the cover of the battery compartment.
4.	Push the battery upwards so that it locks into position.
5.	Insert the cover of the battery compartment into the compartment.
6.	Push the slide fastener in the direction of the arrow with the close-lock symbol.

4.10

Working with the Memory Device




- Keep the card dry.
- Use it only within the specified temperature range.
- Do not bend the card.
- Protect the card from direct impacts.




Failure to follow these instructions could result in data loss and/or permanent damage to the card.

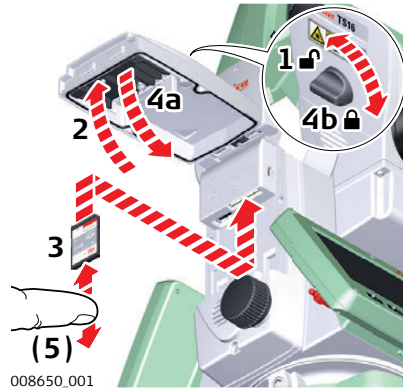

Insert and Remove an SD Card Step-by-Step




Step	Description
	The SD card is inserted into a slot inside the Communication side cover of the instrument.
1.	Turn the knob on the Communication side cover to the vertical position to unlock the communication compartment.
2.	Open the lid of the communication compartment to access the communication ports.
3.	To insert the SD card, slide it firmly into the SD slot until it clicks into position. The card must be held with the contacts at the top and facing toward the instrument. Do not force the card into the slot.
4.	To remove the SD card, gently press on the top of the card to release it from the slot.
5.	Close the lid and turn the knob to the horizontal position to lock the communication compartment.

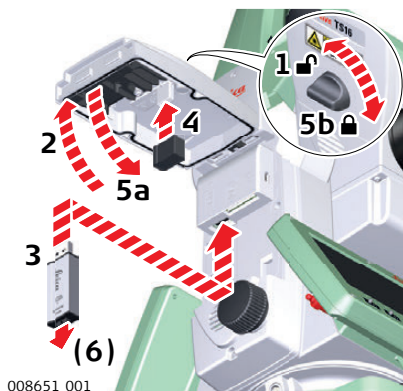Insert and Remove a USB Stick Step-by-Step






Step	Description
	The USB stick is inserted into the USB host port inside the Communication side cover of the instrument.
1.	Turn the knob on the Communication side cover to the vertical position to unlock the communication compartment.
2.	Open the lid of the communication compartment to access the communication ports.
3.	Slide the USB stick with the Leica logo facing you firmly into the USB host port until it clicks into position.  Do not force the USB stick into the port.
4.	If desired, store the lid of the USB stick on the underside of the compartment lid.
5.	Close the lid and turn the knob to the horizontal position to lock the compartment.
6.	To remove the USB stick, open the lid of the compartment and slide the USB stick out of the port.

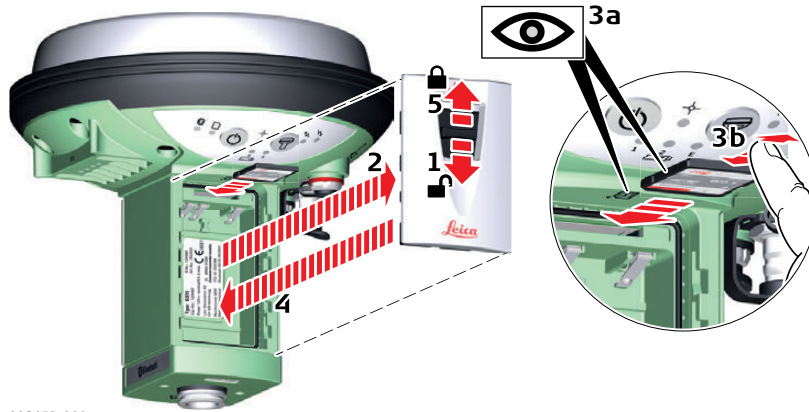**Insert and Remove
an SD Card into
GS15
Step-by-Step**



008652_001

Step	Description
	The SD card is inserted into a slot inside the battery compartment 1 of the instrument.
1.	Push the slide fastener of battery compartment 1 in the direction of the arrow with the open-lock symbol.
2.	Remove the cover from battery compartment 1.
3.	Slide the card firmly into the slot until it clicks into position.
	Do not force the card into the slot. The card should be held with the contacts upwards and facing the slot.
	To remove the card, push the slide fastener of battery compartment 1 in the direction of the arrow with the open-lock symbol and remove the cover. Gently press on the top of the card to release it from the slot. Remove the SD card.
4.	Insert the cover into battery compartment 1.
5.	Push the slide fastener in the direction of the arrow with the close-lock symbol.

4.11

Working with the RTK Device (SmartStation)

Devices Fitting into the GS15 GNSS Instrument


Digital cellular phones fitting into the GS15 GNSS instrument

Digital cellular phone	Device
Telit UC864-G	SLG1




Radios fitting into the GS15 GNSS instrument

Radio	Device
Satellite M3-TR1, transceiver	SLR5

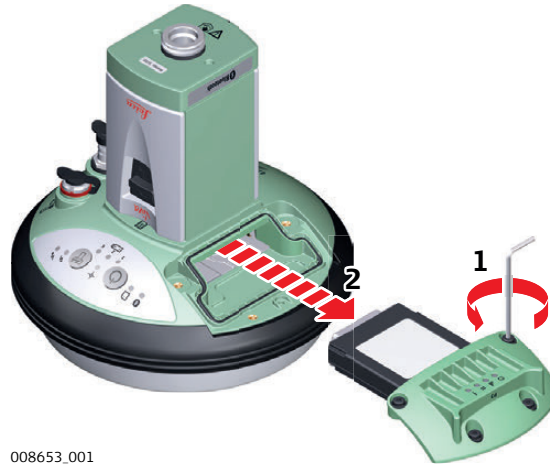
Insert and Remove a Slot-in-Device Step-by-Step



008653_001

Step	Description
	Turn over the GS15 to gain access to the slot-in-device compartment.
1.	Loosen the screws of the compartment cover with the supplied Allen key.
2.	Remove the compartment cover.
3.	Attach the slot-in-device to the compartment cover.
4.	Insert the compartment cover into the compartment (port P3).
5.	Tighten the screws.  All screws have to be tightened to ensure that the instrument is waterproof.
	For the equipment setup as real-time base station with radio, it's recommended to use an external radio antenna mounted on a second tripod. This increases the height of the radio antenna and therefore maximises radio coverage.

Insert and Remove a SIM Card Step-by-Step

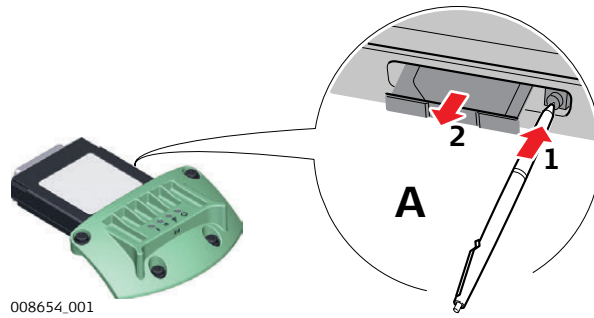

008654.001


Step	Description
	The SIM card is inserted into a slot on the side of the SLG1.
	Take the SIM card and a pen.
1.	Using the pen, press the small button of the SIM card slot to eject the SIM card holder.
2.	Take the SIM card holder out off the SLG1.
3.	Place the SIM card into the SIM card holder, the chip facing up.
4.	Insert the SIM card holder into the SIM card slot, the chip facing the connectors inside the slot.

LED Indicators

Description

Each slot-in-device for a radio or digital cellular phones has **L**ight **E**mitting **D**iode indicators on the bottom side. They indicate the basic device status.

Diagram

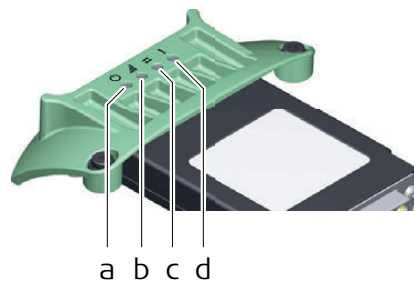

008655.001

- a) Power LED
- b) Signal strength LED
- c) Data transfer LED
- d) Mode LED, available for Satel radios

Description of the LEDs

IF the	on	is	THEN
Mode LED	SLR5 with Satel-line M3-TR1	red	the device is in the programming mode controlled from the PC via cable.
Data transfer LED	any device	off	data is not being transferred.
		flashing green	data is being transferred.


IF the	on	is	THEN	
Signal strength LED	SLG1 with Telit UC864-G	red	call is in progress.	
		red: long flash, long break	no SIM card inserted, no PIN entered or network search, user authentication or network login in progress.	
		red: short flash, long break	logged on to network, no call in progress.	
		red: flashing red, long break	GPRS PDP context activated.	
		red: long flash, short break	Packet switched data transfer is in progress.	
		off	device is off.	
	SLR5 with Satel-line M3-TR1	red	the communication link, Data Carrier Detection , is okay on the roving instrument.	
		flashing red	the communication link, Data Carrier Detection , is okay on the roving instrument, but signal is weak.	
		off	the DCD is not okay.	
	Power LED	any device	off	power is off.
			green	power is okay.

LED indicators

Description

The GS08plus/GS12 instrument has **Light Emitting Diode** indicators. They indicate the basic instrument status.

Diagram

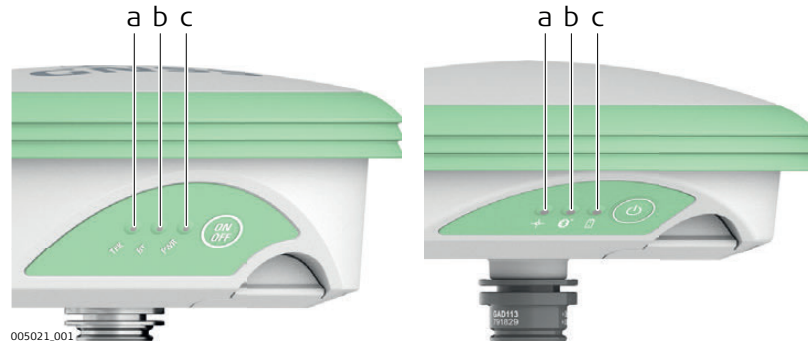

- a) Tracking LED (TRK)
- b) Bluetooth LED (BT)
- c) Power LED (PWR)

Description of the LEDs


IF the	is	THEN
TRK LED	off	No satellites are tracked.
	flashing green	Less than four satellites are tracked, a position is not yet available.
	green	Enough satellites are tracked to compute a position.
	red	GS08plus/GS12 instrument is initialising.
BT LED	green	Bluetooth is in data mode and ready for connecting.
	purple	Bluetooth is connecting.
	blue	Bluetooth has connected.
	flashing blue	Data is being transferred.
GS12 PWR LED	off	Power is off.
	green	Power is okay.
	flashing green	Power is low. The remaining time for which enough power is available depends on the type of survey, the temperature and the age of the battery.
GS08plus PWR LED	off	Power is off.
	green	Power is 100% - 20%.
	red	Power is 20% - 5%.
	flashing red	Power is low (< 5%). The remaining time for which enough power is available depends on the type of survey, the temperature and the age of the battery.

LED Indicators

Description

The GS14 GNSS instrument has Light Emitting Diode indicators. They indicate the basic instrument status.

Diagram

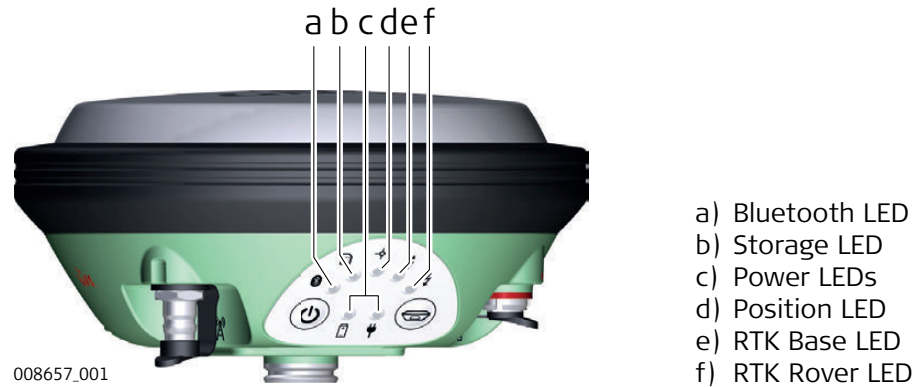


LED Indicators on GS15

Description

The GS15 has Light Emitting Diode indicators. They indicate the basic instrument status.

Diagram

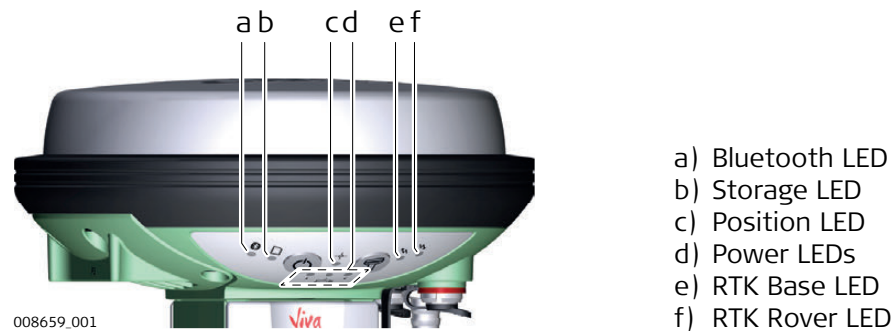

Description of the LEDs


IF the	is	THEN
Bluetooth LED	green	Bluetooth is in data mode and ready for connecting.
	purple	Bluetooth is connecting.
	blue	Bluetooth has connected.
Storage LED	off	no SD card is inserted or GS15 is switched off.
	green	SD card is inserted but no raw data is being logged.
	flashing green	raw data is being logged.
	flashing yellow	raw data is being logged but only 10% memory left.
	flashing red	raw data is being logged but only 5% memory left.
	red	SD card is full, no raw data is being logged.
	fast flashing red	no SD card is inserted but GS15 is configured to log raw data.

IF the	is	THEN
Position LED	off	no satellites are tracked or GS15 is switched off.
	flashing yellow	less than four satellites are tracked, a position is not yet available.
	yellow	a navigated position is available.
	flashing green	a code-only position is available.
	green	a fixed RTK position is available.
Power LED (active battery ^{*1})	off	battery is not connected, flat or GS15 is switched off.
	green	power is 40% - 100%.
	yellow	power is 20% - 40%. The remaining time for which enough power is available depends on the type of survey, the temperature and the age of the battery.
	red	power is 5% - 20%.
	fast flashing red	power is low (< 5%).
Power LED (passive battery ^{*2})	off	battery is not connected, flat or the GS15 is switched off.
	flashing green	power is 40% - 100%. LED is green for 1 s every 10 s.
	flashing yellow	power is 20% - 40%. LED is yellow for 1 s every 10 s.
	flashing red	power is less than 20%. LED is red for 1 s every 10 s.
RTK Rover LED	off	GS15 is in RTK base mode or GS15 is switched off.
	green	GS15 is in rover mode. No RTK data is being received at the interface of the communication device.
	flashing green	GS15 is in rover mode. RTK data is being received at the interface of the communication device.
RTK Base LED	off	GS15 is in RTK rover mode or GS15 is switched off.
	green	GS15 is in RTK base mode. No RTK data is being passed to the RX/TX interface of the communication device.
	flashing green	GS15 is in RTK base mode. Data is being passed to the RX/TX interface of the communication device.

*1 The battery, which currently powers the GS15 GNSS instrument.

*2 Other batteries, which are inserted or connected but are not currently power the GS15 GNSS instrument.

Distance measurement

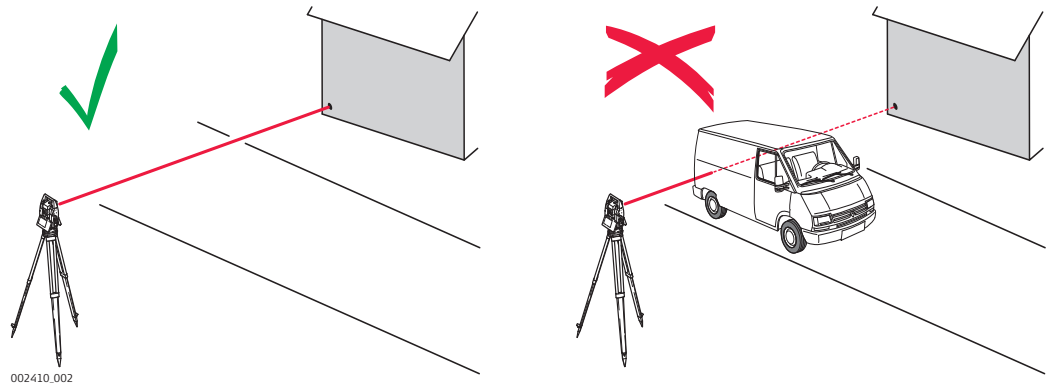

When measurements are being made using the red laser EDM, the results can be influenced by objects passing between the EDM and the intended target surface. This occurs because reflectorless measurements are made to the first surface returning sufficient energy to allow the measurement to take place. For example, if the intended target surface is the surface of a building, but a vehicle passes between the EDM and the target surface as the measurement is triggered, the measurement may be made to the side of the vehicle. The result is the distance to the vehicle, not to the surface of the building.

If using the long range measurement mode (> 1000 m, > 3300 ft) to prisms, and an object passes within 30 m of the EDM as the measurement is triggered, the distance measurement may be similarly effected due to the strength of the laser signal.



Very short distances can also be measured reflectorless in **Prism** mode to well reflecting natural targets. The distances are corrected with the additive constant defined for the active reflector.

**CAUTION**

Due to laser safety regulations and measuring accuracy, using the Long Range Reflectorless EDM is only allowed to prisms that are more than 1000 m (3300 ft) away.



Accurate measurements to prisms should be made in **Prism** mode.



When a distance measurement is triggered, the EDM measures to the object which is in the beam path at that moment. If a temporary obstruction, for example a passing vehicle, heavy rain, fog or snow is between the instrument and the point to be measured, the EDM may measure to the obstruction.



Do not measure with two instruments to the same target simultaneously to avoid getting mixed return signals.

5 Check & Adjust

5.1 Overview

Description Leica Geosystems instruments are manufactured, assembled and adjusted to the best possible quality. Quick temperature changes, shock or stress can cause deviations and decrease the instrument accuracy. It is therefore recommended to check and adjust the instrument from time to time. This check and adjust can be done in the field by running through specific measurement procedures. The procedures are guided and must be followed carefully and precisely as described in the following chapters. Some other instrument errors and mechanical parts can be adjusted mechanically.

Electronic adjustment The following instrument errors can be checked and adjusted electronically:

- l, t Compensator longitudinal and transversal index errors
- i Vertical index error, related to the standing axis
- c Horizontal collimation error, also called line of sight error
- a Tilting axis error

If the compensator and the horizontal corrections are activated in the instrument configuration, every angle measured in the daily work is corrected automatically . Select **Main Menu: Instrument\TPS settings\Level bubble & compensator** to check whether the tilt correction and the horizontal correction are turned on.

View current adjustment errors To view the adjustment errors currently used, select **Main Menu: User\Check & Adjust** to open the **Check & Adjust Wizard**. Select the option **View the current values**.

Mechanical Adjustment The following instrument parts can be adjusted mechanically:

- Circular level on instrument and tribrach
- Optical plummet - option on tribrach
- Allen screws on tripod

Precise Measurements To get precise measurements in the daily work, it is important:

- To check and adjust the instrument from time to time.
- To take high precision measurements during the check and adjust procedures.
- To measure targets in two faces. Some of the instrument errors are eliminated by averaging the angles from both faces.



During the manufacturing process, the instrument errors are carefully determined and set to zero. As mentioned above, these errors can change and it is highly recommended to redetermine them in the following situations:

- Before the first use
- Before every high precision survey
- After rough or long transportation
- After long working periods
- After long storage periods
- If the temperature difference between current environment and the temperature at the last calibration is more than 20°C

Summary of errors to be adjusted electronically

Instrument error	Effects Hz	Effects V	Elimination with two face measurement	Automatically corrected with proper adjustment
c - Line of sight error	✓	---	✓	✓
a - Tilting axis error	✓	---	✓	✓
l - Compensator index error	---	✓	✓	✓
t - Compensator index error	✓	---	✓	✓
i - Vertical index error	---	✓	✓	✓

5.2

Preparation



Before determining the instrument errors, the instrument has to be levelled using the electronic level. The tribrach, the tripod and the underground should be stable and secure from vibrations or other disturbances.



The instrument should be protected from direct sunlight to avoid thermal warming. It is also recommended to avoid strong heat shimmer and air turbulence. The best conditions are early in the morning or with overcast sky.



Before starting to work, the instrument has to become acclimatised to the ambient temperature. Approximately two minutes per °C of temperature difference from storage to working environment, but at least 15 min, should be taken into account.

Next Step

IF the task is to	THEN
adjust a combination of instrument errors	Refer to "5.3 Combined Adjustment (l, t, i and c)".
adjust the tilting axis	Refer to "5.4 Tilting Axis Adjustment (a)".
adjust the circular level	Refer to "5.5 Adjusting the Circular Level of the Instrument and Tribrach".
adjust the laser/optical plummet	Refer to "5.7 Inspecting the Laser Plummet of the Instrument".
adjust the tripod	Refer to "5.8 Servicing the Tripod".

5.3

Combined Adjustment (l, t, i and c)


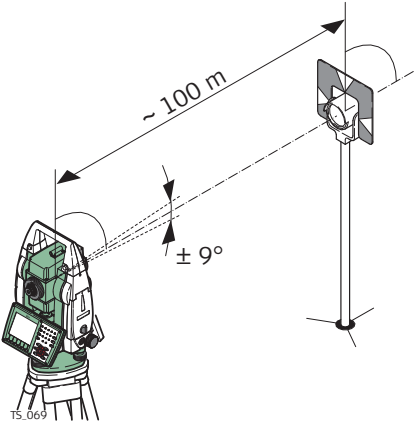
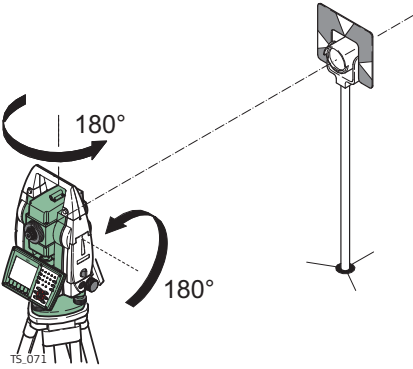


Description


The combined adjustment procedure determines the following instrument errors in one process:

l, t	Compensator longitudinal and transversal index errors
i	Vertical index error, related to the standing axis
c	Horizontal collimation error, also called line of sight error

Combined adjustment procedure step-by-step

The following table explains the most common settings.

Step	Description
1.	Main Menu: User\Check & Adjust
2.	Check & Adjust Wizard Select the option: Check & Adjust the compensator, index error & line of sight error
3.	Next
4.	<p>Face I measurement</p> <p> Use a clean Leica standard prism as the target. Do not use a 360° prism.</p>  <p>Aim the telescope accurately at a target at about 100 m distant. The target must be positioned within $\pm 9^\circ/\pm 10$ gon of the horizontal plane. The procedure can be started in any face.</p>
5.	<p>Meas to measure and to continue to the next screen.</p>  <p>Instrument guides to the other face.</p> <p> The fine pointing has to be performed manually in both faces.</p>
6.	<p>Face II measurement</p> <p>Meas to measure the same target in the other face and to calculate the instrument errors.</p>
	If one or more errors are bigger than the predefined limits, the procedure must be repeated. All measurements of the current run are rejected and none of them is averaged with the results from previous runs.

Step	Description
7.	<p>Adjustment Status</p> <p>No. of measurements: Shows the number of runs completed. One run consists of a measurement in face I and face II.</p> <p>σ I Comp: and similar lines show the standard deviations of the determined adjustment errors. The standard deviations can be calculated from the second run onwards.</p>
	Measure at least two runs.
8.	Next to continue with the check & adjust procedure.
9.	<p>Select Add another calibration loop if more runs have to be added. Next and continue with step 4.</p> <p>OR</p> <p>Select Finish the calibration & store the results to finish the calibration process. Next to view the adjustment results.</p>
10.	<p>Select Finish to accept the results. No more runs can be added later.</p> <p>OR</p> <p>Select Redo to decline all measurements and to repeat all calibration runs.</p> <p>OR</p> <p>Back returns to the previous screen.</p>

Next Step

IF the results are	THEN
to be stored	If the Use status is set to Yes, Next overwrites the old adjustment errors with the new ones.
to be determined again	Redo rejects all new determined adjustment errors and repeats the whole procedure. Refer to paragraph "Combined adjustment procedure step-by-step".

5.4

Tilting Axis Adjustment (a)


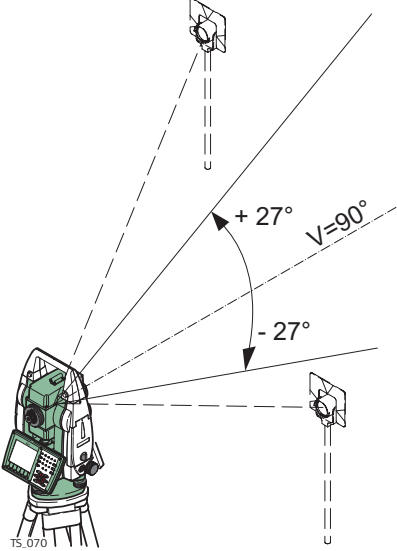
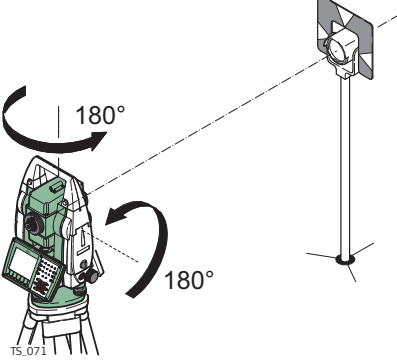


Description


This adjustment procedure determines the following instrument error:

a Tilting axis error

Determination of tilting axis error step-by-step

The following table explains the most common settings.


Step	Description
	Determine the horizontal collimation error (c) before starting this procedure.
1.	Main Menu: User\Check & Adjust
2.	Check & Adjust Wizard Select the option: Check & adjust the tilting axis
3.	<p>Face I measurement</p>  <p>Aim the telescope accurately at a target at about 100 m distance or less if not possible. The target must be positioned at least 27°/30 gon above or beneath the horizontal plane. The procedure can be started in any telescope face.</p>
4.	<p>Meas to measure and to continue to the next screen.</p>  <p>Instrument guides to the other face.</p> <p> The fine pointing must be performed manually in both faces.</p>
5.	<p>Face II measurement</p> <p>Meas to measure the same target in the other face and to calculate the tilting axis error.</p>
	If the error is bigger than the predefined limit, the procedure must be repeated. The tilting axis measurements of the current run are then rejected and not averaged with the results from previous runs.
6.	<p>Adjustment Status</p> <p>No. of measurements: Shows the number of runs completed. One run consists of a measurement in face I and face II.</p>

Step	Description
	σ a T-axis: shows the standard deviation of the determined tilting axis error. The standard deviation can be calculated from the second run onwards.
	Measure at least two runs.
7.	Next to continue with the check & adjust procedure.
8.	Select Add another calibration loop if more runs have to be added. Next and continue with step 3. OR Select Finish the calibration & store the results to finish the calibration process. No more runs can be added later. Next to view the adjustment results.
9.	Select Finish to accept the results. No more runs can be added later. OR Select Redo to decline all measurements and to repeat all calibration runs.


Next Step

IF the results are	THEN
to be stored	Next overwrites the old tilting axis error with the new one.
to be determined again	Redo rejects the new determined tilting axis error and repeats the whole procedure. Refer to paragraph "Determination of tilting axis error step-by-step".

Adjusting the circular level step-by-step

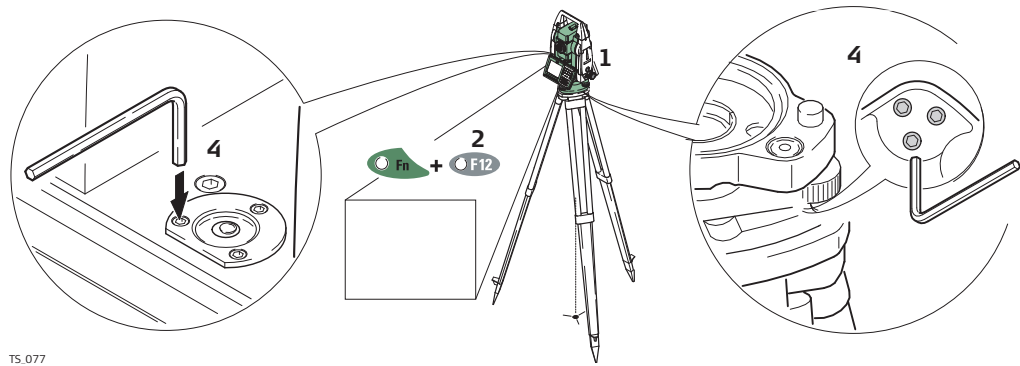


TS_077


Step	Description
1.	Place and secure the instrument into the tribrach and onto a tripod.
2.	Using the tribrach footscrews, level the instrument with the electronic level.
3.	Select Instrument\TPS settings\Level bubble & compensator to access the Level Bubble & Compensator screen.
4.	Check the position of the circular level on the instrument and tribrach.
5.	a) If both circular levels are centred, no adjustments are necessary
	b) If one or both circular levels are not centred, adjust as follows:
	Instrument: If it extends beyond the circle, use the supplied allen key to centre it with the adjustment screws. Turn the instrument by 200 gon (180°). Repeat the adjustment procedure if the circular level does not stay centred.
	Tribrach: If it extends beyond the circle, use the supplied allen key to centre it with the adjustment screws.
	After the adjustments, all adjusting screws must have the same tightening tension and no adjusting screw should be loose.

5.6

Adjusting the Circular Level of the Prism Pole

Adjusting the Circular Level Step-by-Step

Step	Description
1.	Suspend a plumb line.
2.	Use a pole bipod, to align the prism pole parallel to the plumb line.
3.	Check the position of the circular level on the prism pole.
4.	a) If the circular level is centred, no adjustment is necessary. b) If the circular level is not centred, use an allen key to centre it with the adjustment screws.
	After the adjustments, all adjusting screws must have the same tightening tension and no adjusting screw should be loose.

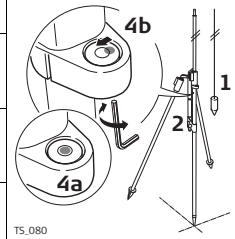


5.7

Inspecting the Laser Plummet of the Instrument




The laser plummet is located in the vertical axis of the instrument. Under normal conditions of use, the laser plummet does not need adjusting. If an adjustment is necessary due to external influences, return the instrument to any Leica Geosystems authorised service workshop.

Inspecting the laser plummet step-by-step

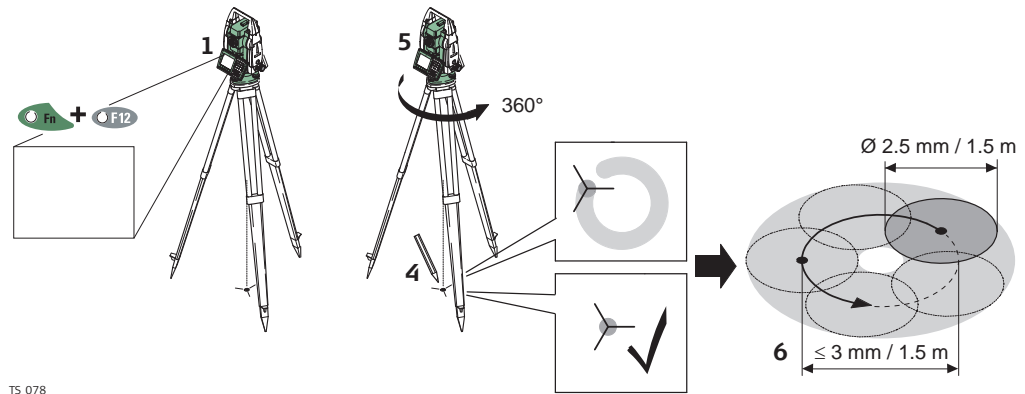

TS_078


The following table explains the most common settings.

Step	Description
1.	Place and secure the instrument into the tribrach and onto a tripod.
2.	Using the tribrach footscrews, level the instrument with the electronic level.
3.	Select Instrument\TPS settings\Level bubble & compensator to access the Level Bubble & Compensator screen.
4.	The laser plummet is switched on when the Level Bubble & Compensator screen is entered. Adjust the laser plummet intensity. Inspection of the laser plummet should be carried out on a bright, smooth and horizontal surface, like a sheet of paper.
5.	Mark the centre of the red dot on the ground.
6.	Turn the instrument through 360° slowly, carefully observing the movement of the red laser dot.
	The maximum diameter of the circular movement described by the centre of the laser point must not exceed 3 mm at a distance of 1.5 m.


Step	Description
7.	If the centre of the laser dot describes a perceptible circular movement, or moves more than 3 mm away from the point which was first marked, an adjustment may be required. Inform your nearest Leica Geosystems authorised service workshop. Depending on brightness and surface, the diameter of the laser dot can vary. At 1.5 m, it is about 2.5 mm.

5.8 Servicing the Tripod

Servicing the Tripod Step-by-Step

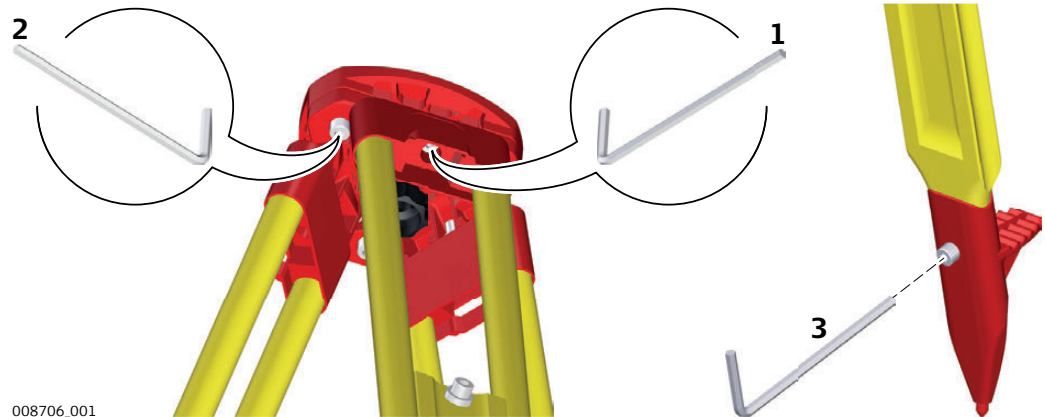

The following table explains the most common settings.

Step	Description
	The connections between metal and timber components must always be firm and tight.
1.	Tighten the leg cap screws moderately, with the supplied allen key.
2.	Tighten the articulated joints on the tripod head enough to keep the tripod legs open when lifting the tripod off the ground.
3.	Tighten the allen screws of the tripod legs.

6 Care and Transport

6.1 Transport

Transport in the field	<p>When transporting the equipment in the field, always make sure that you</p> <ul style="list-style-type: none">• either carry the product in its original transport container,• or carry the tripod with its legs splayed across your shoulder, keeping the attached product upright.
Transport in a road vehicle	<p>Never carry the product loose in a road vehicle, as it can be affected by shock and vibration. Always carry the product in its transport container, original packaging or equivalent and secure it.</p>
Shipping	<p>When transporting the product by rail, air or sea, always use the complete original Leica Geosystems packaging, transport container and cardboard box, or its equivalent, to protect against shock and vibration.</p>
Shipping, transport of batteries	<p>When transporting or shipping batteries, the person responsible for the product must ensure that the applicable national and international rules and regulations are observed. Before transportation or shipping, contact your local passenger or freight transport company.</p>
Field adjustment	<p>Periodically carry out test measurements and perform the field adjustments indicated in the User Manual, particularly after the product has been dropped, stored for long periods or transported.</p>

6.2 Storage

Product	<p>Respect the temperature limits when storing the equipment, particularly in summer if the equipment is inside a vehicle. Refer to "7 Technical Data" for information about temperature limits.</p>
Field adjustment	<p>After long periods of storage inspect the field adjustment parameters given in this user manual before using the product.</p>
Li-Ion batteries	<ul style="list-style-type: none">• Refer to "Technical Data" for information about storage temperature range.• Remove batteries from the product and the charger before storing.• After storage recharge batteries before using.• Protect batteries from damp and wetness. Wet or damp batteries must be dried before storing or use.• A storage temperature range of 0°C to +30°C / +32°F to +86°F in a dry environment is recommended to minimize self-discharging of the battery.• At the recommended storage temperature range, batteries containing a 30% to 50% charge can be stored for up to one year. After this storage period the batteries must be recharged.

6.3

Cleaning and Drying

Product and accessories


- Blow dust off lenses and prisms.
 - Never touch the glass with your fingers.
 - Use only a clean, soft, lint-free cloth for cleaning. If necessary, moisten the cloth with water or pure alcohol. Do not use other liquids; these can attack the polymer components.
-

Fogging of prisms

Prisms that are cooler than the ambient temperature tend to fog. It is not enough simply to wipe them. Keep them for some time inside your jacket or in the vehicle to allow them to adjust to the ambient temperature.

Damp products

Dry the product, the transport container, the foam inserts and the accessories at a temperature not greater than 40°C /104°F and clean them. Remove the battery cover and dry the battery compartment. Do not repack until everything is completely dry. Always close the transport container when using in the field.

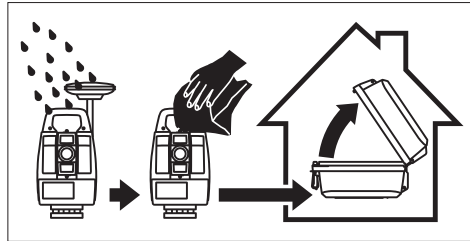

Cables and plugs

Keep plugs clean and dry. Blow away any dirt lodged in the plugs of the connecting cables.

Connectors with dust caps

Wet connectors must be dry before attaching the dust cap.

7 Technical Data

7.1 Angle Measurement

Accuracy


Available angular accuracies	Standard deviation Hz, V, ISO 17123-3	Display resolution			
		["]	[°]	[mgon]	[mil]
1	0.3	0.1	0.0001	0.1	0.01
2	0.6	0.1	0.0001	0.1	0.01
3	1.0	0.1	0.0001	0.1	0.01
5	1.5	0.1	0.0001	0.1	0.01

Characteristics

Absolute, continuous, diametric.

7.2 Distance Measurement with Reflectors

Range

Reflector	Range A		Range B		Range C	
	[m]	[ft]	[m]	[ft]	[m]	[ft]
Standard prism (GPR1)	1800	6000	3000	10000	3500	12000
Three standard prisms (GPR1)	2300	7500	4500	14700	5400	17700
360° prism (GRZ4, GRZ122)	800	2600	1500	5000	2000	7000
360° Mini prism (GRZ101)	450	1500	800	2600	1000	3300
Mini prism (GMP101)	800	2600	1200	4000	2000	7000
Reflector tape (GZM31) 60 mm x 60 mm	150	500	250	800	250	800
Machine Automation power prism (MPR122)  For Machine Control purposes only!	800	2600	1500	5000	2000	7000

Shortest measuring distance: 1.5 m

Atmospheric conditions

Range A: Strong haze, visibility 5 km; or strong sunlight, severe heat shimmer

Range B: Light haze, visibility about 20 km; or moderate sunlight, slight heat shimmer

Range C: Overcast, no haze, visibility about 40 km; no heat shimmer



Measurements can be made to reflector tapes over the entire range without external ancillary optics.

Accuracy

Accuracy refers to measurements to standard prisms.

EDM measuring mode	std. dev. ISO 17123-4, standard prism	std. dev. ISO 17123-4, tape	Measurement time, typical [s]
Single	1 mm + 1.5 ppm	3 mm + 2 ppm	2.4
Single (fast)	2 mm + 1.5 ppm	3 mm + 2 ppm	0.8
Continuous	3 mm + 1.5 ppm	3 mm + 2 ppm	< 0.15

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy.
The display resolution is 0.1 mm.

Characteristics

Principle:	Phase measurement
Type:	Coaxial, visible red laser
Carrier wave:	658 nm
Measuring system:	System analyser basis 100 MHz - 150 MHz

7.3

Distance Measurement without Reflectors

Range

Type	Kodak Gray Card	Range D		Range E		Range F	
		[m]	[ft]	[m]	[ft]	[m]	[ft]
R500	White side, 90 % reflective	250	820	400	1312	>500	>1640
R500	Grey side, 18 % reflective	100	330	150	490	>250	>820
R1000	White side, 90 % reflective	800	2630	1000	3280	>1000	>3280
R1000	Grey side, 18 % reflective	400	1320	500	1640	>500	>1640

Range of Measurement: 1.5 m - 1200 m
Display unambiguous: up to 1200 m

Atmospheric conditions

D:	Object in strong sunlight, severe heat shimmer
E:	Object in shade, sky overcast
F:	Underground, night and twilight

Accuracy

Standard measuring	std. dev. ISO 17123-4	Measure time, typical [s]	Measure time, maximum [s]
0 m - 500 m	2 mm + 2 ppm	3 - 6	12
>500 m	4 mm + 2 ppm	3 - 6	12

Object in shade, sky overcast. Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy. The display resolution is 0.1 mm.

Characteristics

Type:	Coaxial, visible red laser
Carrier wave:	658 nm
Measuring system:	System analyser basis 100 MHz - 150 MHz

Laser dot size

Distance [m]	Laser dot size, approximately [mm]
at 30	7 x 10
at 50	8 x 20
at 100	16 x 25

7.4**Distance Measurement - Long Range (LO mode)****Range**

The range of the long range measurements is the same for R500 and R1000.

Reflector	Range A		Range B		Range C	
	[m]	[ft]	[m]	[ft]	[m]	[ft]
Standard prism (GPR1)	2200	7300	7500	24600	>10000	>33000

Range of measurement:

1000 m to 12000 m

Display unambiguous:

up to 12000 m

Atmospheric conditions

Range A: Strong haze, visibility 5 km; or strong sunlight, severe heat shimmer

Range B: Light haze, visibility about 20 km; or moderate sunlight, slight heat shimmer

Range C: Overcast, no haze, visibility about 40 km; no heat shimmer

Accuracy

Standard measuring	std. dev. ISO 17123-4	Measure time, typical [s]	Measure time, maximum [s]
Long Range	5 mm + 2 ppm	2.5	12

Beam interruptions, severe heat shimmer and moving objects within the beam path can result in deviations of the specified accuracy. The display resolution is 0.1 mm.

Characteristics

Principle: Phase measurement

Type: Coaxial, visible red laser

Carrier wave: 658 nm

Measuring system: System analyser basis 100 MHz - 150 MHz

7.5**Overview Camera****Overview camera**

Sensor: 5 Mpixel CMOS sensor

Focal length: 21 mm

Field of view: 15.5° x 11.7° (19.4° diagonal)

Frame rate: ≤20 frames per second

Focus: 2 m (6.6 ft) to infinity at zoom level 1 x

7.5 m (24.6 ft) to infinity at zoom level 4 x

Image storage: JPEG up to 5 Mpixel (2560 x 1920)

Zoom: 4-step (1x, 2x, 4x, 8x)

Whitebalance: Automatic and user configurable

Brightness: Automatic and user configurable

7.6

SmartStation

7.6.1

SmartStation Accuracy



Measurement precision and accuracy in position and accuracy in height are dependent upon various factors including the number of satellites tracked, constellation geometry, observation time, ephemeris accuracy, ionospheric disturbance, multipath and resolved ambiguities. Figures quoted assume normal to favourable conditions.

Accuracy

Position accuracy:

Horizontal: 5 mm + 0.5 ppm

Vertical: 10 mm + 0.5 ppm

When used within reference station networks the position accuracy is in accordance with the accuracy specifications provided by the reference station network.

Initialisation

Method:

Leica SmartCheck+ technology

Reliability of initialisation:

Better than 99.99 %

Time of initialisation:

Typically 8 s*

Range:

Up to 50 km*

* Might vary due to atmospheric conditions, signal multipath, obstructions, signal geometry and number of tracked signals.


RTK Data Formats

Formats for data reception: Leica proprietary GPS / Glonass and GNSS real-time data formats, CMR, CMR+, RTCM V2.1 / 2.2 / 2.3 / 3.1 / 3.2

7.6.2

SmartStation Dimensions

SmartStation Dimensions

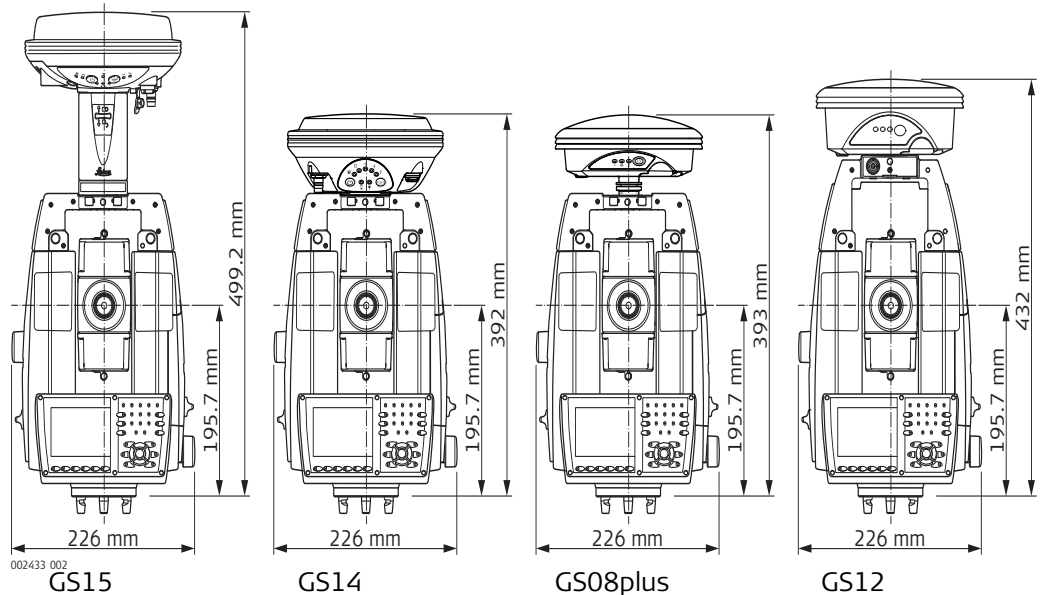

Description and use The SmartAntenna is selected for use based upon the application. The table gives a description and the intended use of the SmartAntenna.

Type	Description	Use
GS08plus	L1, L2 GPS, GLONASS SmartTrack+ antenna.	With CS10 field controller or Leica Viva TPS instruments.
GS12	L1, L2, L5 GPS, GLONASS, Galileo SmartTrack+ antenna.	With CS10/CS15 field controller or Leica Viva TPS instruments.
GS14	GPS, GLONASS, Galileo, BeiDou SmartTrack+ antenna with built in groundplane.	With CS10/CS15 field controller or Leica Viva TPS instruments.
GS15	GPS, GLONASS, Galileo, BeiDou SmartTrack+ antenna with built in groundplane.	With CS10/CS15 field controller or Leica Viva TPS instruments.

Dimensions

Type	Height [m]	Diameter [m]
GS08plus	0.071	0.186
GS12	0.089	0.186
GS14	0.090	0.190
GS15	0.198	0.196

Mounting

5/8" Whitworth

Weight

Instrument weights without battery and radio:

Type	Weight [kg]/[lbs]
GS08plus	0.70/1.54
GS12	0.94/2.07
GS14	0.93/2.04
GS15	1.34/2.95

Power

Power consumption:

- GS08plus: 2.0 W typically
- GS12: 1.8 W typically
- GS14, radio excluded: 2.0 W typically, 166 mA with external battery, 270 mA with internal battery
- GS15, radio excluded: 3.2 W typically

External supply voltage: Nominal 12 V DC (---, GEV71 car battery cable to a 12 V car battery), voltage range 10.5 V-28 V DC

Internal Battery

Type: Li-Ion
 Voltage: 7.4 V
 Capacity: GEB212: 2.6 Ah
 Typical operating time: GEB212: 6.5 h

Electrical data

Type	GS08plus	GS12	GS14	GS15
Frequency				
GPS L1 1575.42 MHz	✓	✓	✓	✓
GPS L2 1227.60 MHz	✓	✓	✓	✓
GPS L5 1176.45 MHz	-	✓	-	✓
GLONASS L1 1602.5625-1611.5 MHz	✓	✓	✓	✓
GLONASS L2 1246.4375-1254.3 MHz	✓	✓	✓	✓
Galileo E1 1575.42 MHz	-	✓	-	✓
Galileo E5a 1176.45 MHz	-	✓	-	✓
Galileo E5b 1207.14 MHz	-	✓	-	✓
Galileo Alt-BOC 1191.795 MHz	-	✓	-	✓
Gain	37 dBi	Typically 27 dBi	27 dBi	Typically 27 dBi
Noise Figure	< 3 dBi	Typically < 2 dBi	< 2 dBi	Typically < 2 dBi



Galileo Alt-BOC covers bandwidth of Galileo E5a and E5b.

Environmental specifications

Temperature

Operating temperature [°C]	Storage temperature [°C]
-40 to +65	-40 to +80
Bluetooth: -30 to +65	

Protection against water, dust and sand

Protection	
GS08plus/GS12/GS15	GS14
IP67 (IEC 60529)	IP68 (IEC 60529)
Dusttight	Dusttight
Protected against water jets	Protected against continuous immersion in water
Waterproof to 1 m temporary immersion	Tested for 2 hours in 1.40 m depth

Humidity

Protection
Up to 100 %
The effects of condensation are to be effectively counteracted by periodically drying out the antenna.

7.7

Conformity to National Regulations

7.7.1

TS11

Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product TS11 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity may be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EU Member state.

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance.
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency band

2402 - 2480 MHz

Output power

Bluetooth:
4 mW max.

Antenna

Type:	Internal Microstrip antenna
Gain:	1.5 dBi

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product GS08plus is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance.
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency band

Type	Frequency band [MHz]
GS08plus	1227.60
	1575.42
	1246.4375 - 1254.3
	1602.4375 - 1611.5
Bluetooth	2402 - 2480

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	5 (Class 1)

Antenna

GNSS	Internal GNSS antenna element (receive only)
Bluetooth	Type: Internal Microstrip antenna Gain: 1.0 dBi

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product GS12 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance.
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency band

Type	Frequency band [MHz]
GS12	1176.45 1191.795 1207.14 1227.60 1246.4375 - 1254.3 1575.42 1602.4375 - 1611.5
Bluetooth	2402 - 2480

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	5 (Class 1)

Antenna

GNSS	Internal GNSS antenna element (receive only)
Bluetooth	Type: Internal Microstrip antenna Gain: 1.5 dBi

Conformity to national regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product GS14 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 2 equipment according European Directive 1999/5/EC (R&TTE)

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance (applicable for Japan).
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency band

Type	Frequency band [MHz]
GS14	1227.60 1246.4375 - 1254.3 1575.42 1602.5625 - 1611.5
GS14, Bluetooth	2402 - 2480
GS14, Radio	403 - 473
GS14, 2G GSM	Quad-Band EGSM 850 / 900 / 1800 / 1900
GS14, 3.75G GSM/UMTS	Quad-Band GSM & Penta-Band UMTS 800 / 850 / 900 / 1900 / 2100
GS14, 3.75G GSM/UMTS/CDMA	Quad-Band GSM & Penta-Band UMTS & Tri-Band CDMA 800 / 1900

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	5
Radio	1000
2G GSM EGSM850/900	2000
2G GSM GSM1800/1900	1000
2G GSM	GPRS multi-slot class 10 (max. 2/8 TX)
3.75G GSM	E(dge)GPRS multi-slot class 12 (max. 4/8 TX)
3.75G UMTS 800/850/900/1900/2100	250
CDMA BC0 & BC10 (800)/BC1 (1900)	250

Antenna

Type	Antenna	Gain [dBi]
GNSS	Internal GNSS antenna element (receive only)	-
Bluetooth	Internal Microstrip antenna	2 max.
UHF	External antenna	-
GSM/UMTS/CDMA	Integrated antenna	0 max. @ 800 / 850 / 900 3 max. @ 1800 / 1900 / 2100

7.7.5

GS15

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product GS15 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance (applicable for Japan).
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency band

Type	Frequency band [MHz]
GS15	1176.45 1191.795 1207.14 1227.60 1246.4375 - 1254.3 1561.098 1575.42 1602.4375 - 1611.5
Bluetooth	2402 - 2480

Output power

Type	Output power [mW]
GNSS	Receive only
Bluetooth	5 (Class 1)

Antenna

Type	Antenna	Gain [dBi]	Connector	Frequency band [MHz]
GNSS	Internal GNSS antenna element (receive only)	-	-	-
Bluetooth	Internal Microstrip antenna	1.5	-	-

Conformity to National Regulations

- FCC Part 15 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the product SLR5 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity can be consulted at <http://www.leica-geosystems.com/ce>.



Class 2 equipment according European Directive 1999/5/EC (R&TTE)

- The conformity for countries with other national regulations not covered by the FCC part 15 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance.
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency band

403 MHz - 470 MHz

Output power

SLR5: 0.5 W-1.0 W

Antenna

Type	Internal	GAT1	GAT2
Frequency band [MHz]	400 - 470	400 - 435	435 - 470
Type	Internal	Detachable $\lambda/2$ antenna	Detachable $\lambda/2$ antenna
Connector	-	TNC	TNC

Specific Absorption Rate (SAR)

The product meets the limits for the maximum permissible exposure of the guide-lines and standards which are force in this respect. The product must be used with the recommended antenna. A separation distance of at least 20 centimetres should be kept between the antenna and the body of the user or nearby person within the intended application.

Conformity to national regulations

- FCC Part 15, 22 and 24 (applicable in US)
- Hereby, Leica Geosystems AG, declares that the SLG1 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC and other applicable European Directives. The declaration of conformity may be consulted at <http://www.leica-geosystems.com/ce>.



Class 1 equipment according European Directive 1999/5/EC (R&TTE) can be placed on the market and be put into service without restrictions in any EEA Member state.

- The conformity for countries with other national regulations not covered by the FCC part 15, 22 and 24 or European directive 1999/5/EC has to be approved prior to use and operation.
- Japanese Radio Law and Japanese Telecommunications Business Law Compliance.
 - This device is granted pursuant to the Japanese Radio Law and the Japanese Telecommunications Business Law.
 - This device should not be modified (otherwise the granted designation number will become invalid).

Frequency band

UMTS/HSDPA (WCDMA/FDD) 850 MHz/ 1900 MHz/ 2100 MHz
 Quad-Band EGSM 850 MHz/ 900 MHz/ 1800 MHz/ 1900 MHz
 GPRS multi-slot class 12
 EDGE multi-slot class 12

Output power

EGSM850/900: 2 W
 GSM1800/1900: 1 W
 UMTS2100: 0.25 W
 EDGE850/900: 0.5 W
 EDGE1800/1900: 0.4 W

Antenna

Type	GS15 Internal	GAT3	GAT5	GAT18
Frequency band [MHz]	824 - 894 / 890 - 960 / 1710 - 1880 / 1850 - 1990 / 1920 - 2170	890 - 960 / 1710 - 1880 / 1920 - 2170	824 - 894 / 1850 - 1990	824 - 894 / 890 - 960 / 1710 - 1880 / 1850 - 1990 / 1920 - 2170
Type	Internal	Detachable $\lambda/2$ antenna	Detachable $\lambda/2$ antenna	Detachable $\lambda/2$ antenna
Connector	-	TNC	TNC	TNC




Specific Absorption Rate (SAR)

The product meets the limits for the maximum permissible exposure of the guide-lines and standards which are force in this respect. The product must be used with the recommended antenna. A separation distance of at least 20 centimetres should be kept between the antenna and the body of the user or nearby person within the intended application.

Dangerous Goods Regulations

The products of Leica Geosystems are powered by Lithium batteries.

Lithium batteries can be dangerous under certain conditions and can pose a safety hazard. In certain conditions, Lithium batteries can overheat and ignite.

-  When carrying or shipping your Leica product with Lithium batteries onboard a commercial aircraft, you must do so in accordance with the **IATA Dangerous Goods Regulations**.
 -  Leica Geosystems has developed **Guidelines** on “How to carry Leica products” and “How to ship Leica products” with Lithium batteries. Before any transportation of a Leica product, we ask you to consult these guidelines on our web page (<http://www.leica-geosystems.com/dgr>) to ensure that you are in accordance with the IATA Dangerous Goods Regulations and that the Leica products can be transported correctly.
 -  Damaged or defective batteries are prohibited from being carried or transported onboard any aircraft. Therefore, ensure that the condition of any battery is safe for transportation.
-

7.8

General Technical Data of the Instrument

Telescope	Magnification:	30 x
	Free Objective aperture:	40 mm
	Focusing:	1.7 m/5.6 ft to infinity
	Field of view:	1°30'/1.66 gon. 2.7 m at 100 m

Compensator

Angular accuracy instrument ["]	Setting accuracy		Setting range	
	["]	[mgon]	[']	[gon]
1	0.5	0.2	4	0.07
2	0.5	0.2	4	0.07
3	1.0	0.3	4	0.07
5	1.5	0.5	4	0.07

Level

Circular level sensitivity:	6'/2 mm
Electronic level resolution:	2"


Control unit

Display:	VGA (640 x 480 pixels), color TFT, LED backlight, touch screen
Keyboard:	36 keys including 12 function keys and 12 alphanumeric keys, illumination
Angle Display:	360°", 360° decimal, 400 gon, 6400 mil, V %
Distance Display:	m, ft int, ft us, ft int inch, ft us inch
Position:	In both faces, face two is optional
Touch screen:	Toughened film on glass

Instrument Ports

Port	Name	Description
Port 1	Port 1	<ul style="list-style-type: none"> 5 pin LEMO-0 for power, communication, data transfer. This port is located at the base of the instrument.
Port 3	BT	<ul style="list-style-type: none"> Bluetooth module for communication. This port is housed within Communication side cover.
USB	USB host port	<ul style="list-style-type: none"> USB memory stick port for data transfer.
	USB device port	<ul style="list-style-type: none"> Cable connections from USB devices for communication and data transfer.

Instrument Dimensions

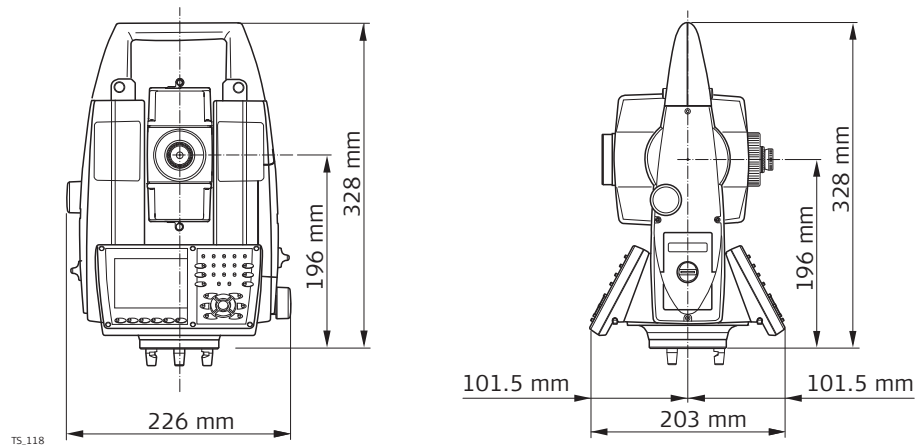

Weight

Instrument:	4.8 - 5.5 kg
Tribrach:	0.8 kg
Internal battery:	0.2 kg

Recording

Data can be recorded onto an SD card or into internal memory.

Type	Capacity [MB]	Number of measurements per MB
SD card	<ul style="list-style-type: none"> 1024 8192 	1750
Internal memory	<ul style="list-style-type: none"> 1000 	1750

Laser plummet

Type:	Visible red laser class 2
Location:	In standing axis of instrument
Accuracy:	Deviation from plumb line: 1.5 mm (2 sigma) at 1.5 m instrument height
Diameter of laser point:	2.5 mm at 1.5 m instrument height

Drives

Type:	Endless horizontal and vertical drives
-------	--

Power

External supply voltage:	Nominal voltage 12.8 V DC, Range 11.5 V-13.5 V
--------------------------	--

Internal Battery

Type:	Li-Ion
Voltage:	7.4 V
Capacity:	GEB222: 6.0 Ah

External Battery

Type:	Li-Ion
Voltage:	13 V
Capacity:	GEB371: 19 Ah

Environmental specifications

Temperature

Type	Operating temperature [°C]	Storage temperature [°C]
All instruments	-20 to +50	-40 to +70
Leica SD cards	-40 to +80	-40 to +80
Battery internal	-20 to +55	-40 to +70
Bluetooth	-30 to +60	-40 to +80


Protection against water, dust and sand

Type	Protection
All instruments	IP55 (IEC 60529)


Humidity

Type	Protection
All instruments	Max 95 % non condensing The effects of condensation are to be effectively counteracted by periodically drying out the instrument.

Arctic model - TS11

Operating range: -35°C to +50°C (-31°F to +122°F)
 To minimise unavoidable slowdown of display performance for the Arctic option connect the external battery. Allow for a short warm-up time.

Reflectors

Type	Additive Constant [mm]
Standard prism, GPR1	0.0
Mini prism, GMP101	+17.5
360° prism, GRZ4 / GRZ122	+23.1
360° Mini prism, GRZ101	+30.0
Reflector tape S, M, L	+34.4
Reflectorless	+34.4
Machine Automation power prism, MPR122  For Machine Control purposes only!	+28.1

Electronic Guide Light EGL

Working range: 5 m to 150 m (15 ft to 500 ft)
 Position accuracy: 5 cm at 100 m (1.97" at 330 ft)

Automatic corrections

The following automatic corrections are made:

- Line of sight error
- Tilting axis error
- Earth curvature
- Circle eccentricity
- Compensator index error
- Vertical index error
- Standing axis tilt
- Refraction

Use of scale correction

By entering a scale correction, reductions proportional to distance can be taken into account.

- Atmospheric correction.
- Reduction to mean sea level.
- Projection distortion.

Atmospheric correction $\Delta D1$

The slope distance displayed is correct if the scale correction in ppm, mm/km, which has been entered corresponds to the atmospheric conditions prevailing at the time of the measurement.

The atmospheric correction includes:

- Adjustments for air pressure
- Air temperature
- Relative humidity


For highest precision distance measurements, the atmospheric correction should be determined with an accuracy of 1 ppm. The following parameters must be redetermined:

- Air temperature to 1 °C
- Air pressure to 3 mbar
- Relative humidity to 20 %

Air humidity

The air humidity influences the distance measurement if the climate is extremely hot and damp.

For high precision measurements, the relative humidity must be measured and entered along with the air pressure and the temperature.

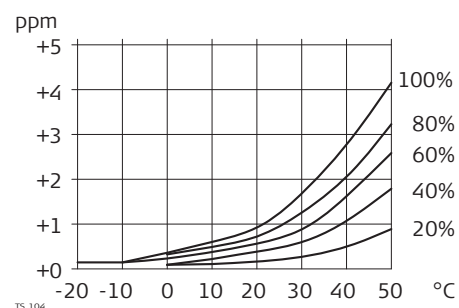Air humidity correction

ppm Air humidity correction [mm/km]
 % Relative humidity [%]
 °C Air temperature [°C]

Index n

Type	Index n	carrier wave [nm]
combined EDM	1.0002863	658

The index n is calculated from the formula of the IAG Resolutions (1999), and is valid for:

Air pressure p: 1013.25 mbar
 Air temperature t: 12 °C
 Relative air humidity h: 60 %

Formulas

Formula for visible red laser

$$\Delta D_1 = 286.338 - \left[\frac{0.29535 \cdot p}{(1 + \alpha \cdot t)} - \frac{4.126 \cdot 10^{-4} \cdot h}{(1 + \alpha \cdot t)} \cdot 10^x \right]$$

002419_002

ΔD_1 Atmospheric correction [ppm]

p Air pressure [mbar]

t Air temperature [°C]

h Relative humidity [%]

$\alpha = \frac{1}{273.15}$

x $(7.5 \cdot t / (237.3 + t)) + 0.7857$

If the basic value of 60 % relative humidity as used by the EDM is retained, the maximum possible error in the calculated atmospheric correction is 2 ppm, 2 mm/km.

Reduction to mean sea level ΔD_2

The values for ΔD_2 are always negative and are derived from the following formula:

$$\Delta D_2 = - \frac{H}{R} \cdot 10^6$$

TS.106

ΔD_2 Reduction to mean sea level [ppm]

H Height of EDM above sea level [m]

R $6.378 \cdot 10^6$ m

Projection distortion ΔD_3

The magnitude of the projection distortion is in accordance with the projection system used in a particular country, for which official tables are generally available. The following formula is valid for cylindrical projections such as that of Gauss-Krüger:

$$\Delta D_3 = \frac{X^2}{2R^2} \cdot 10^6$$

TS.107

ΔD_3 Projection distortion [ppm]


X Easting, distance from projection zero line with the scale factor 1 [km]

R $6.378 \cdot 10^6$ m

In countries where the scale factor is not unity, this formula cannot be directly applied.


Atmospheric corrections °C

Atmospheric corrections in ppm with temperature [°C], air pressure [mb] and height [m] at 60 % relative humidity.

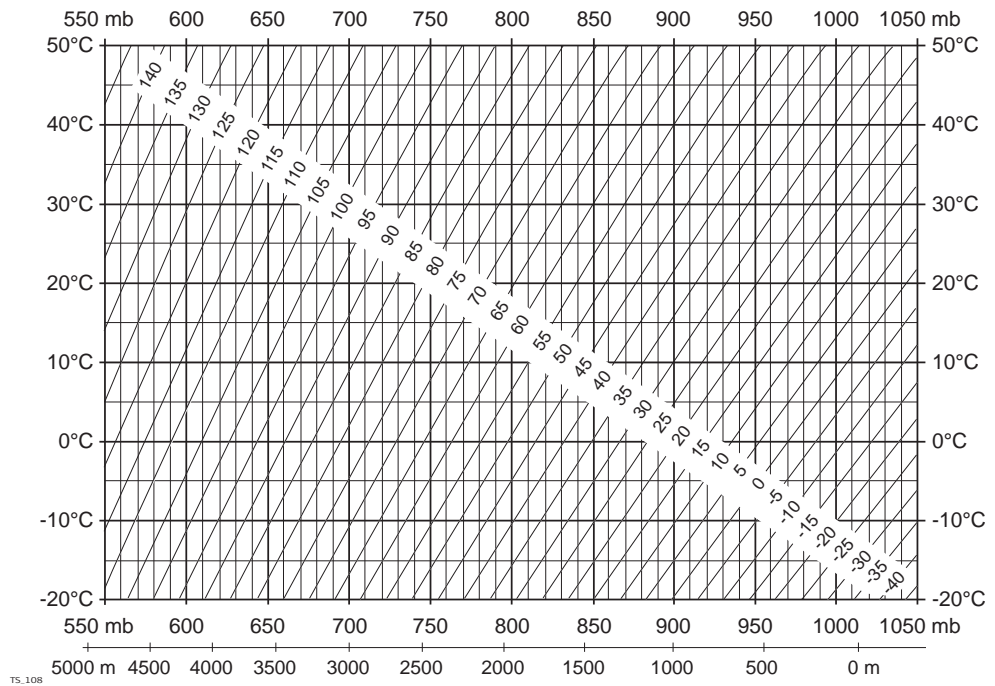


Atmospheric correction °F

Atmospheric corrections in ppm with temperature [°F], air pressure [inch Hg] and height [ft] at 60 % relative humidity.

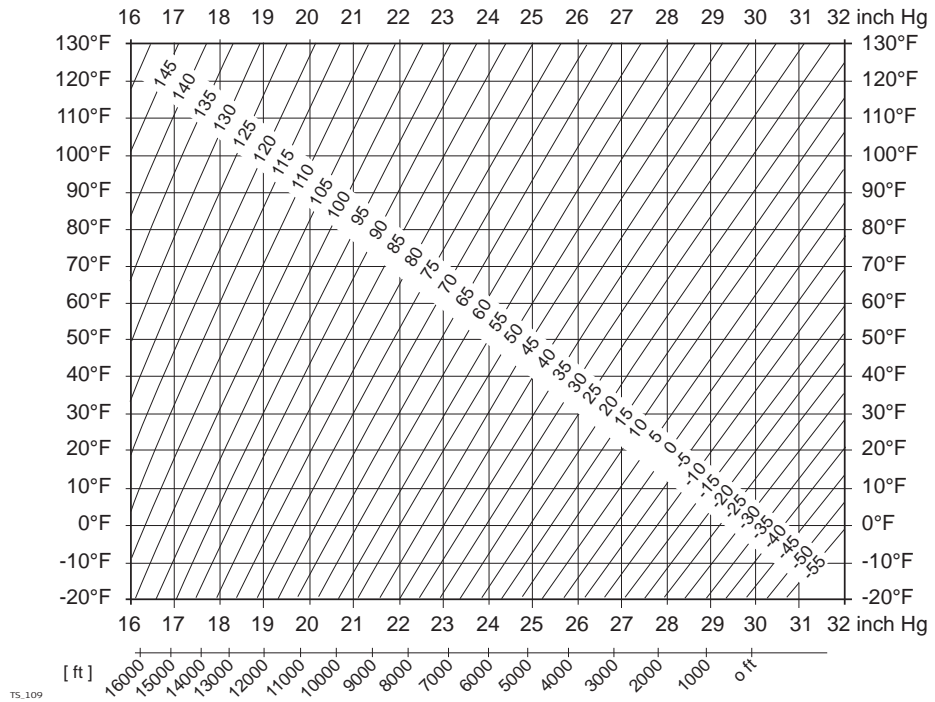

Measurements

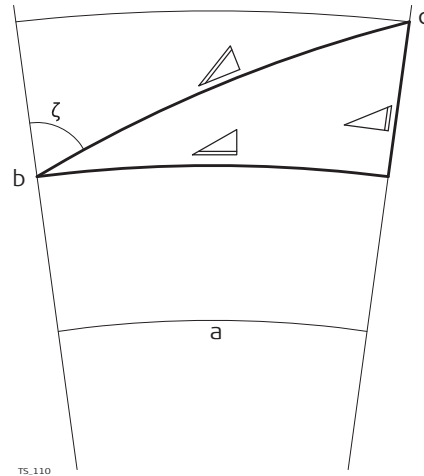

- a) Mean Sea Level
- b) Instrument
- c) Reflector
- ▵ Slope distance
- ▴ Horizontal distance
- ▴ Height difference

Reflector types

The reduction formulas are valid for measurements to all reflector types:

- measurements to prisms, to reflector tape and reflectorless measurements.

Formulas

The instrument calculates the slope distance, horizontal distance, height difference in accordance with the following formulas:

$$\triangle = D_0 \cdot (1 + \text{ppm} \cdot 10^{-6}) + \text{mm} \quad \triangle \text{ Displayed slope distance [m]}$$

TS.111

D_0 Uncorrected distance [m]
 ppm Atmospheric scale correction [mm/km]
 mm Additive constant of the reflector [mm]

$$\triangle = Y - A \cdot X \cdot Y \quad \triangle \text{ Horizontal distance [m]}$$

TS.112

$$\triangle \text{ Height difference [m]}$$

$$Y \triangle * |\sin \zeta|$$

$$X \triangle * \cos \zeta$$

$$\zeta \text{ Vertical circle reading}$$

$$A (1 - k/2)/R = 1.47 * 10^{-7} [\text{m}^{-1}]$$

$$B (1 - k)/2R = 6.83 * 10^{-8} [\text{m}^{-1}]$$

$$k \text{ 0.13 (mean refraction coefficient)}$$

$$R \text{ 6.378 * 10}^6 \text{ m (radius of the earth)}$$

$$\triangle = X + B \cdot Y^2 \quad \triangle \text{ Horizontal distance [m]}$$

TS.113

Earth curvature (1/R) and mean refraction coefficient (k) are automatically taken into account when calculating the horizontal distance and height difference. The calculated horizontal distance relates to the station height and not to the reflector height.

Distance measuring program Averaging

In the distance measuring program Averaging, the following values are displayed:

- D Slope distance as arithmetic mean of all measurements
- s Standard deviation of a single measurement
- n Number of measurements

These values are calculated as follows:

$$\bar{D} = \frac{1}{n} \cdot \sum_{i=1}^n D_i$$

TS.114

\bar{D} Slope distance as arithmetic mean of all measurements

Σ Sum

D_i Single slope distance measurement

n Number of measurements

$$s = \sqrt{\frac{\sum_{i=1}^n (D_i - \bar{D})^2}{n - 1}} = \sqrt{\frac{\sum_{i=1}^n D_i^2 - \frac{1}{n} \left(\sum_{i=1}^n D_i \right)^2}{n - 1}}$$

TS.115

s Standard deviation of a single slope distance measurement

Σ Sum

\bar{D} Slope distance as arithmetic mean of all measurements

D_i Single slope distance measurement

n Number of distance measurements

The standard deviation $s_{\bar{D}}$ of the arithmetic mean of the distance can be calculated as follows:

$$s_{\bar{D}} = \frac{s}{\sqrt{n}}$$

TS.116

$s_{\bar{D}}$ Standard deviation of the arithmetic mean of the distance

s Standard deviation of a single measurement

n Number of measurements

Software Licence Agreement

This product contains software that is preinstalled on the product, or that is supplied to you on a data carrier medium, or that can be downloaded by you online according to prior authorisation from Leica Geosystems. Such software is protected by copyright and other laws and its use is defined and regulated by the Leica Geosystems Software Licence Agreement, which covers aspects such as, but not limited to, Scope of the Licence, Warranty, Intellectual Property Rights, Limitation of Liability, Exclusion of other Assurances, Governing Law and Place of Jurisdiction. Please make sure, that at any time you fully comply with the terms and conditions of the Leica Geosystems Software Licence Agreement.

Such agreement is provided together with all products and can also be referred to and downloaded at the Leica Geosystems home page at <http://www.leica-geosystems.com/swlicense> or collected from your Leica Geosystems distributor.

You must not install or use the software unless you have read and accepted the terms and conditions of the Leica Geosystems Software Licence Agreement. Installation or use of the software or any part thereof, is deemed to be an acceptance of all the terms and conditions of such Licence Agreement. If you do not agree to all or some of the terms of such Licence Agreement, you must not download, install or use the software and you must return the unused software together with its accompanying documentation and the purchase receipt to the distributor from whom you purchased the product within ten (10) days of purchase to obtain a full refund of the purchase price.

Open Source Information

The software on the product may contain copyright-protected software that is licensed under various open source licences.

Copies of the corresponding licences

- are provided together with the product (for example in the About panel of the software)
- can be downloaded on <http://opensource.leica-geosystems.com>

If foreseen in the corresponding open source licence, you may obtain the corresponding source code and other related data on <http://opensource.leica-geosystems.com>.

Contact opensource@leica-geosystems.com in case you need additional information.

796729-4.0.0en

Original text

Published in Switzerland

© 2015 Leica Geosystems AG, Heerbrugg, Switzerland

Leica Geosystems AG

Heinrich-Wild-Strasse

CH-9435 Heerbrugg

Switzerland

Phone +41 71 727 31 31

www.leica-geosystems.com

- when it has to be **right**

Leica
Geosystems